



10. Camshaft Position Sensor

A: REMOVAL AND INSTALLATION


- 1) Disconnect battery ground cable.

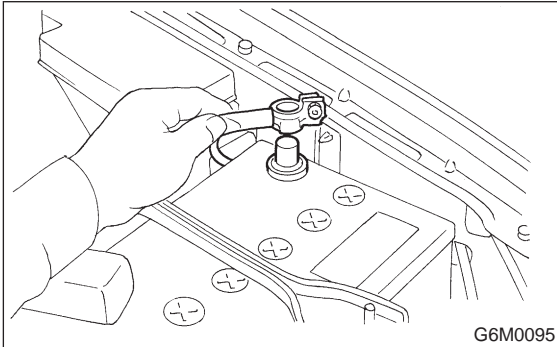


- 2) Disconnect connector from camshaft position sensor.

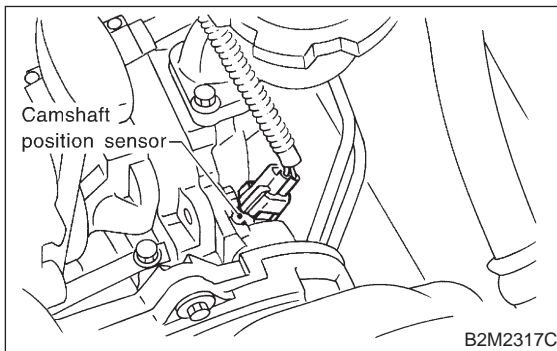


- 3) Remove bolt which installs camshaft position sensor to camshaft position sensor support.

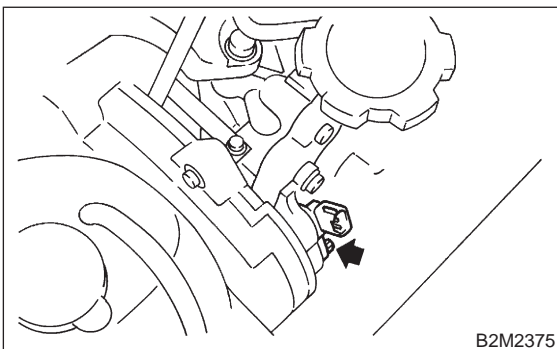

- 4) Remove bolt which installs camshaft position sensor support to camshaft cap LH.

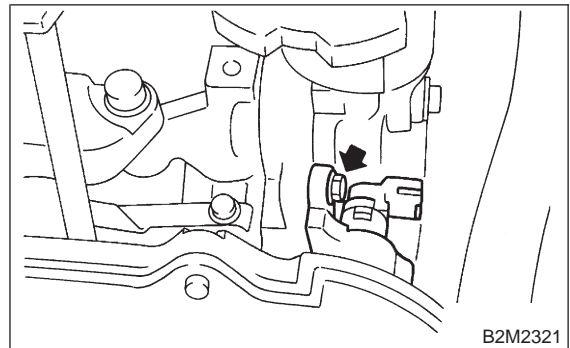

- 5) Remove camshaft position sensor and camshaft position sensor support as a unit.
6) Remove camshaft position sensor itself.

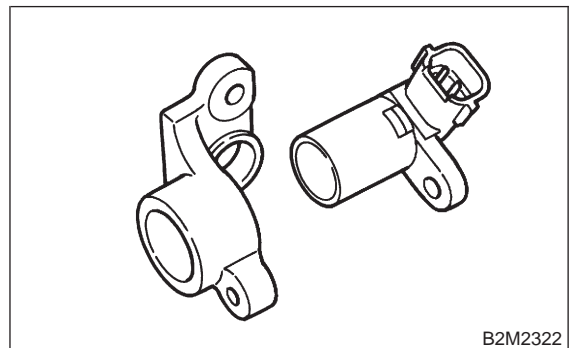

- 7) Installation is in the reverse order of removal.

Tightening torque:

Camshaft position sensor support;

$6.4 \pm 0.5 \text{ N}\cdot\text{m}$ ($0.65 \pm 0.05 \text{ kg}\cdot\text{m}$, $4.7 \pm 0.4 \text{ ft}\cdot\text{lb}$)

Camshaft position sensor;

$6.4 \pm 0.5 \text{ N}\cdot\text{m}$ ($0.65 \pm 0.05 \text{ kg}\cdot\text{m}$, $4.7 \pm 0.4 \text{ ft}\cdot\text{lb}$)