

1. Precaution

A: SUPPLEMENTAL RESTRAINT SYSTEM "AIRBAG"

Airbag system wiring harness is routed near the instrument panel, heater unit, blower motor and control unit.

CAUTION:

- All Airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuit.
- Be careful not to damage Airbag system wiring harness when servicing the instrument panel, heater unit, blower motor and control unit.

2. Heater Unit


A: REMOVAL AND INSTALLATION

- 1) Disconnect GND cable from battery.
- 2) Remove heater hoses (inlet, outlet) in engine compartment.

NOTE:

Drain as much coolant from heater unit as possible, and plug disconnected hose with cloth.
<Ref. to 2-5 [W200].>

- 3) Remove instrument panel.
<Ref. to 5-4 [W1A0].>
- 4) Remove steering support beam.
<Ref. to 5-1 [C600].>
- 5) Remove cooling unit.
<Ref. to 4-7 [W14A0].>
- 6) Remove heater unit.

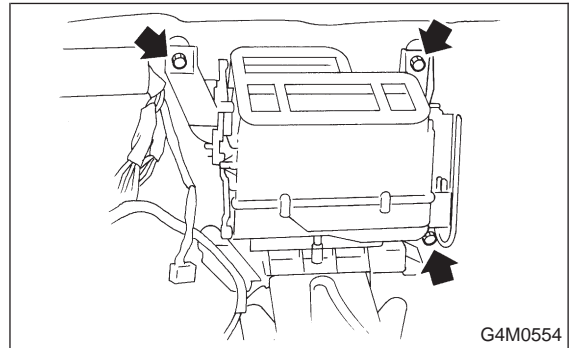

- 7) Installation is in the reverse order of removal.

Fitted length of heater hose over pipe:

27.5 ± 2.5 mm (1.083 ± 0.098 in)

- 8) Pour coolant.
<Ref. to 2-5 [W200].>