

**WIRING SYSTEM SECTION****WIRING SYSTEM****WI**

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.



# WIRING SYSTEM

WI

	Page
1. Basic Diagnostics Procedure .....	3
2. Working Precautions .....	16
3. Super Multiple Junction (SMJ) .....	17
4. Power Supply Routing.....	19
5. Ground Distribution .....	34
6. Airbag System.....	48
7. Air Conditioning System.....	55
8. Anti-lock Brake System .....	64
9. A/T Control System .....	71
10. Audio System .....	82
11. Charging System.....	87
12. Combination Meter .....	90
13. Cruise Control System .....	94
14. Door Lock System.....	97
15. Engine Coolant Temperature Gauge System .....	102
16. Engine Electrical System .....	105
17. Fuel Gauge System .....	164
18. Full-Time Dual-Range System .....	167
19. Front Accessory Power Supply System .....	170
20. Headlight Beam Leveler System.....	171
21. Horn System .....	172
22. Immobilizer System.....	173
23. Keyless Entry System .....	178
24. Back-up Light System .....	185
25. Clearance Light and Illumination Light System .....	186
26. Front Fog Light System.....	196
27. Headlight System .....	200
28. In Compartment Light System.....	203
29. Stop Light System.....	208
30. Turn Signal Light and Hazard Light System.....	209
31. Oil Pressure Warning Light System .....	214
32. Outside Temperature Display System .....	217
33. Parking Brake and Brake Fluid Level Warning System .....	220
34. Power Window System .....	223
35. Radiator Fan System .....	232
36. Rear Fog Light System .....	235
37. Rear Window Defogger System .....	239
38. Remote Controlled Rearview Mirror System.....	242
39. Seat Belt Warning System .....	245
40. Starter System .....	248
41. Sunroof System.....	251
42. Wiper and Washer System (Front).....	252
43. Wiper and Washer System (Rear) .....	255

44.	Overall Systems .....	258
45.	Front Wiring Harness .....	260
46.	Bulkhead Wiring Harness (In Engine Room) .....	266
47.	Bulkhead Wiring Harness (In Compartment) .....	274
48.	Engine Wiring Harness and Transmission Cord .....	280
49.	Instrument Panel Wiring Harness .....	286
50.	Rear Wiring Harness, Bulkhead wiring Harness, Roof Cord and Fuel Tank Cord .....	290
51.	Door Cord.....	294
52.	Rear Wiring Harness and Trunk Lid Cord .....	298
53.	Rear Wiring Harness and Rear Gate Cord .....	300


**28.In Compartment Light System**

**A: SCHEMATIC**

# IN COMPARTMENT LIGHT SYSTEM


## WIRING SYSTEM

### 1. LHD MODEL

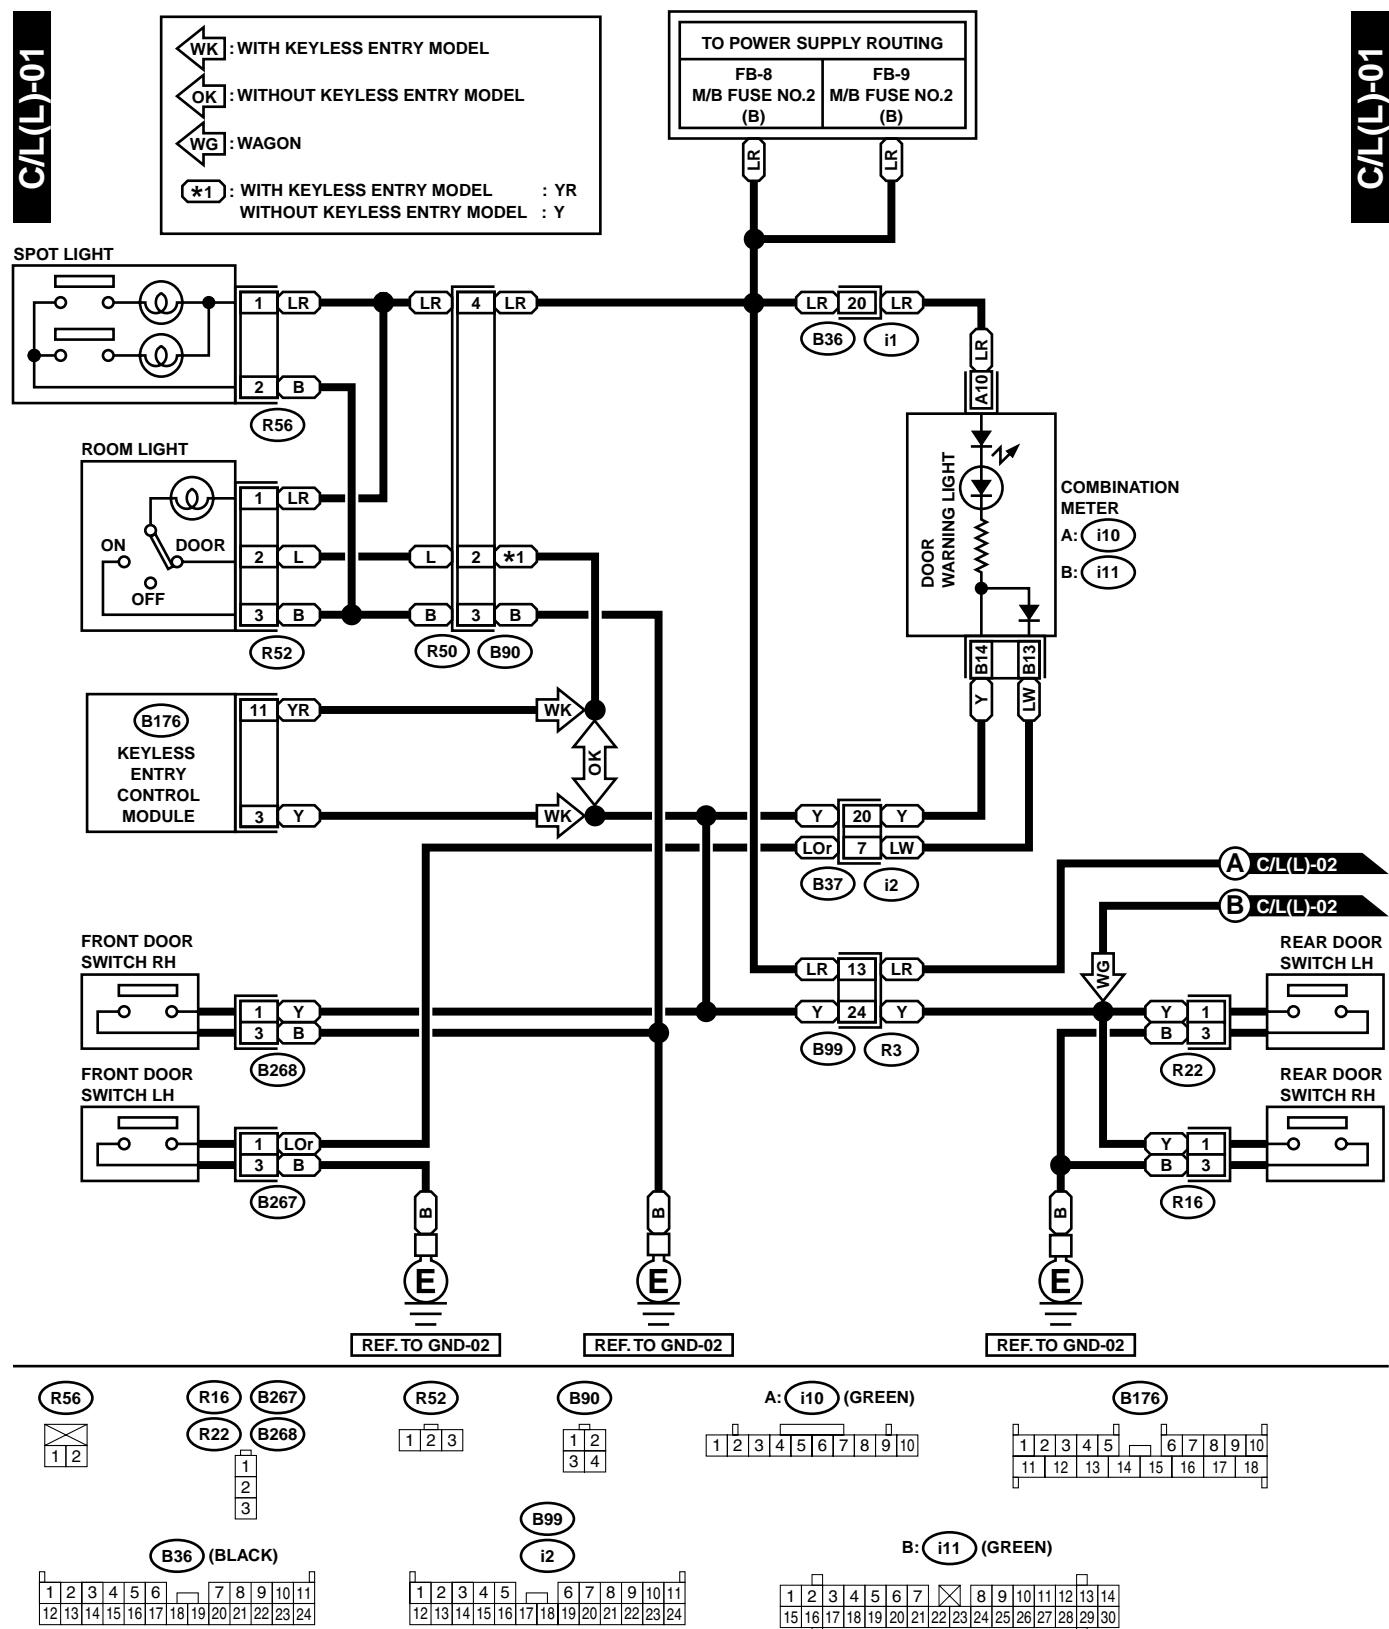

# IN COMPARTMENT LIGHT SYSTEM

WIRING SYSTEM

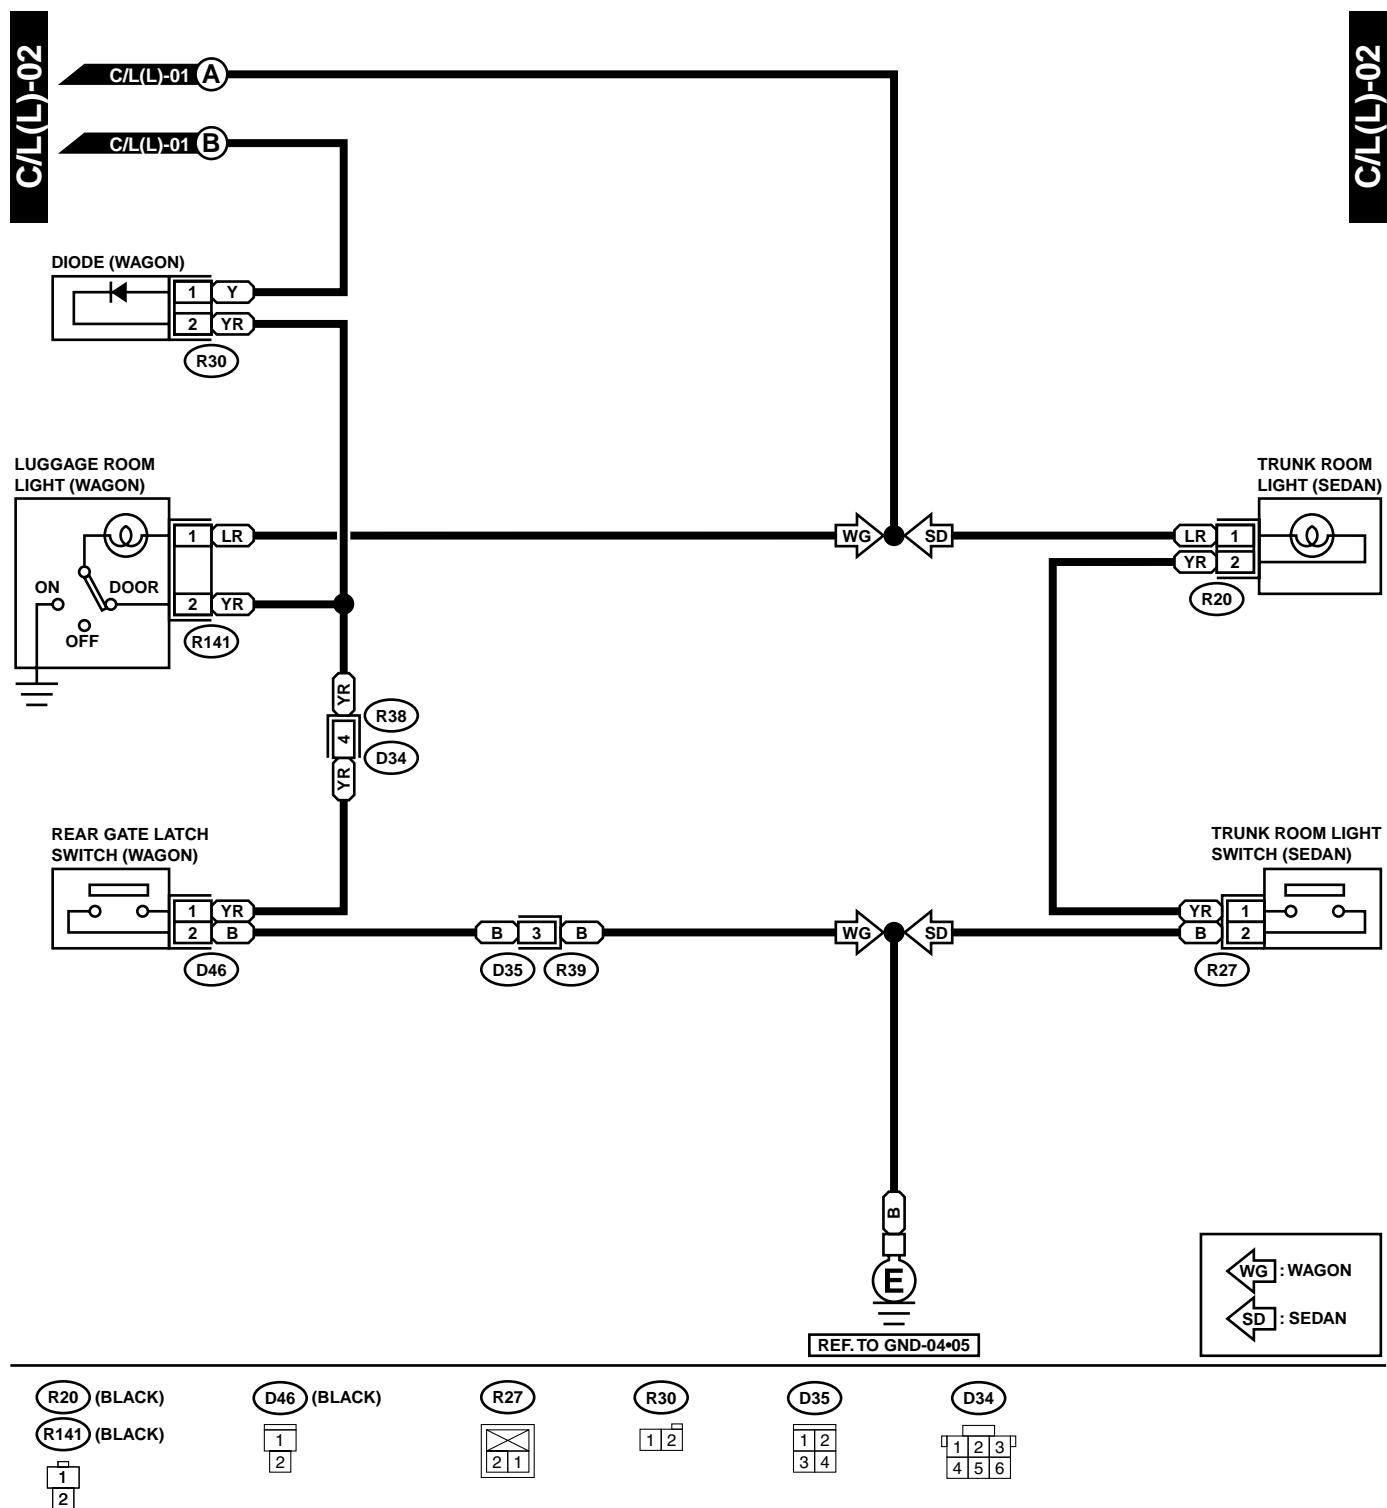


GL21-20B

# IN COMPARTMENT LIGHT SYSTEM

## WIRING SYSTEM


### 2. RHD MODEL

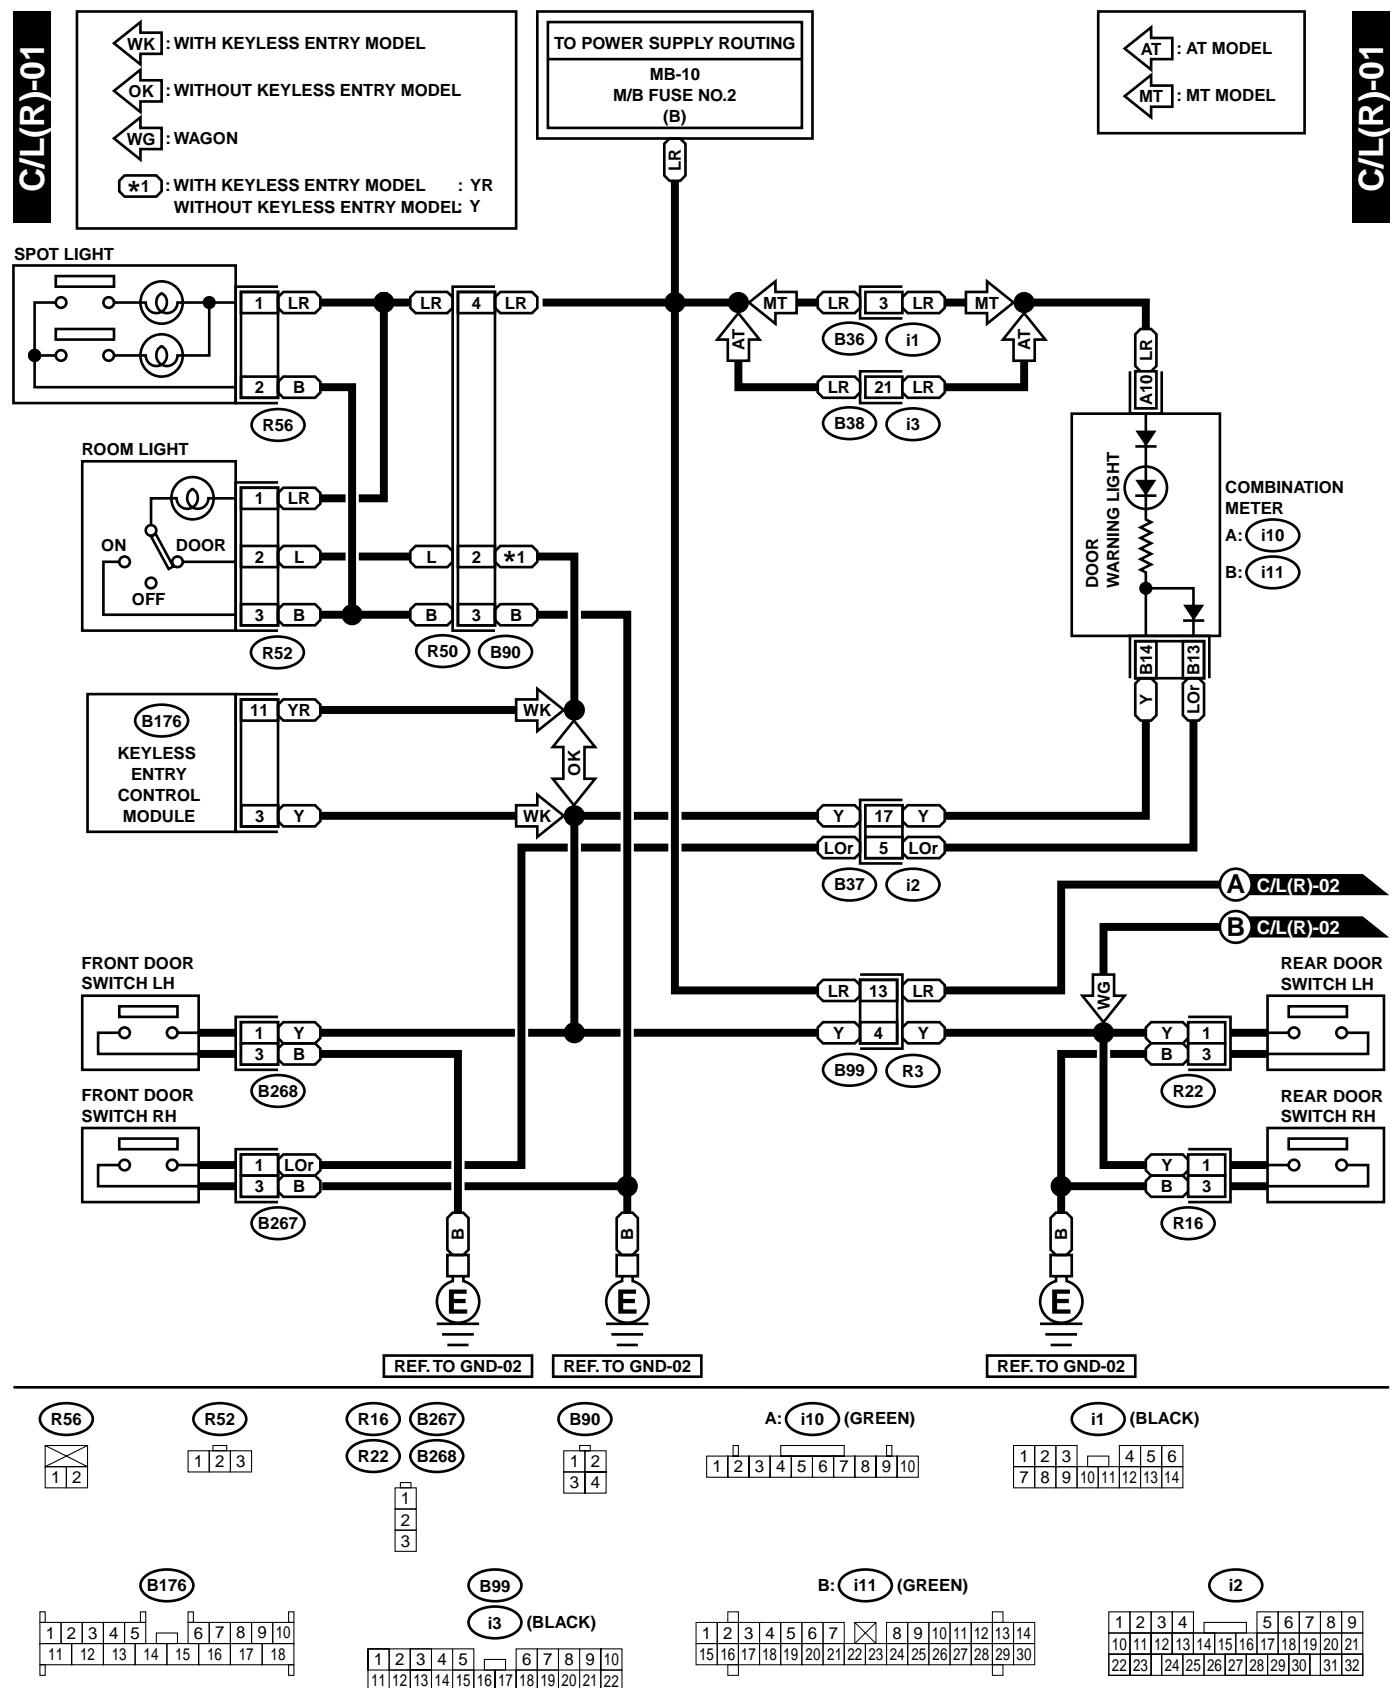

GR21-20A

# IN COMPARTMENT LIGHT SYSTEM

WIRING SYSTEM

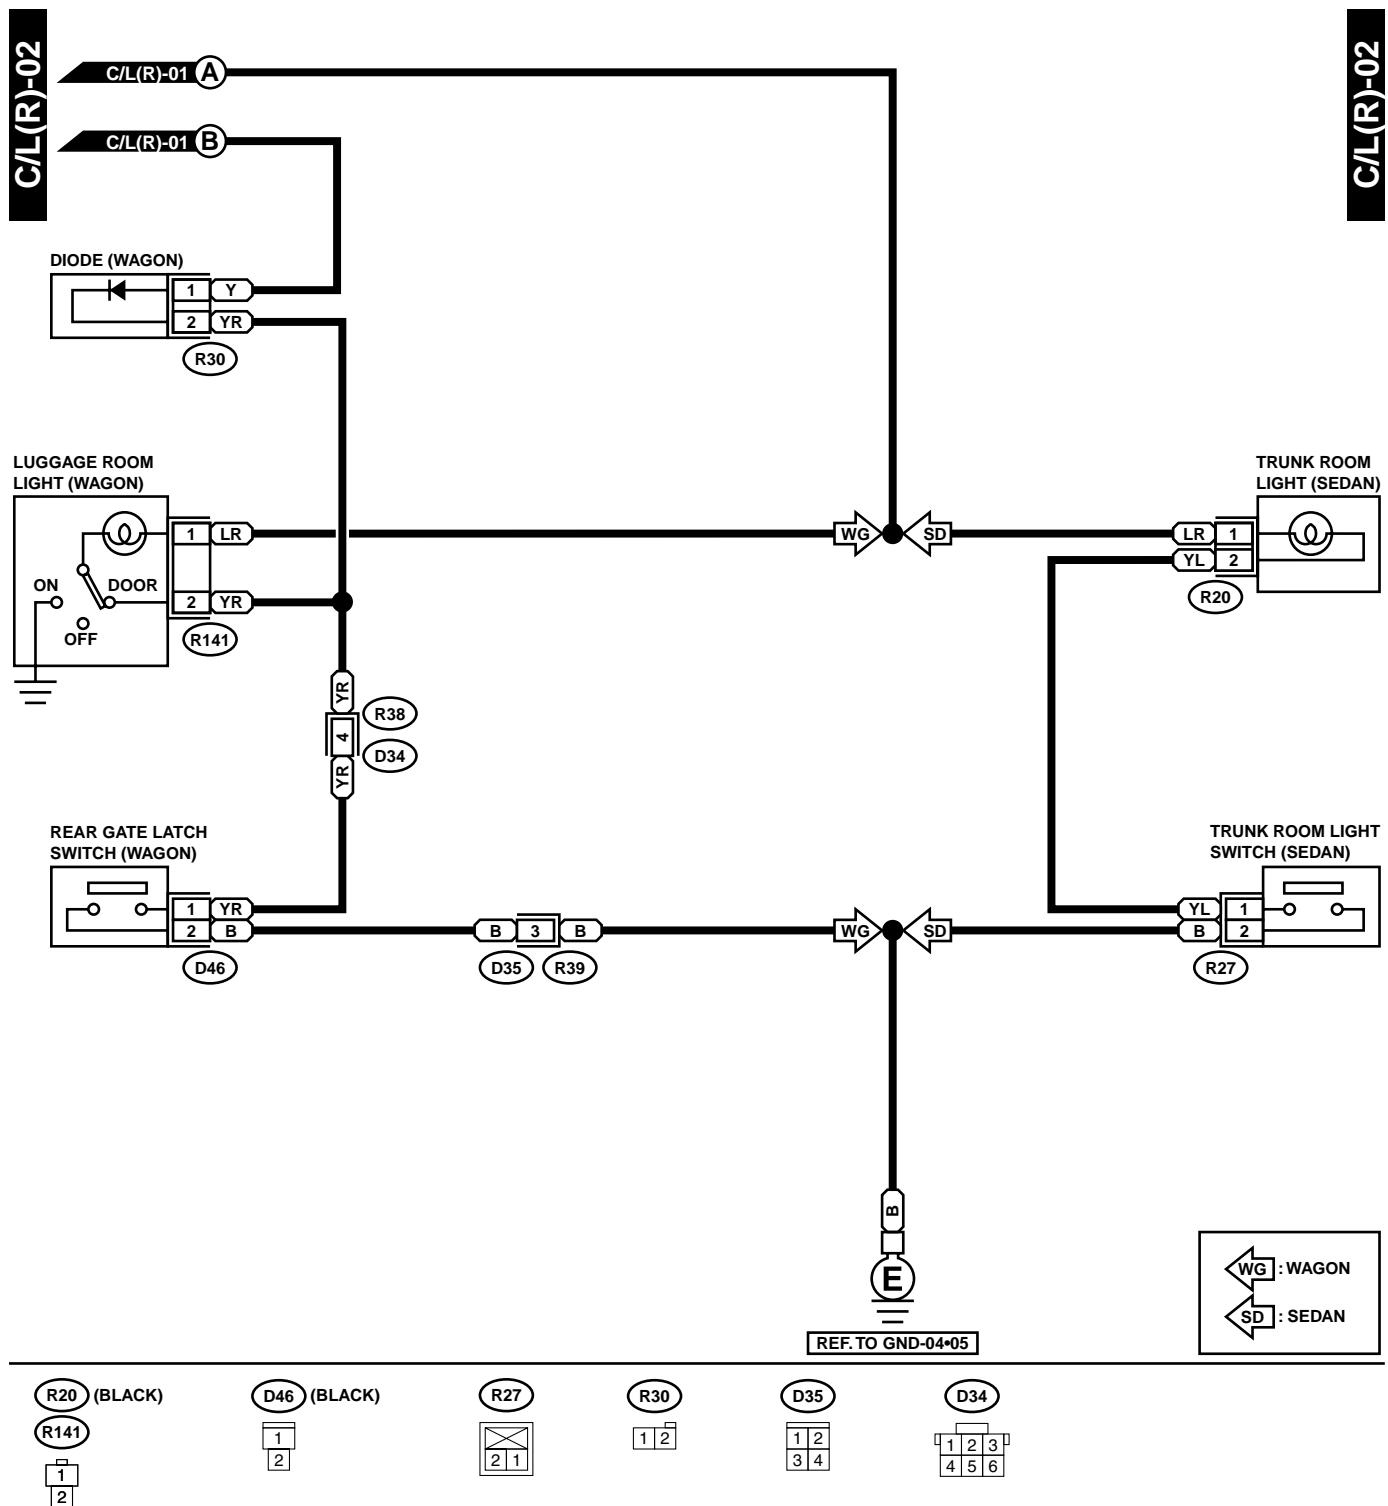


GR21-20B

# STOP LIGHT SYSTEM

WIRING SYSTEM

## 29. Stop Light System

### A: SCHEMATIC

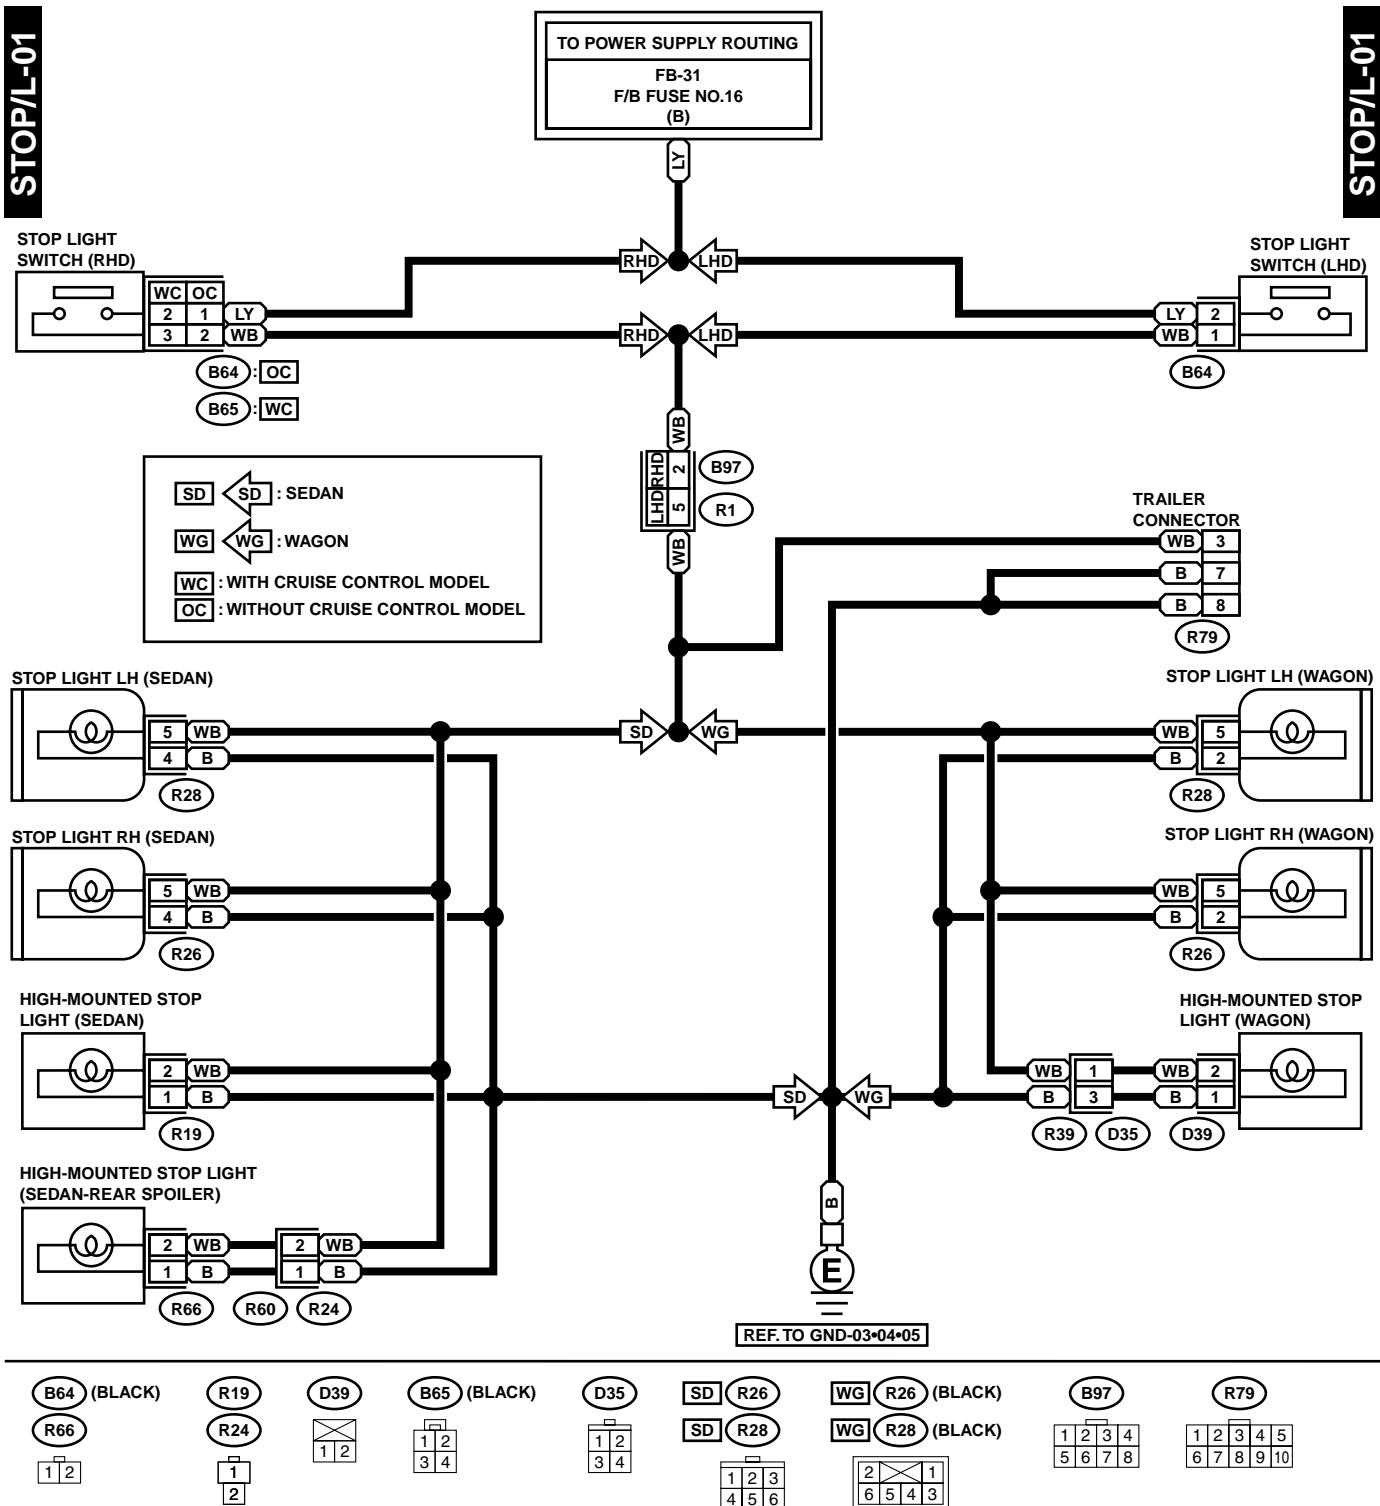




## **30.Turn Signal Light and Hazard Light System**

### **A: SCHEMATIC**

# TURN SIGNAL LIGHT AND HAZARD LIGHT SYSTEM


## WIRING SYSTEM

### 1. LHD MODEL

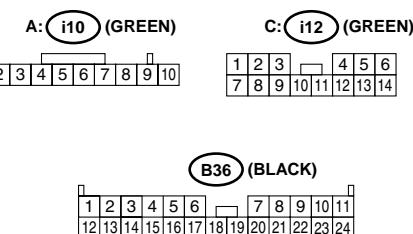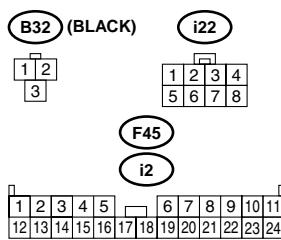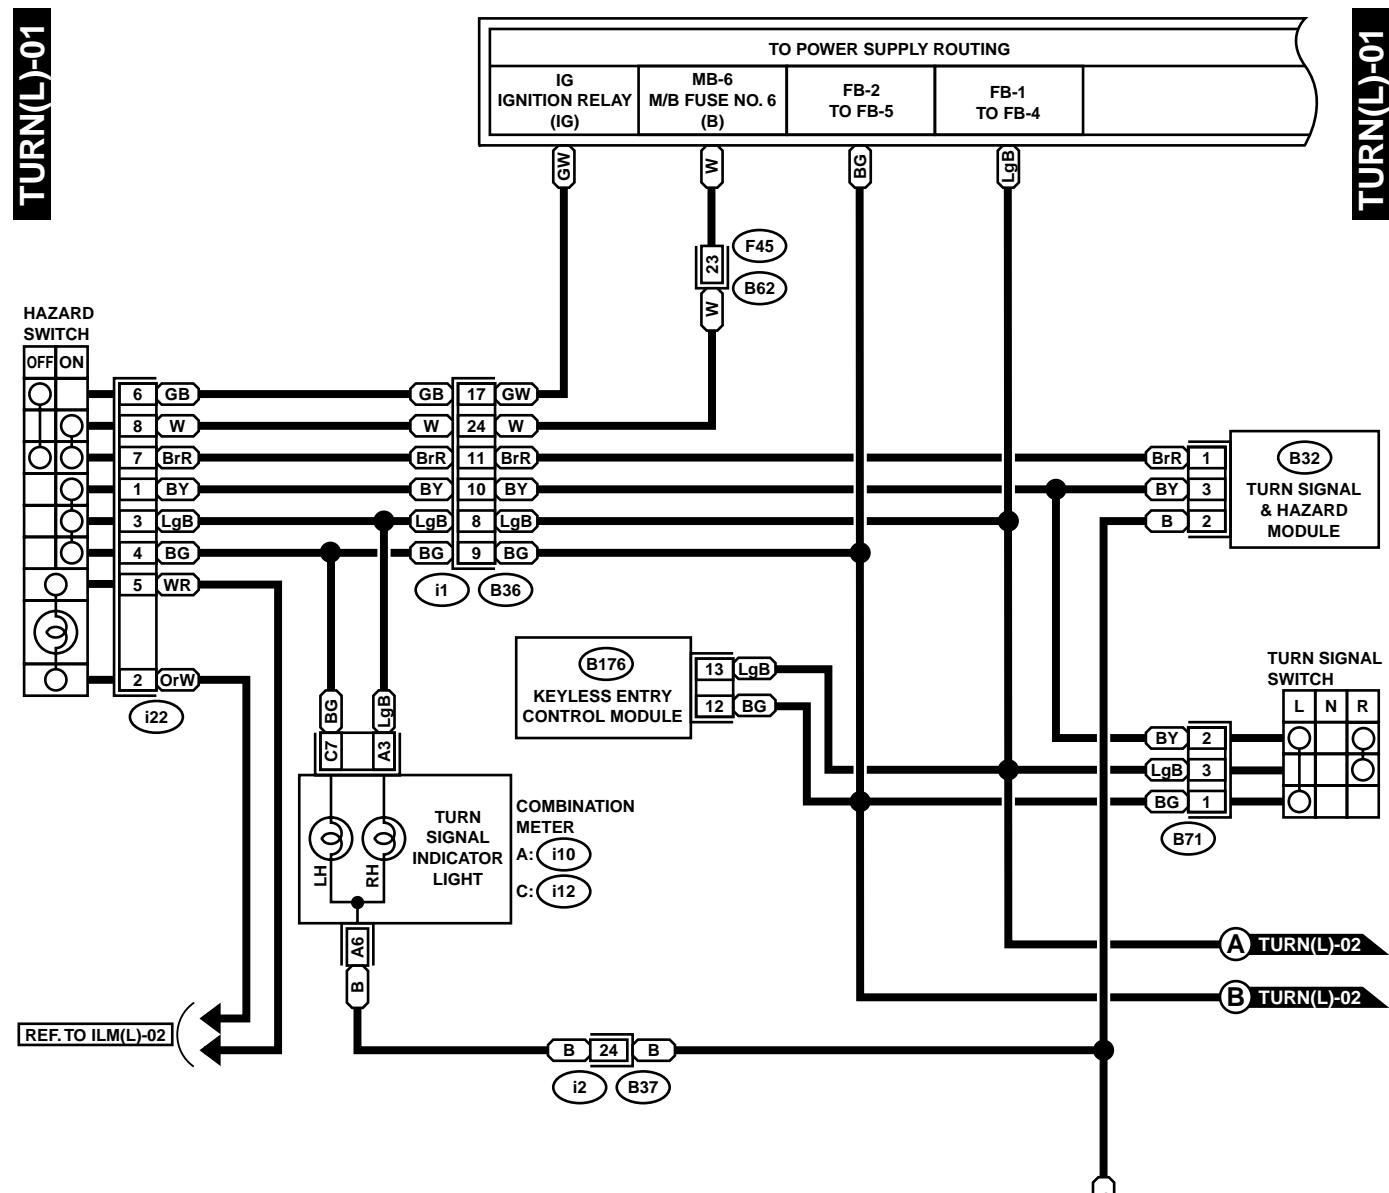

# TURN SIGNAL LIGHT AND HAZARD LIGHT SYSTEM







WIRING SYSTEM

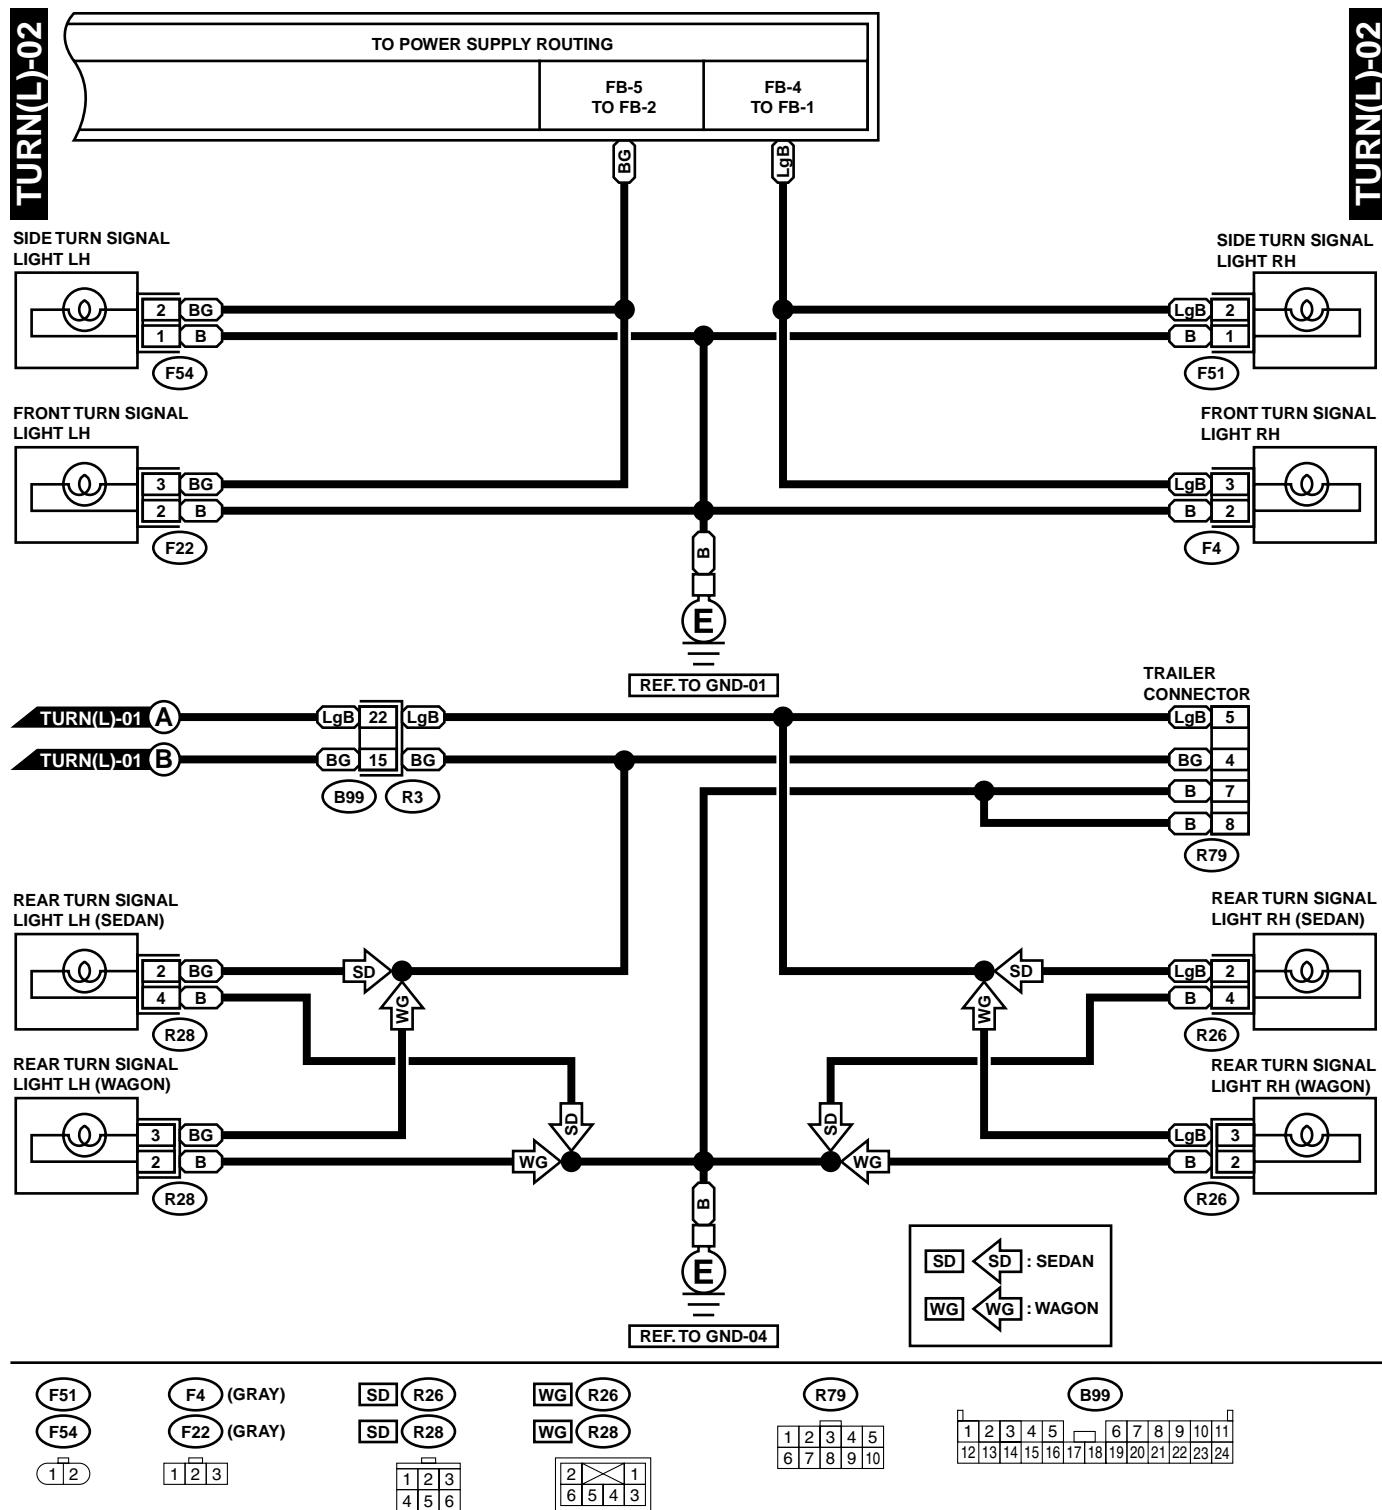

# TURN SIGNAL LIGHT AND HAZARD LIGHT SYSTEM


## WIRING SYSTEM
     
### 2. RHD MODEL

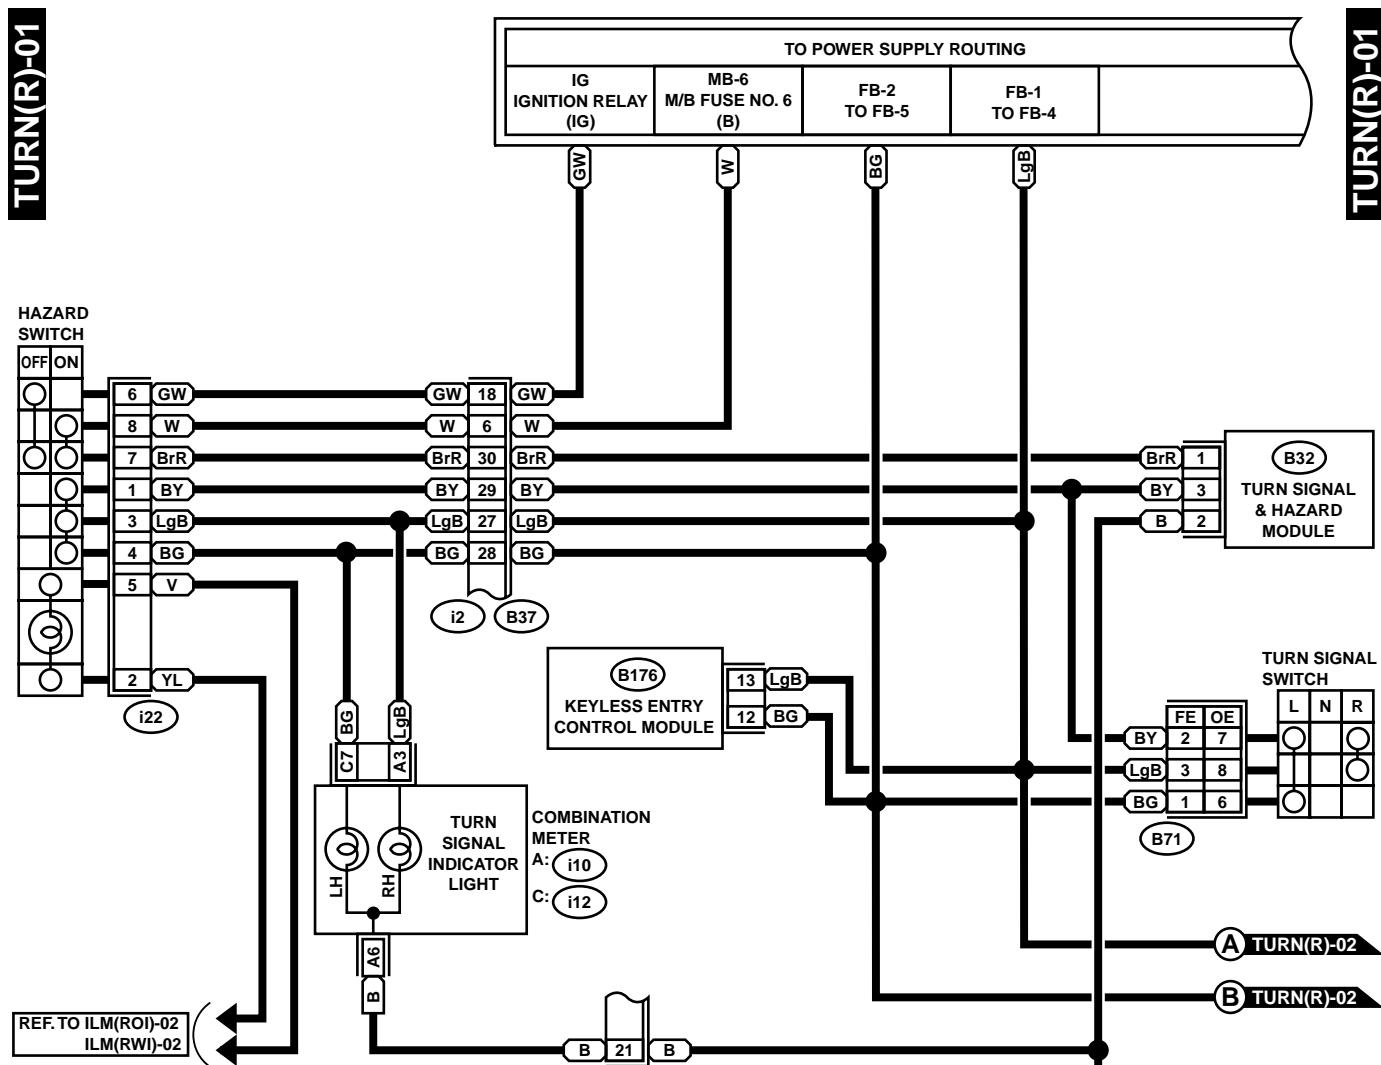

# TURN SIGNAL LIGHT AND HAZARD LIGHT SYSTEM

WIRING SYSTEM

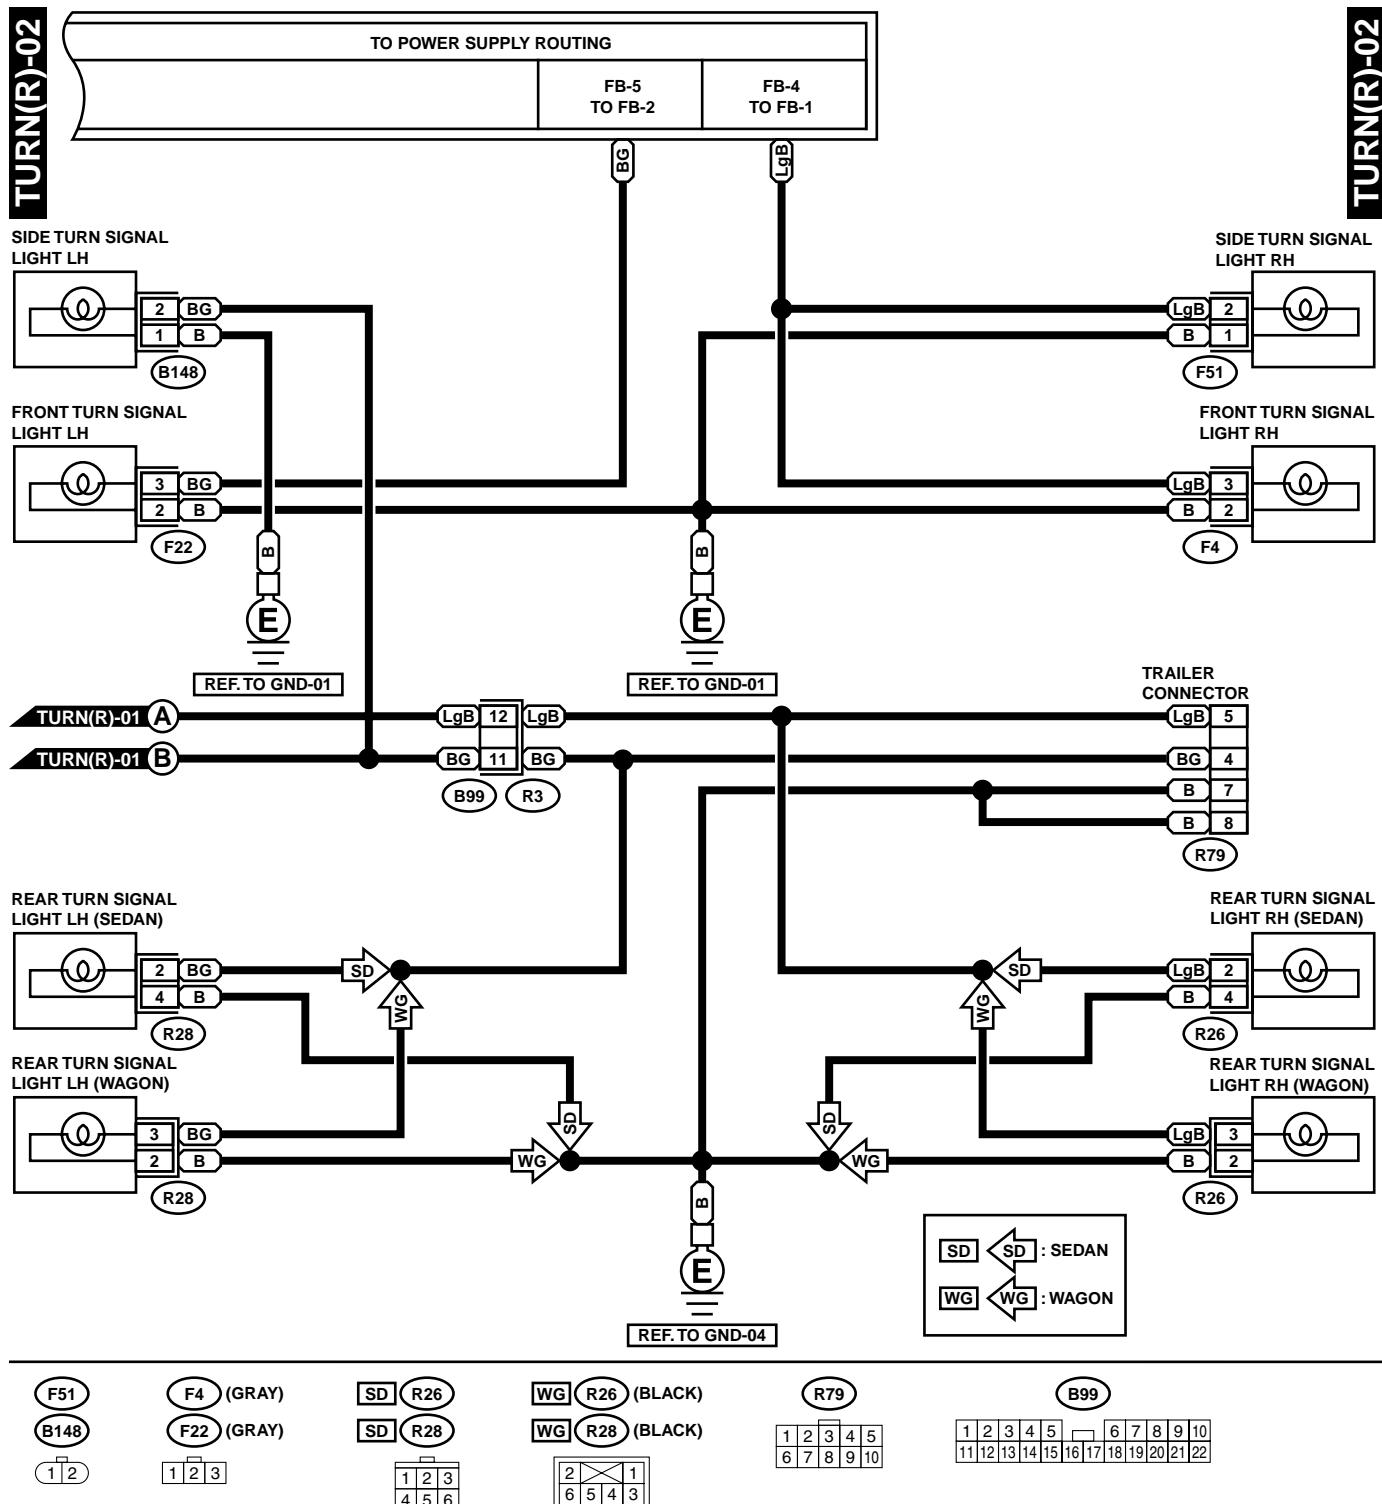

GR26-20B

# OIL PRESSURE WARNING LIGHT SYSTEM

## WIRING SYSTEM

---



### 31.Oil Pressure Warning Light System

#### A: SCHEMATIC

# OIL PRESSURE WARNING LIGHT SYSTEM



WIRING SYSTEM

## 1. LHD MODEL

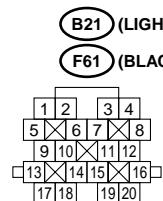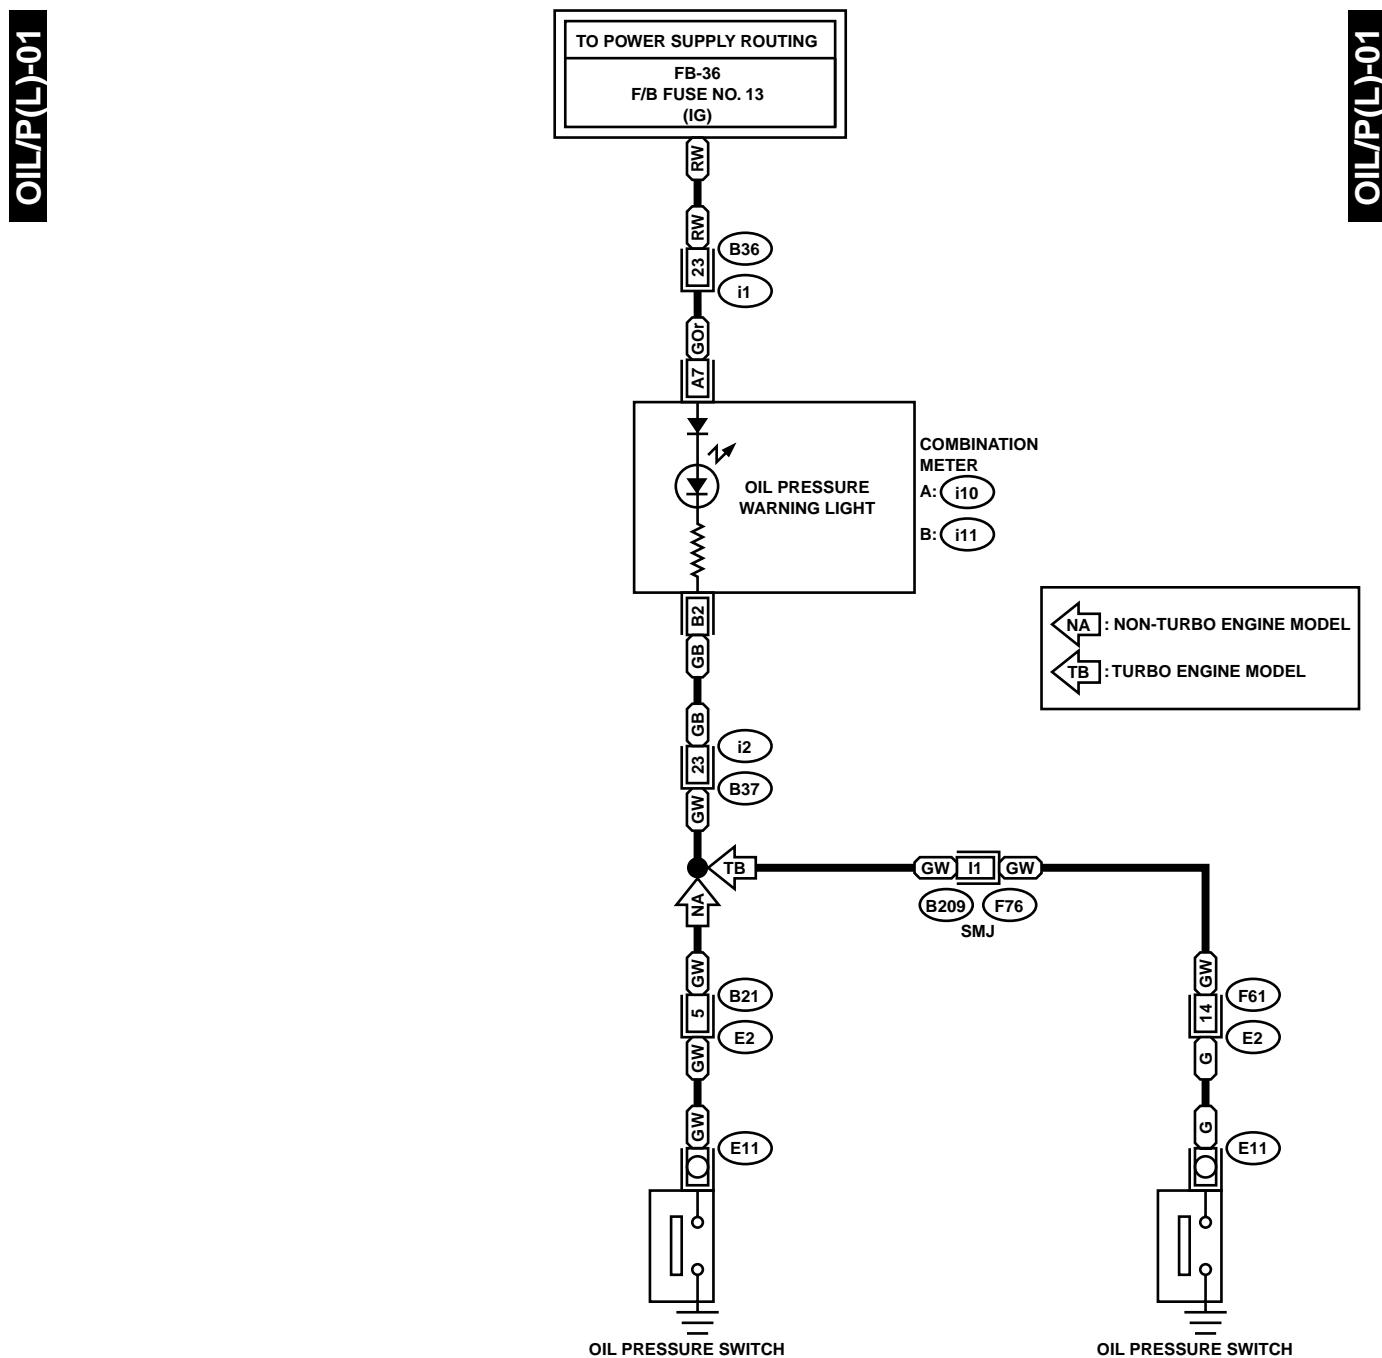



**B: i11 (GREEN)**

  **A: i10 (GREEN)**



**i2**

 
 
**B36 (BLACK)**



# OIL PRESSURE WARNING LIGHT SYSTEM

## WIRING SYSTEM
 
### 2. RHD MODEL

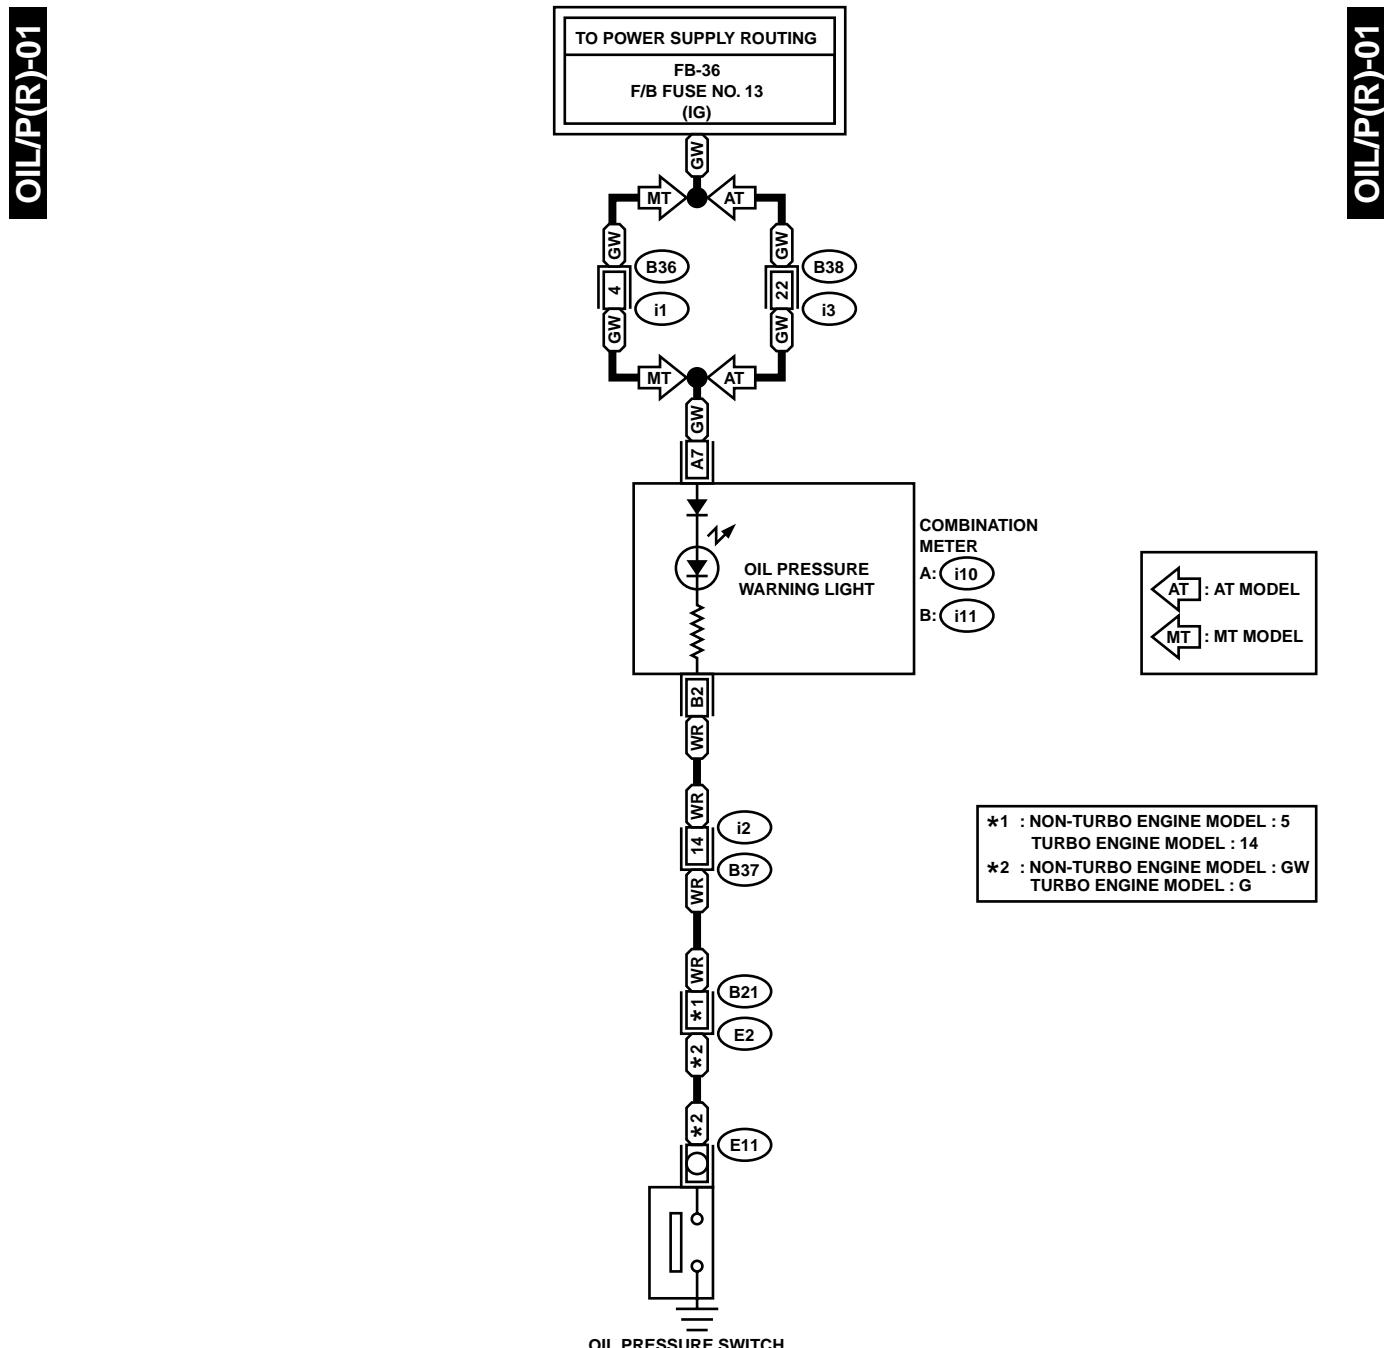



B21 (LIGHT GRAY)



B: i11 (GREEN)



  A: i10 (GREEN)



GR66-20


**32.Outside Temperature Display System**

**A: SCHEMATIC**

# OUTSIDE TEMPERATURE DISPLAY SYSTEM

## WIRING SYSTEM


### 1. LHD MODEL

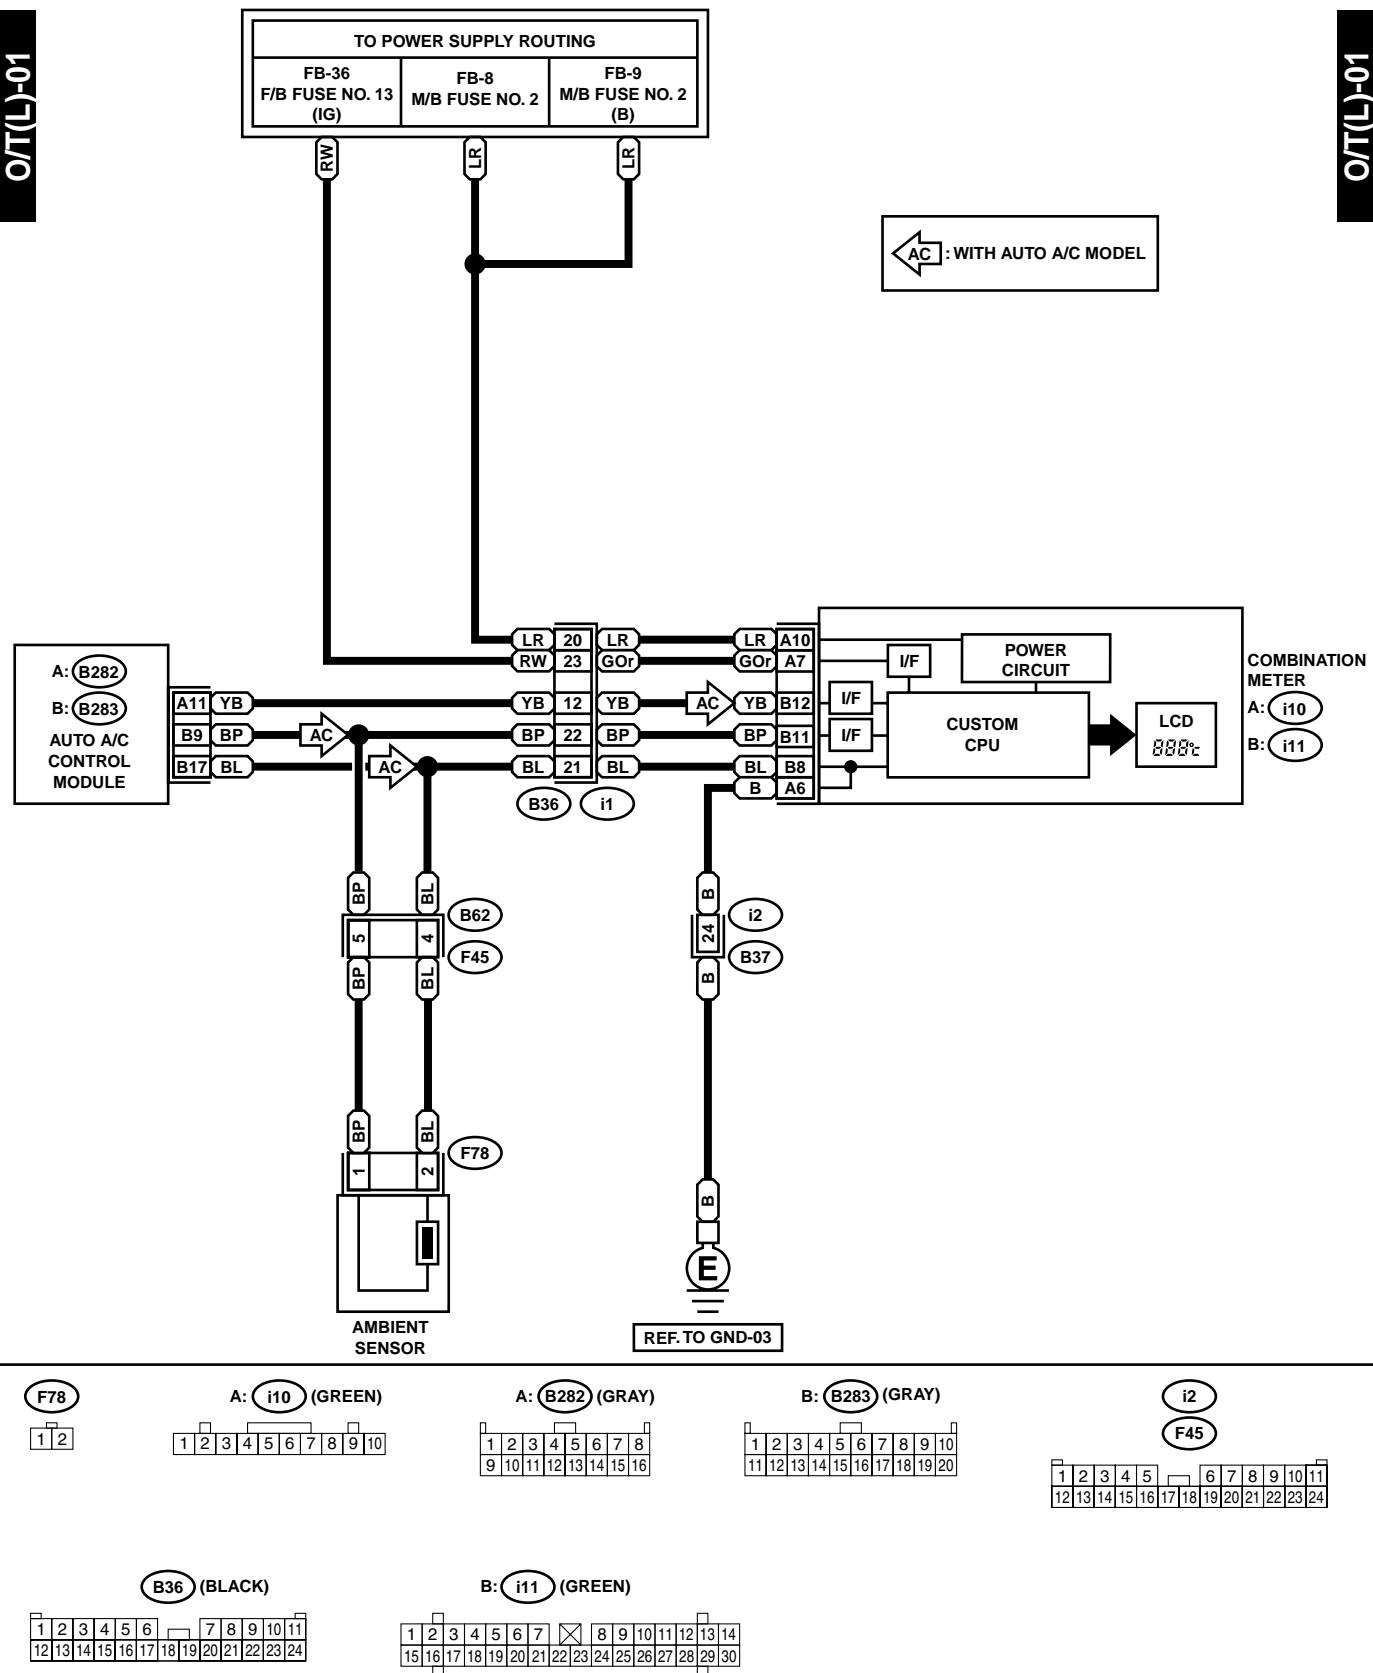

# OUTSIDE TEMPERATURE DISPLAY SYSTEM

WIRING SYSTEM

## 2. RHD MODEL

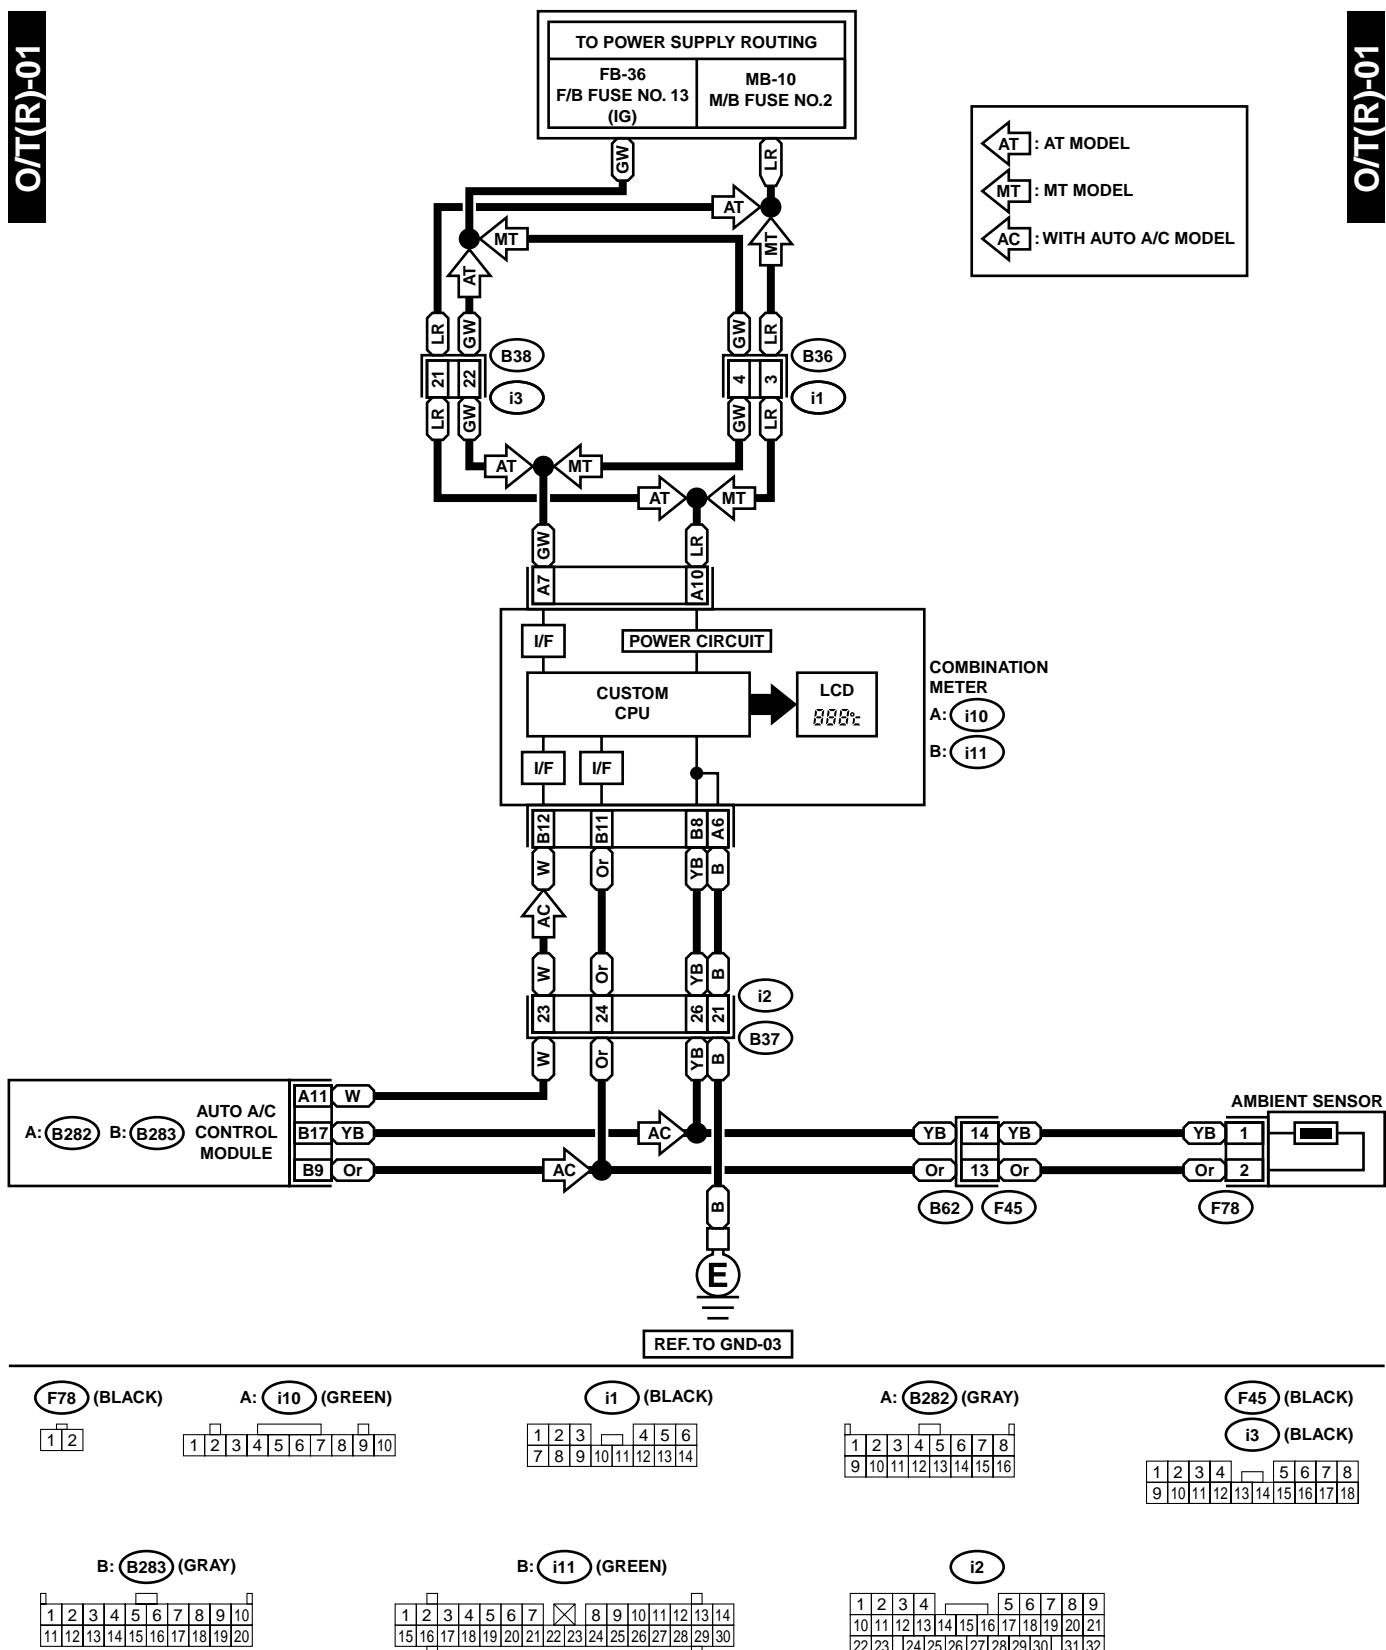

GR96-20


## **33.Parking Brake and Brake Fluid Level Warning System**

### **A: SCHEMATIC**

# PARKING BRAKE AND BRAKE FLUID LEVEL WARNING SYSTEM

## WIRING SYSTEM


### 1. LHD MODEL

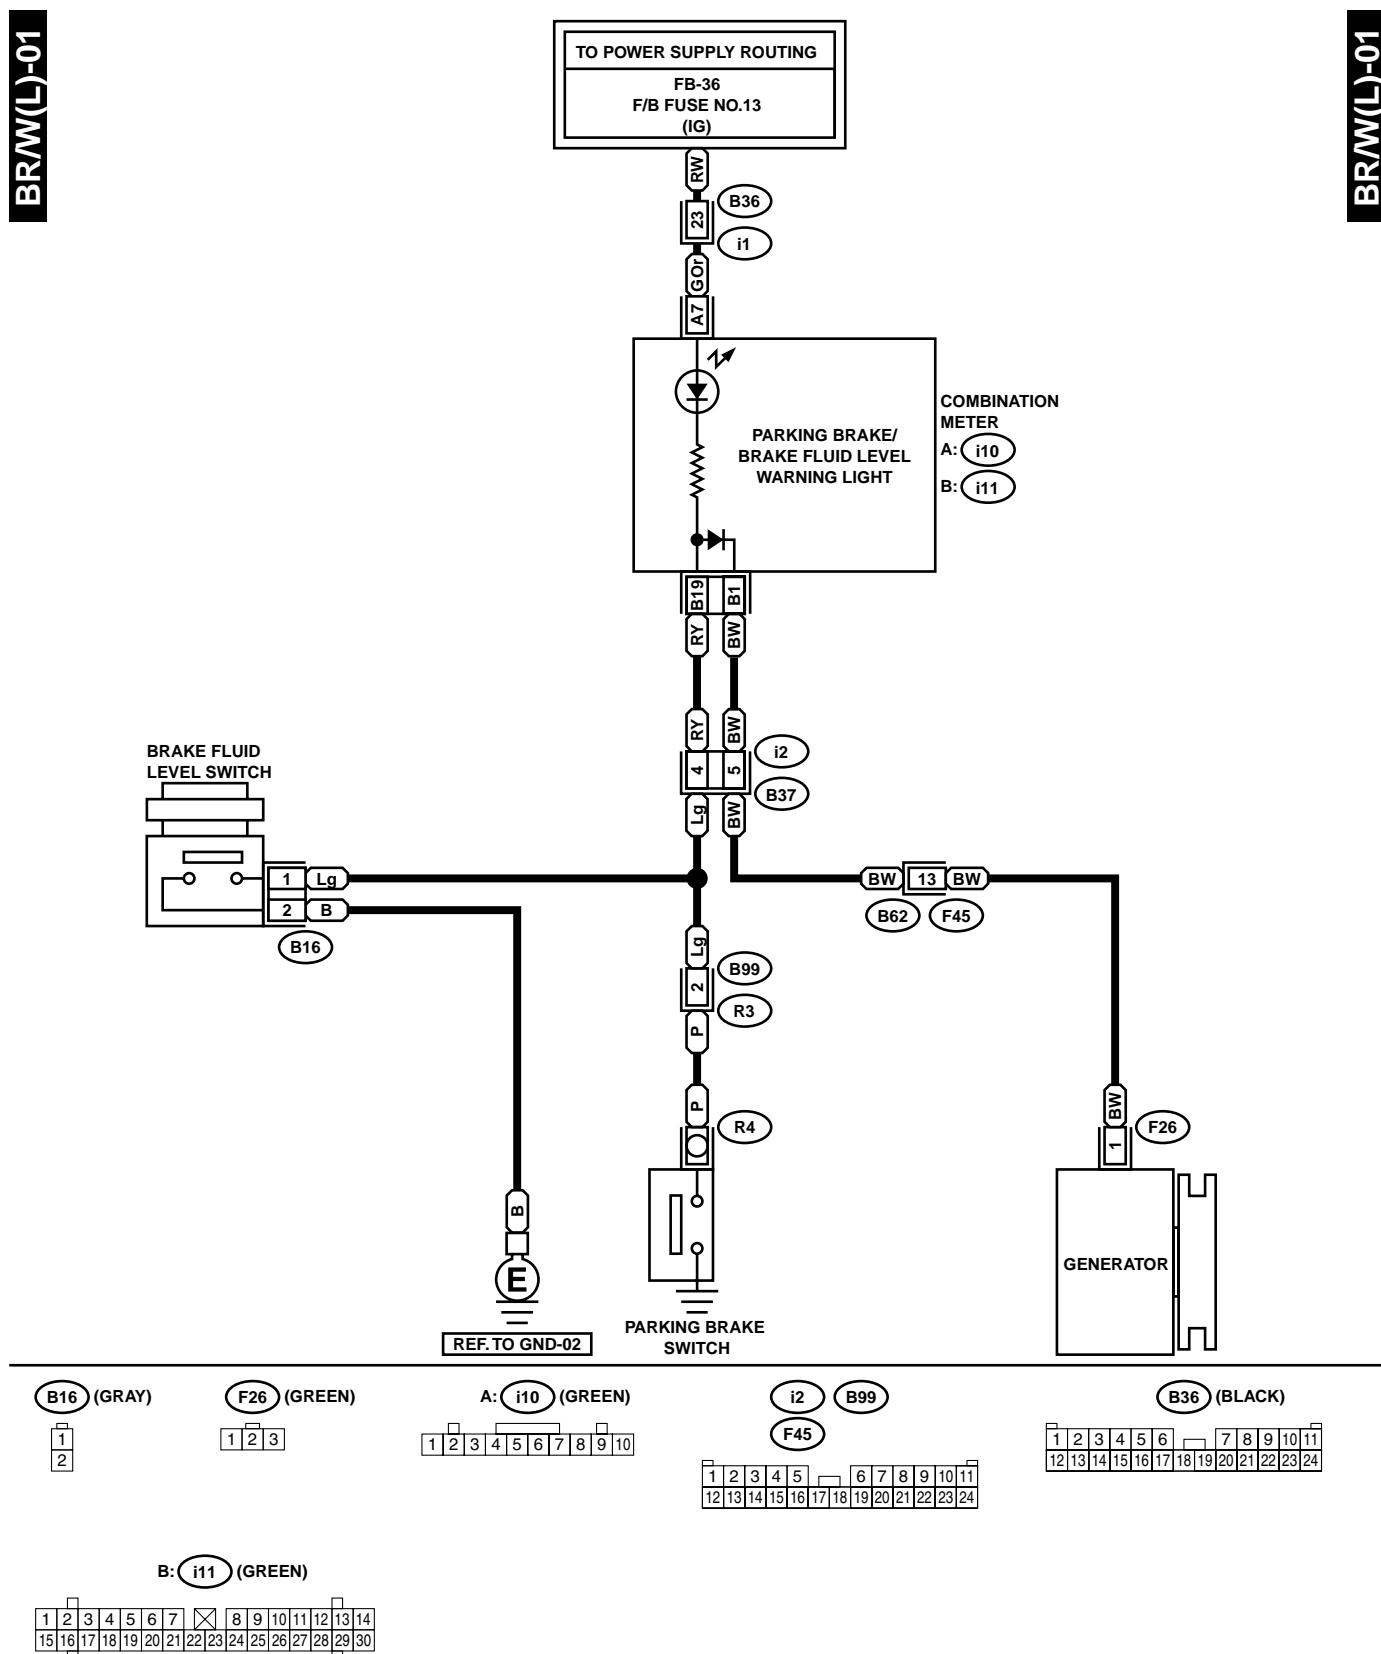

# PARKING BRAKE AND BRAKE FLUID LEVEL WARNING SYSTEM

## WIRING SYSTEM

### 2. RHD MODEL

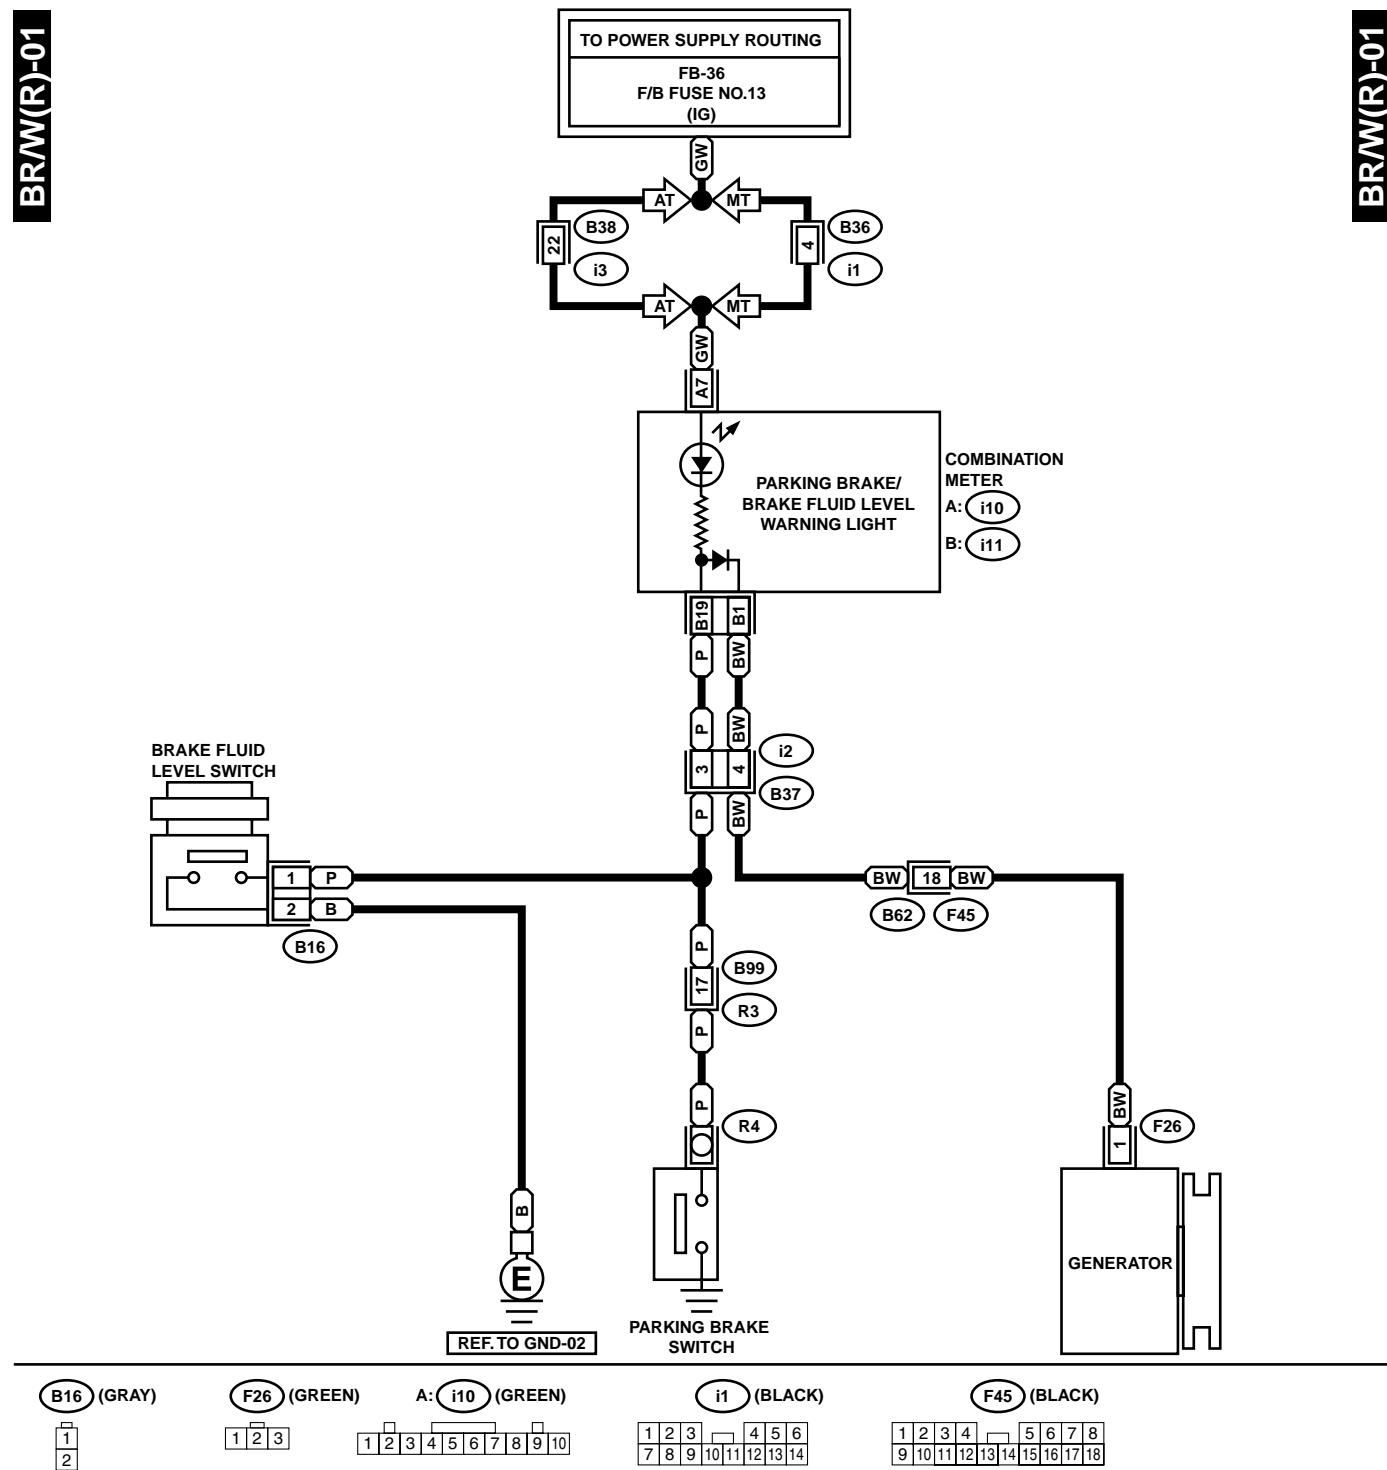

GR60-20


**34.Power Window System**

**A: SCHEMATIC**

# POWER WINDOW SYSTEM

## WIRING SYSTEM

### 1. LHD MODEL

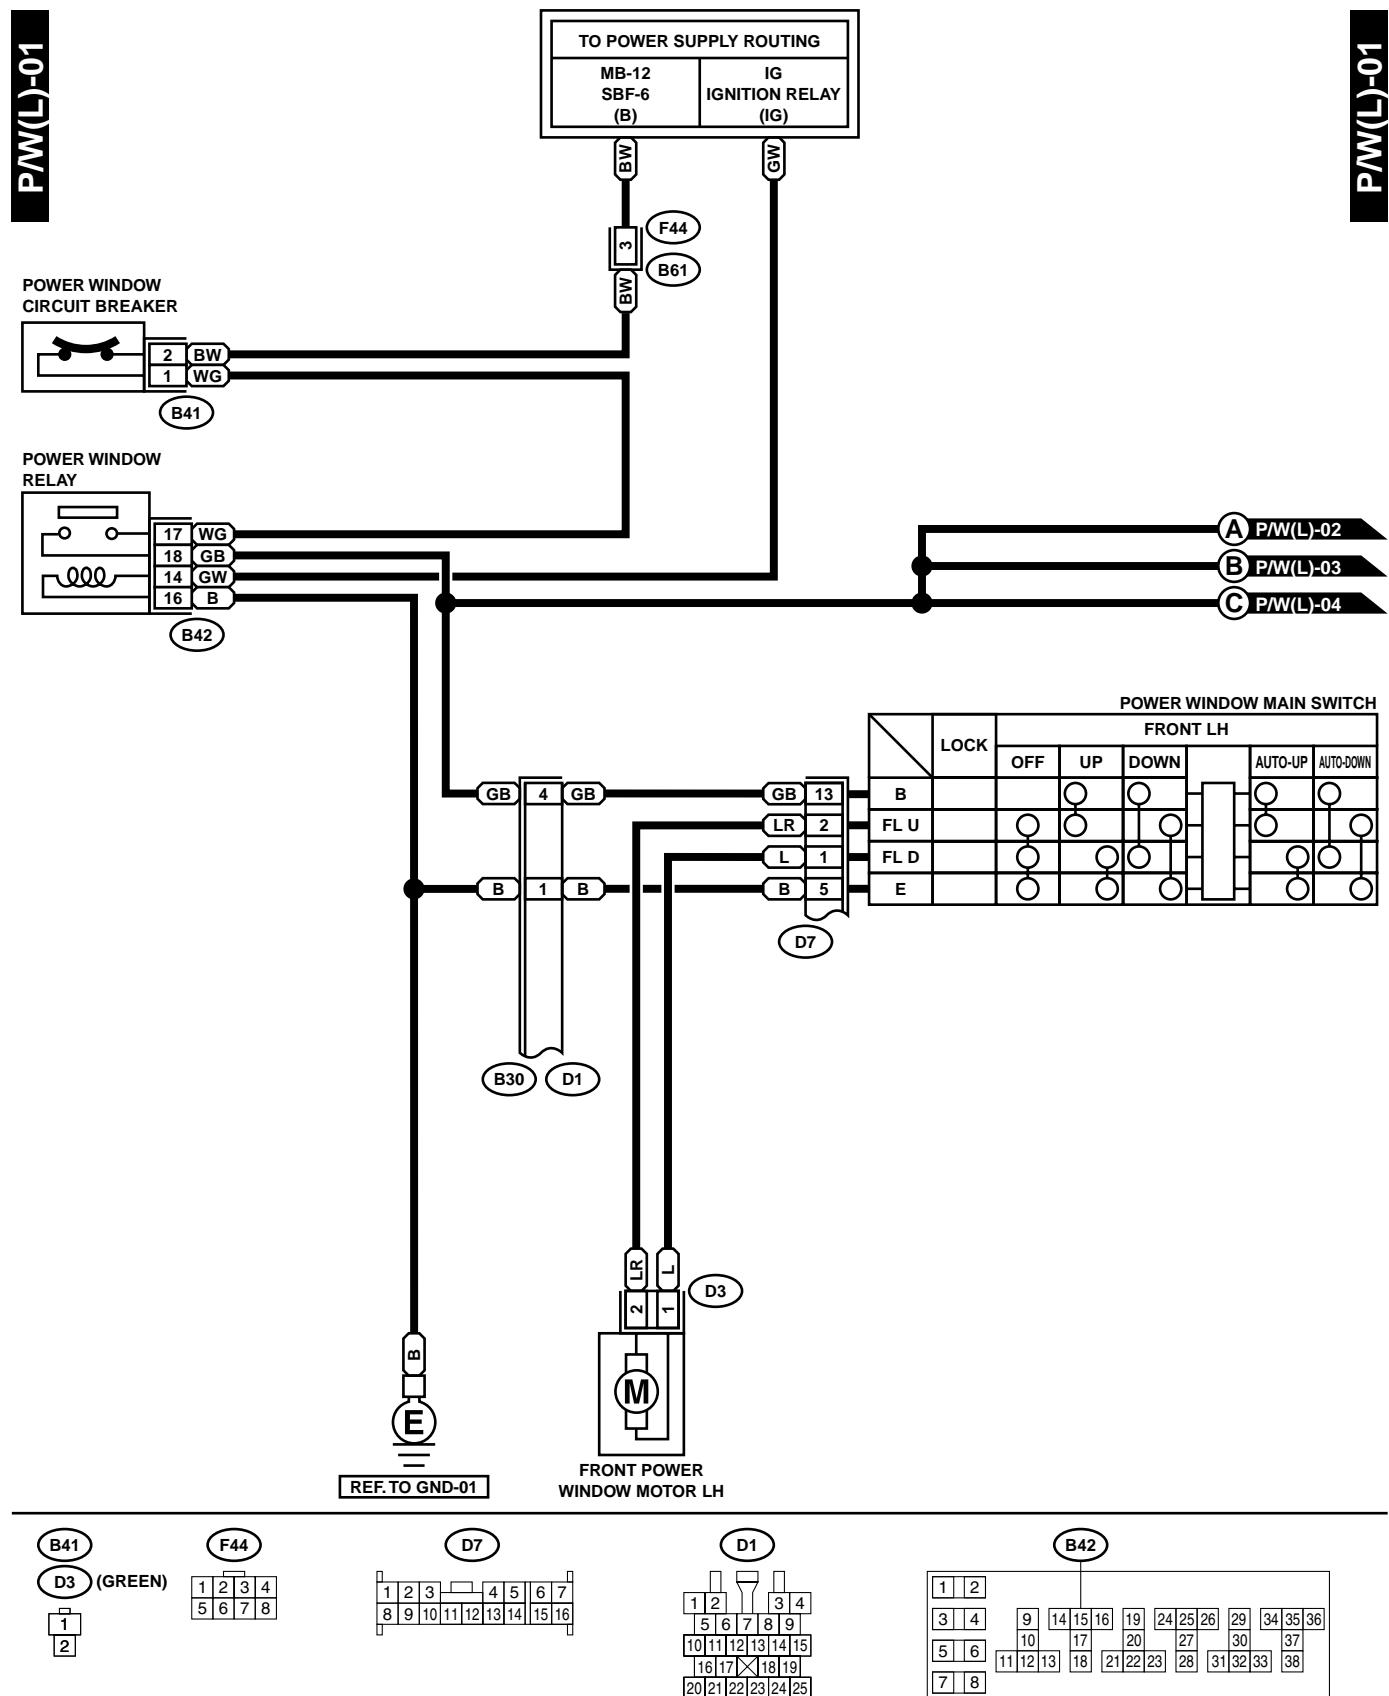

# POWER WINDOW SYSTEM


WIRING SYSTEM

P/W(L)-02


P/W(L)-02

P/W(L)-01 A


FRONT POWER WINDOW  
SUB-SWITCH RH

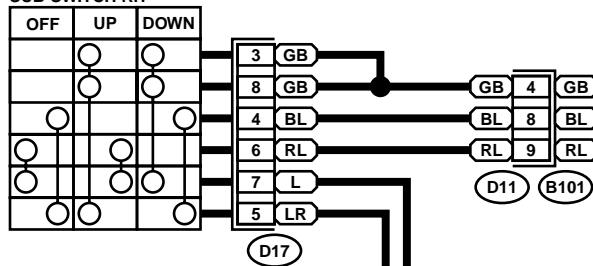

POWER WINDOW MAIN SWITCH

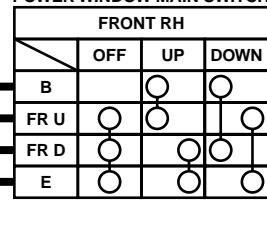

FRONT POWER  
WINDOW MOTOR RH

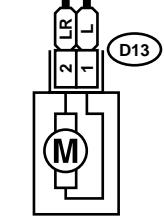


REF. TO GND-01


D13 (GREEN)



 
D17



D7

 

D1

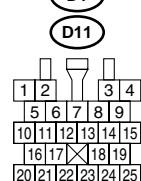


GL70-20B

# POWER WINDOW SYSTEM

## WIRING SYSTEM

P/W(L)-03

P/W(L)-03

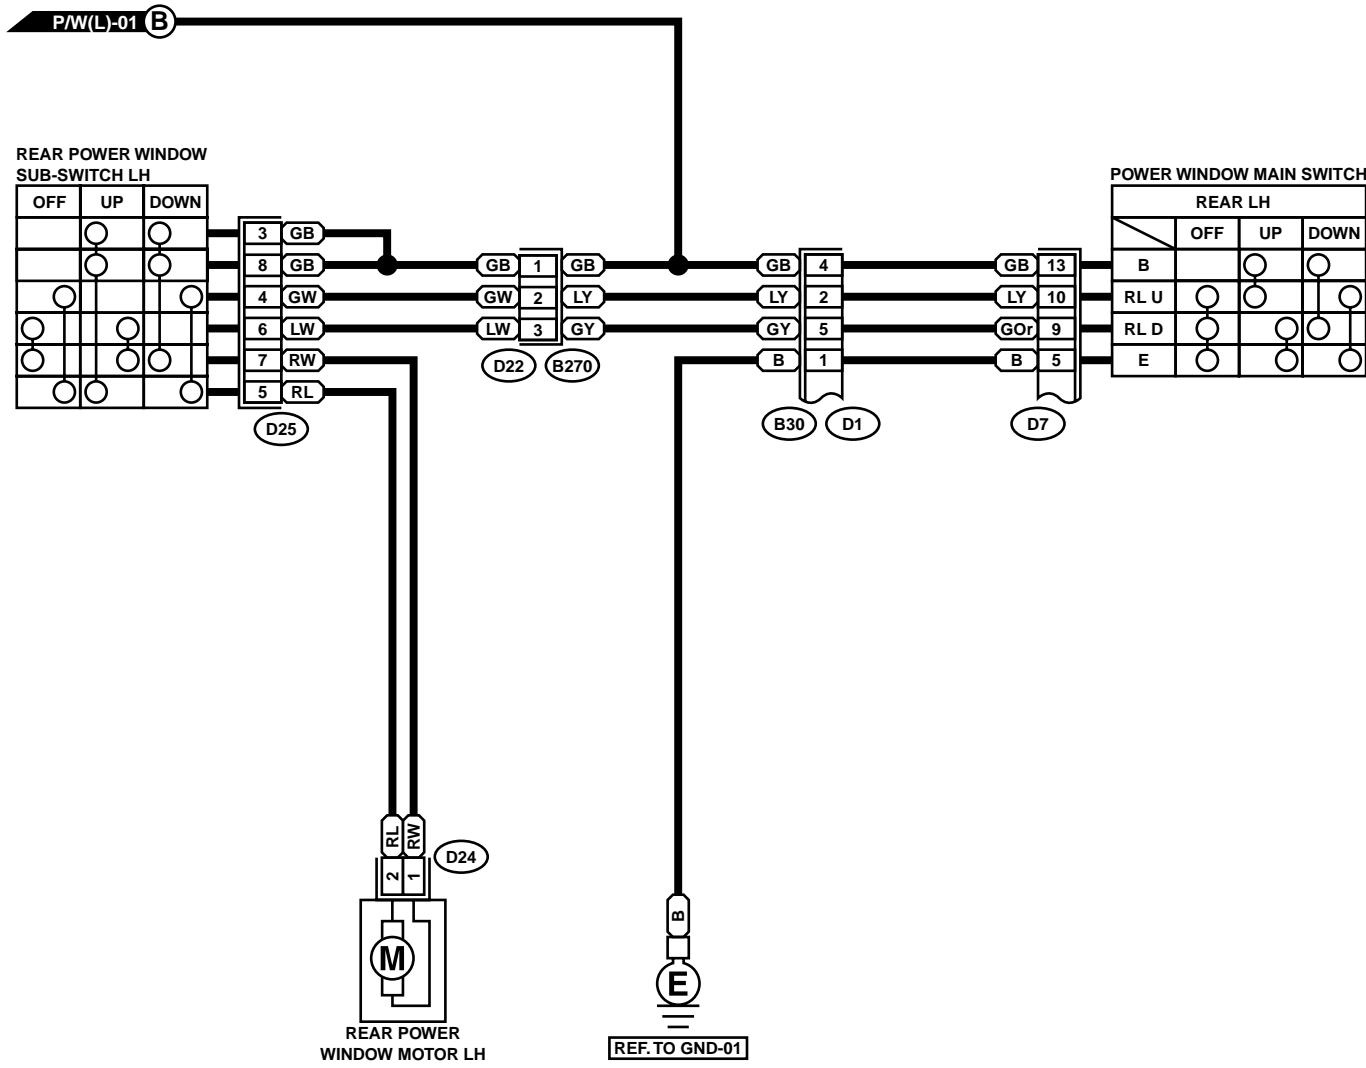

D24 (GREEN)  
1  
2

D22  
1 2 3

D25  
1 2 3  
4 5 6 7 8

D7  
1 2 3 4 5 6 7  
8 9 10 11 12 13 14 15 16

D1  
1 2 3 4  
5 6 7 8 9  
10 11 12 13 14 15  
16 17 X 18 19  
20 21 22 23 24 25


GL70-20C

# POWER WINDOW SYSTEM

WIRING SYSTEM

P/W(L)-04

P/W(L)-04

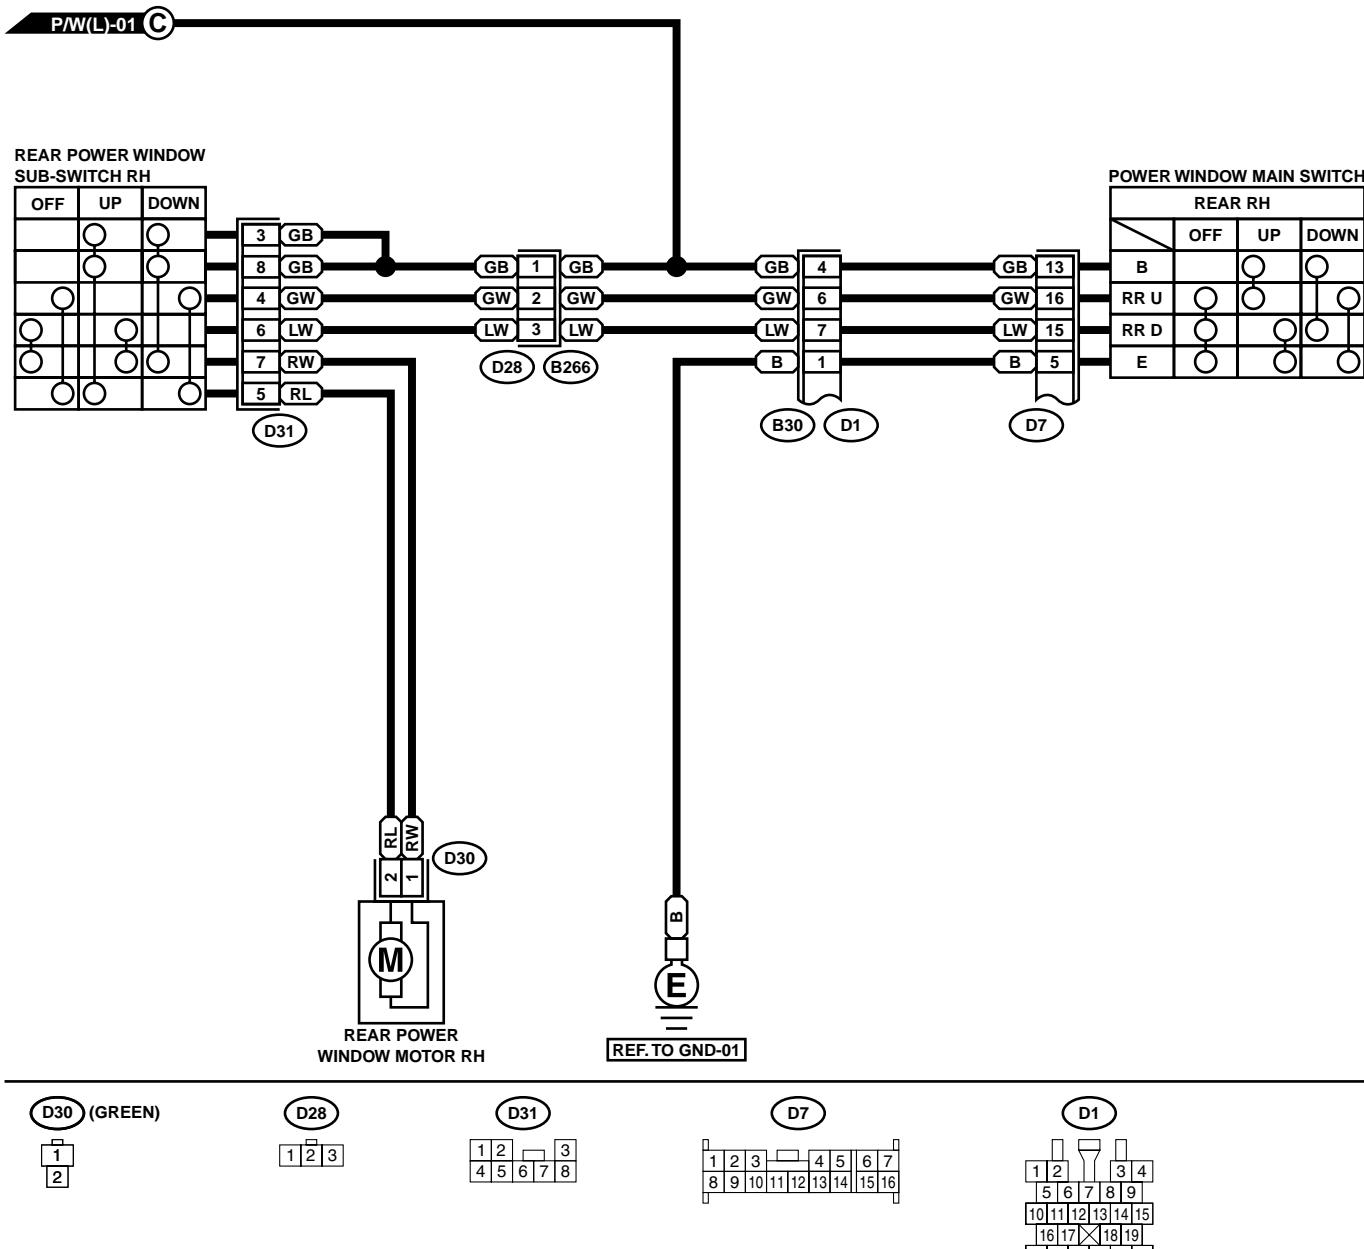


GL70-20D

# POWER WINDOW SYSTEM

## WIRING SYSTEM

### 2. RHD MODEL

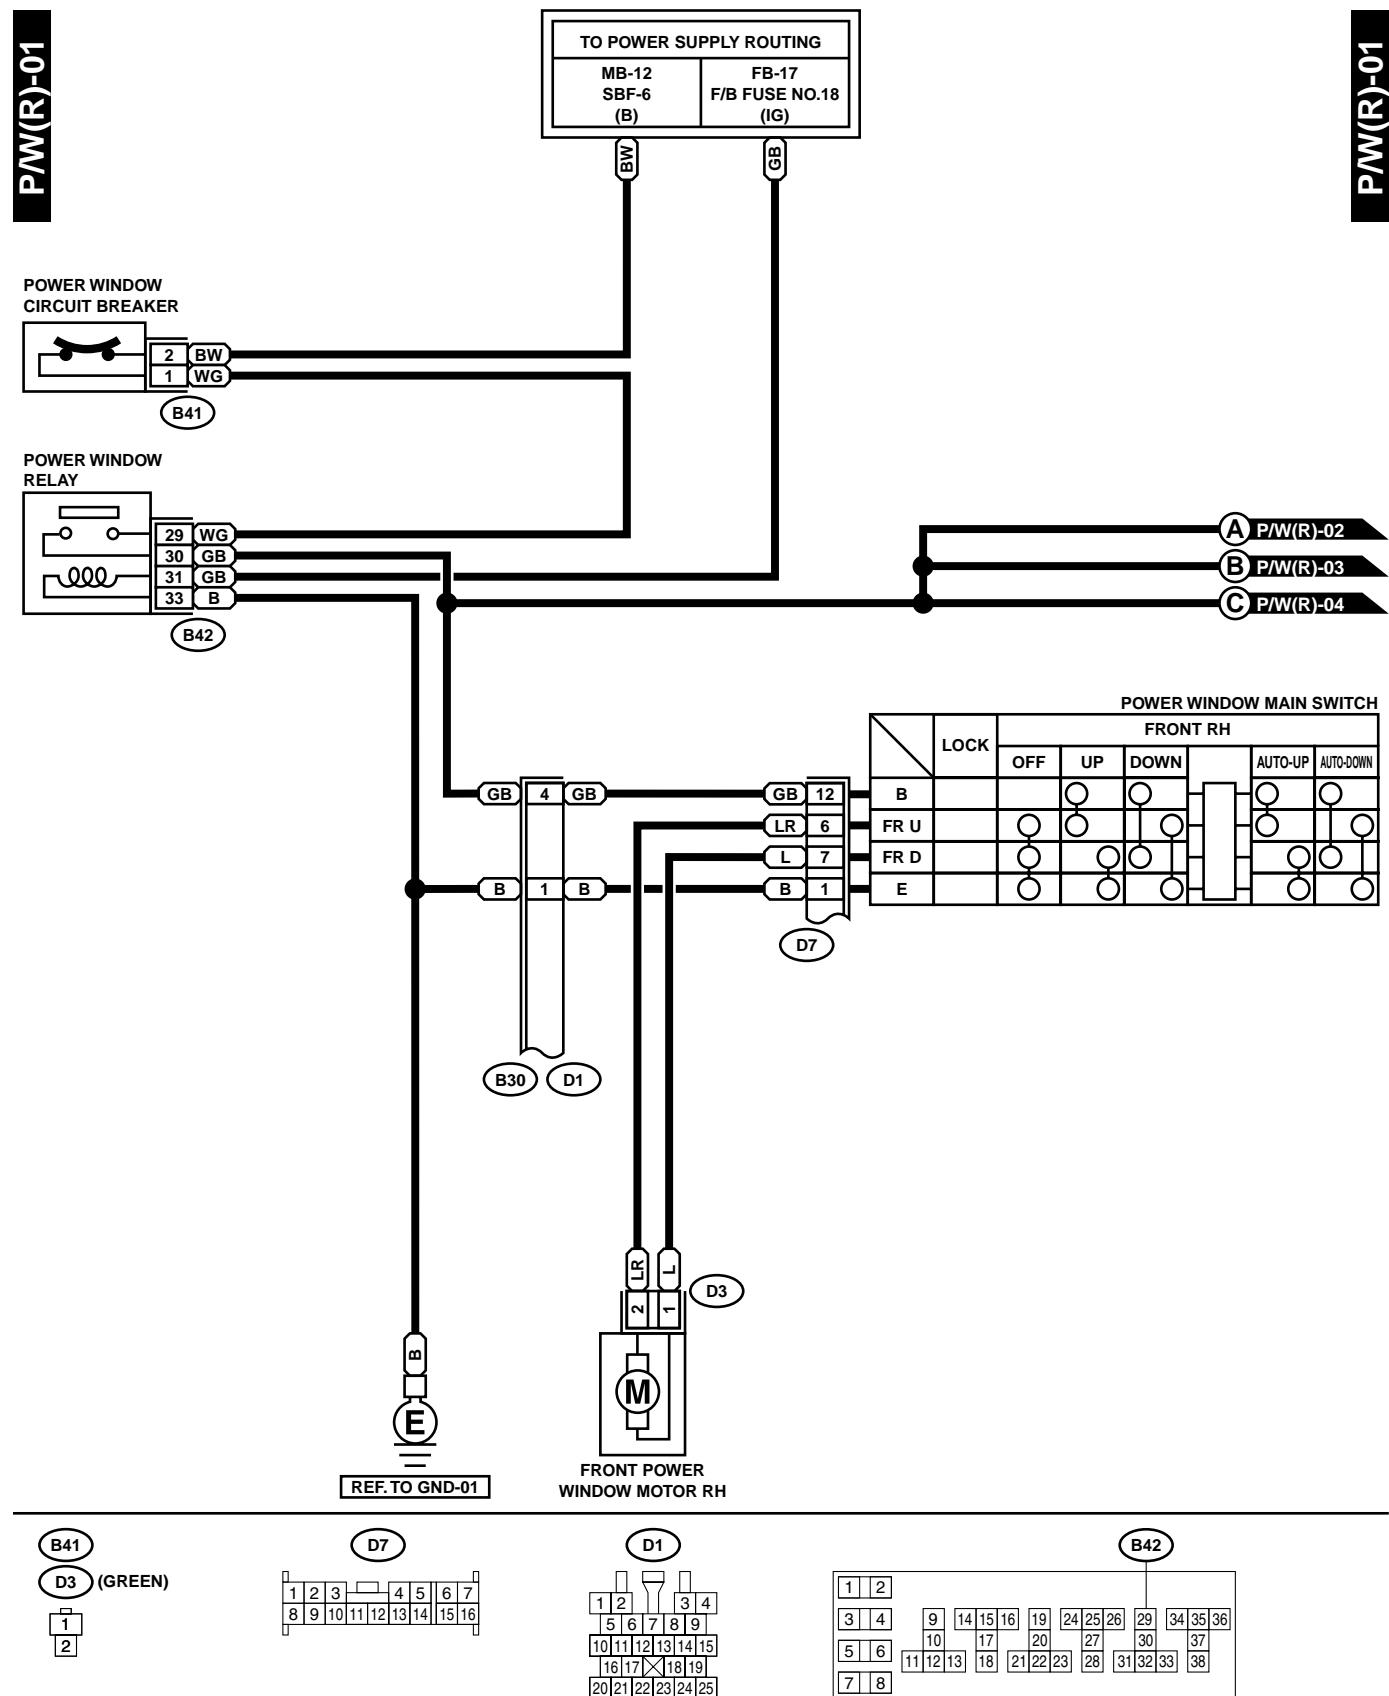


# POWER WINDOW SYSTEM

WIRING SYSTEM

P/W(R)-02

P/W(R)-02

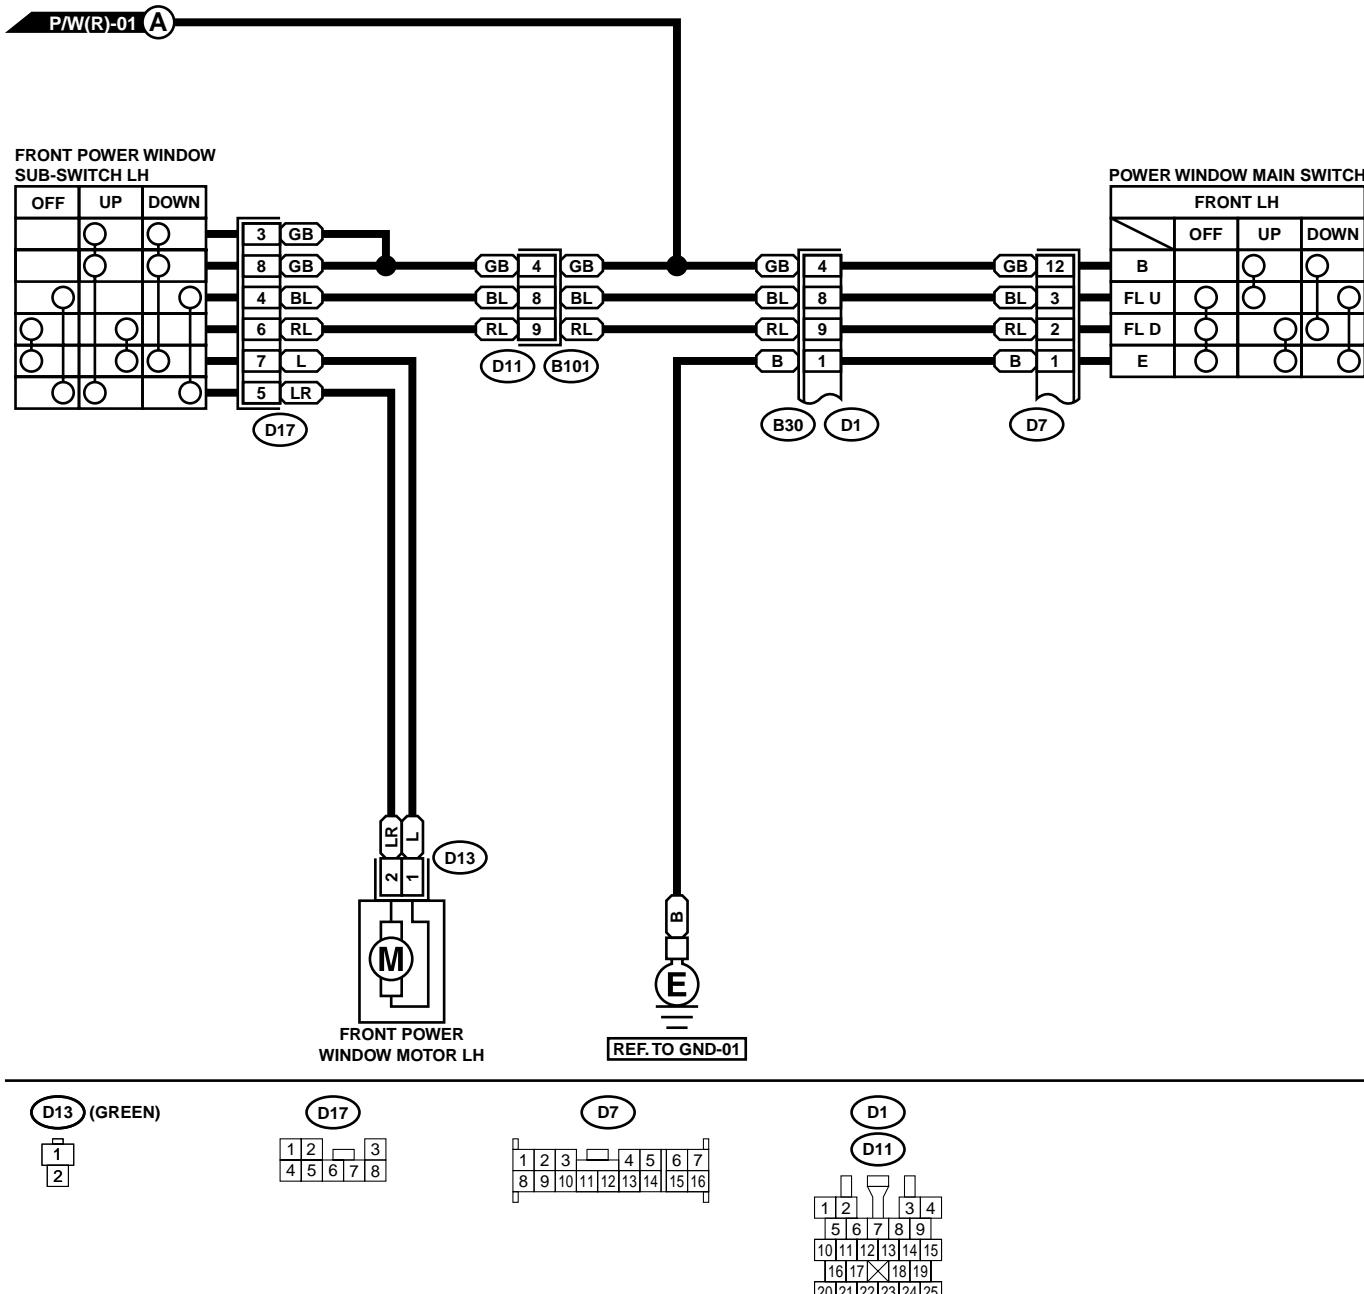


GR70-20B

# POWER WINDOW SYSTEM

## WIRING SYSTEM

P/W(R)-03

P/W(R)-03

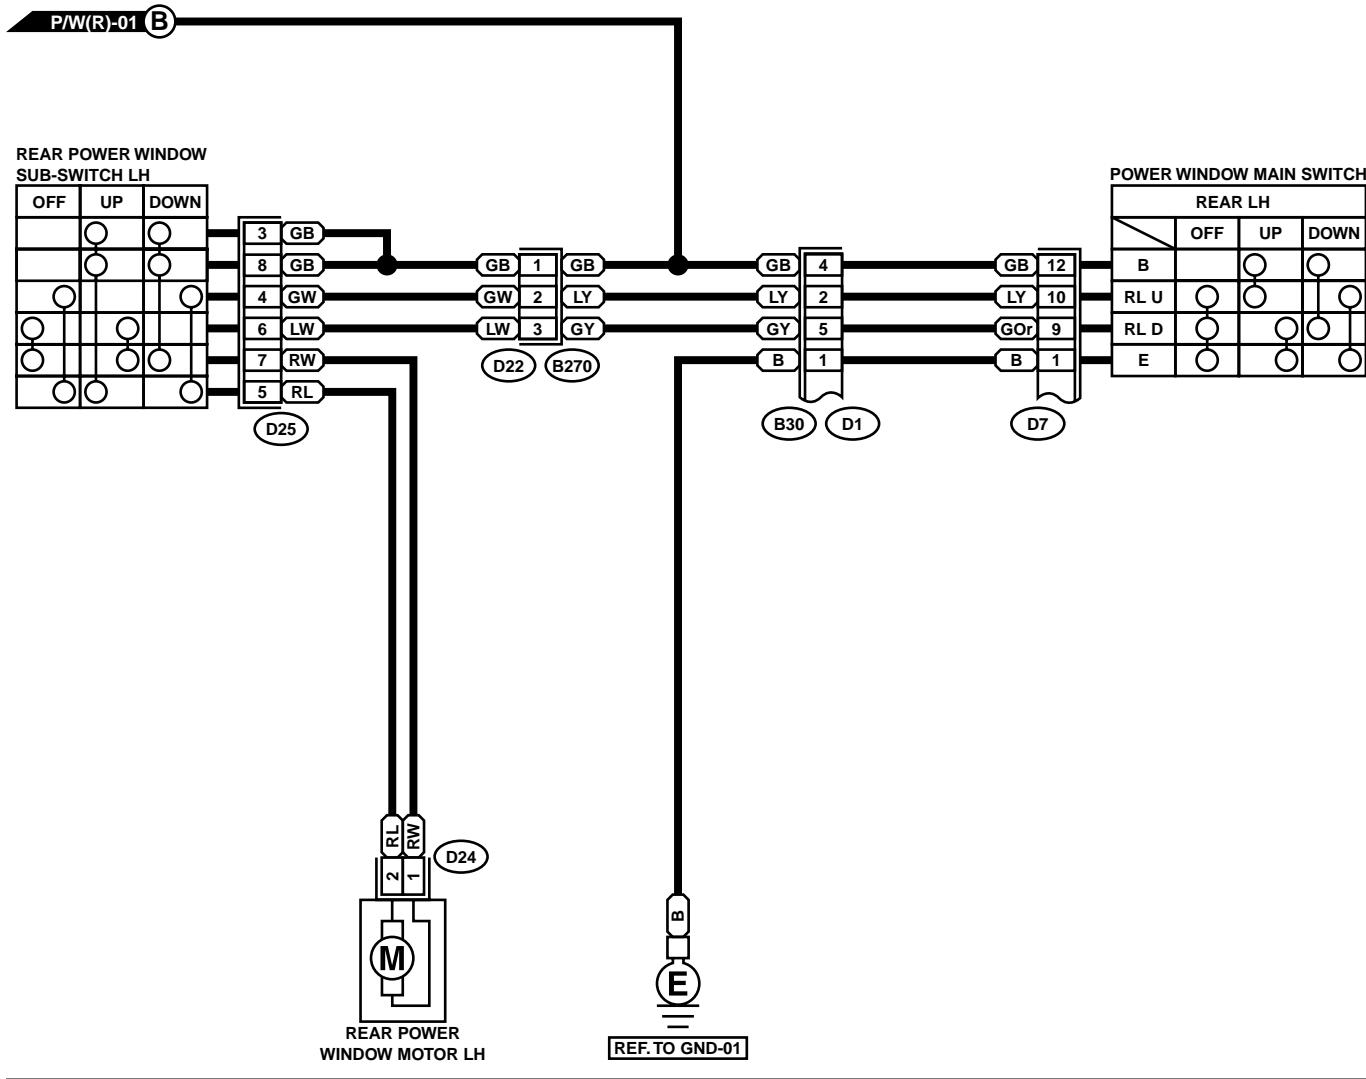


GR70-20C

# POWER WINDOW SYSTEM

WIRING SYSTEM

P/W(R)-04

P/W(R)-04

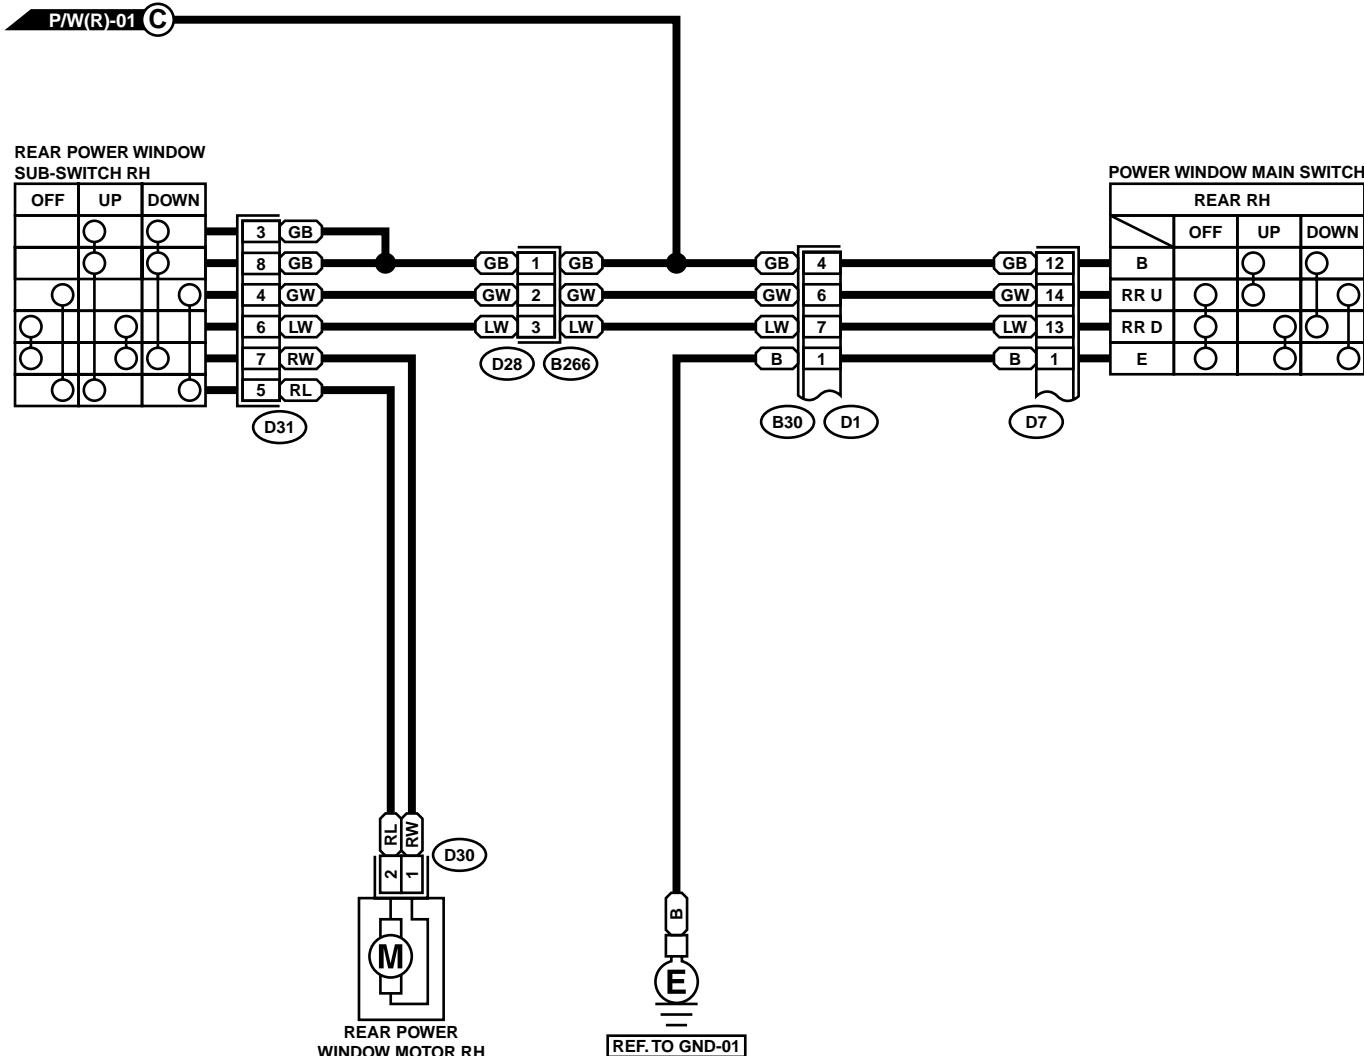

GR70-20D

## RADIATOR FAN SYSTEM

WIRING SYSTEM

---


### 35.Radiator Fan System

#### A: SCHEMATIC

# RADIATOR FAN SYSTEM

WIRING SYSTEM

## 1. NON-TURBO ENGINE MODEL

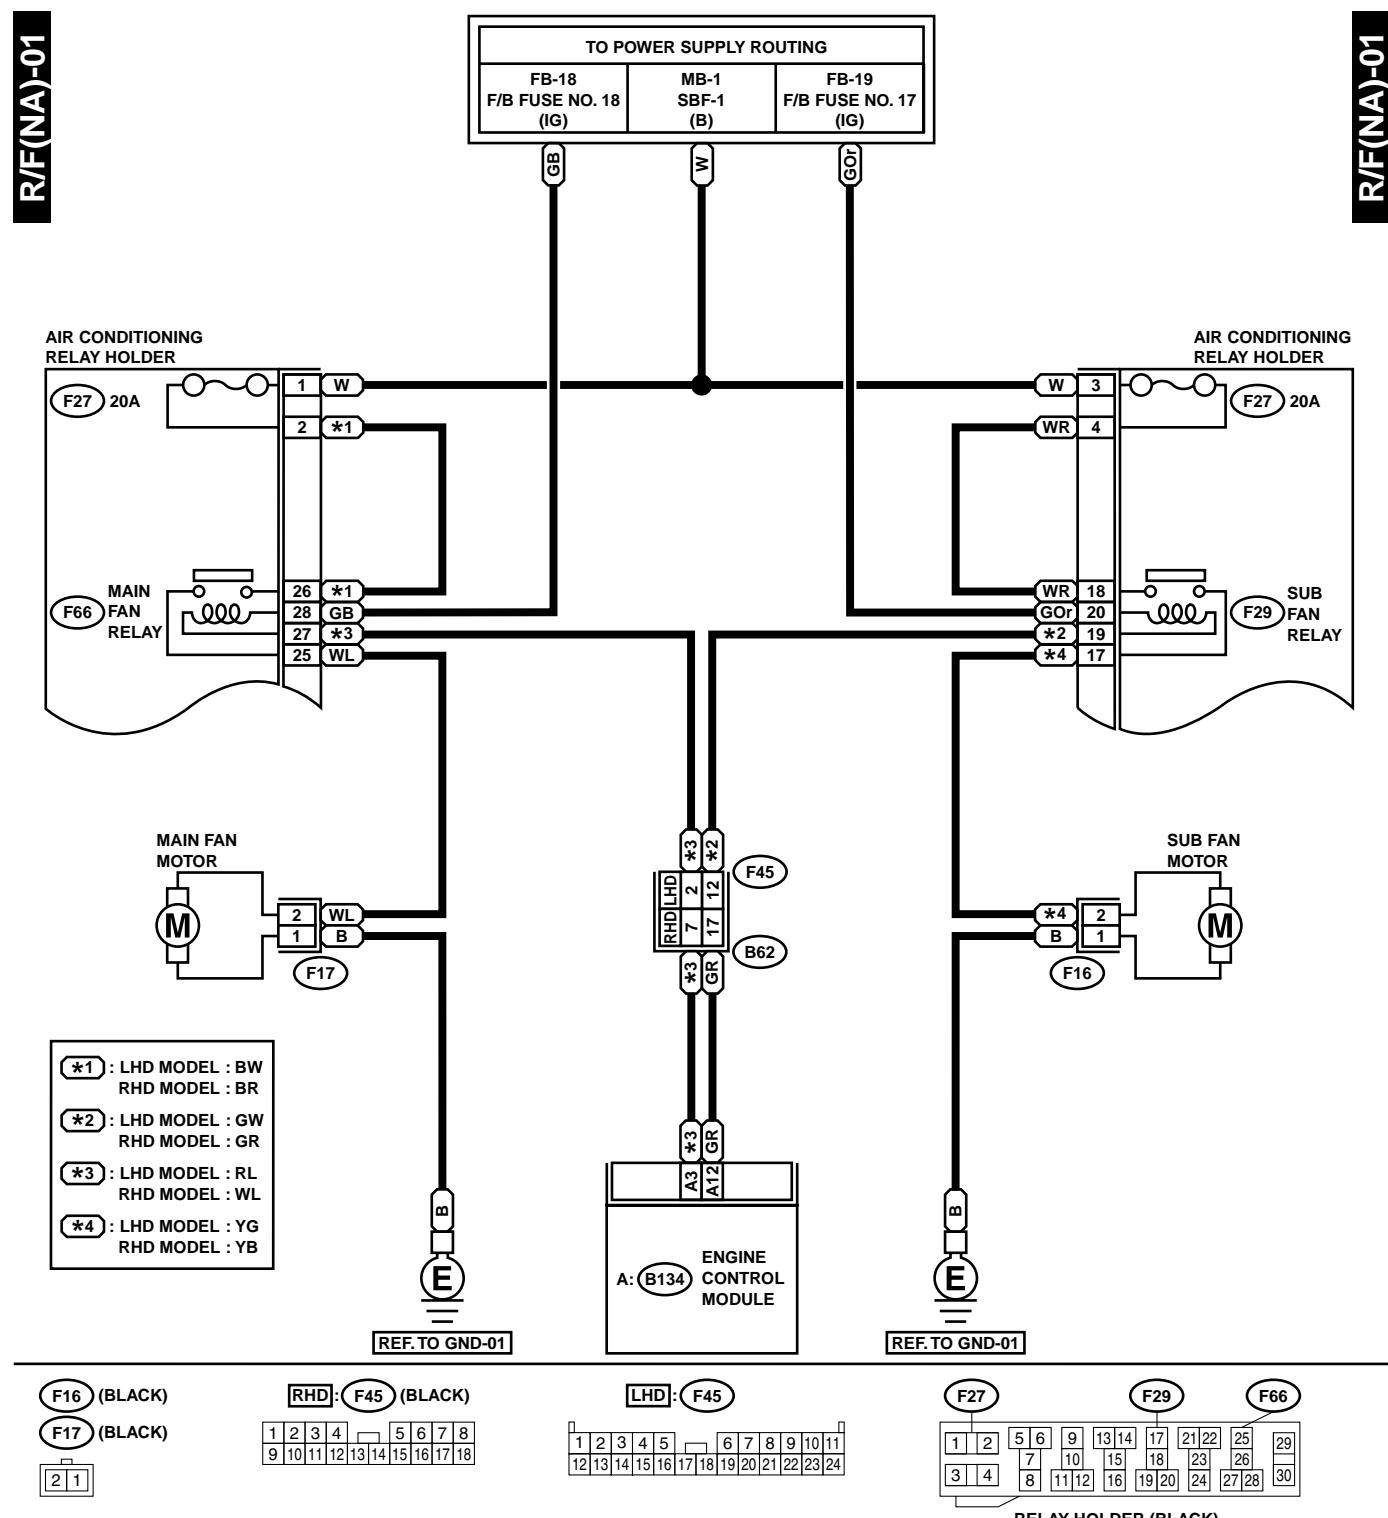


A: B134

1	2	3	4		5	6	7	8
9	10	11	12	13	14	15	16	17
24	25	26	27	28	29	30	31	32

# RADIATOR FAN SYSTEM

## WIRING SYSTEM

### 2. TURBO ENGINE MODEL

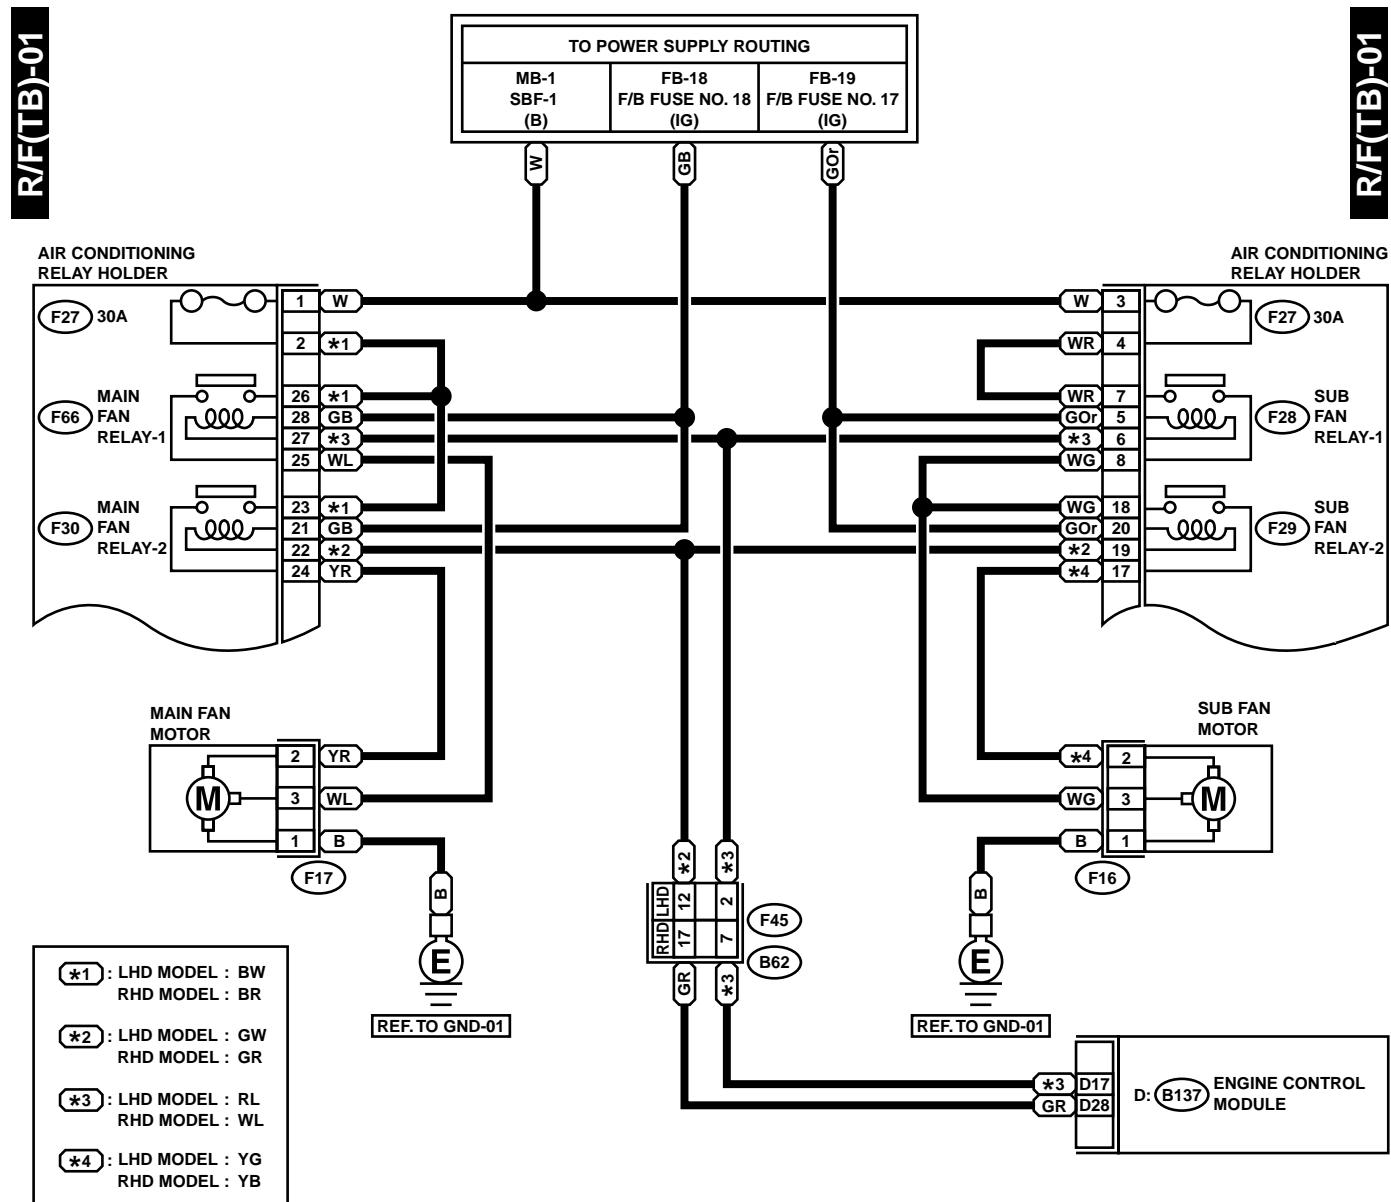


## **36.Rear Fog Light System**

### **A: SCHEMATIC**

# REAR FOG LIGHT SYSTEM

## WIRING SYSTEM


### 1. LHD MODEL

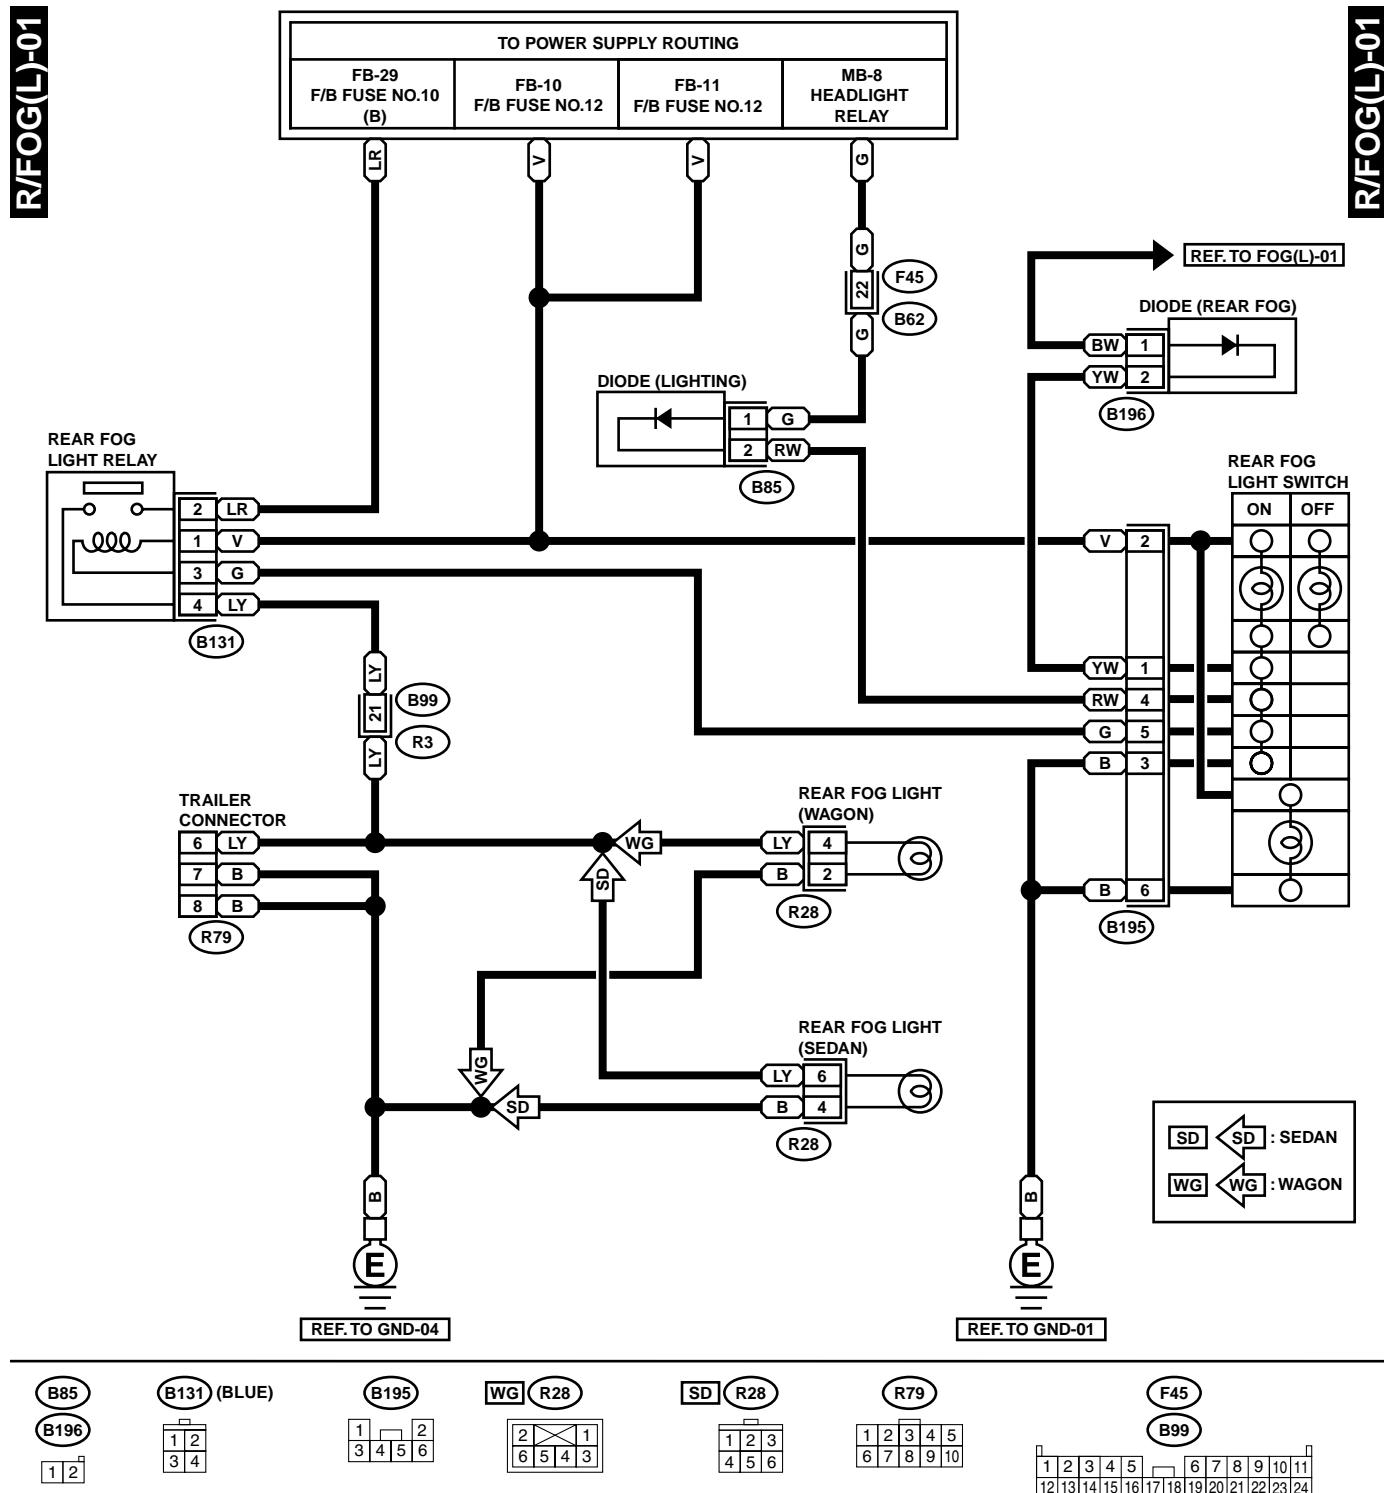

# REAR FOG LIGHT SYSTEM

WIRING SYSTEM

## 2. RHD FOR EUROPE MODEL








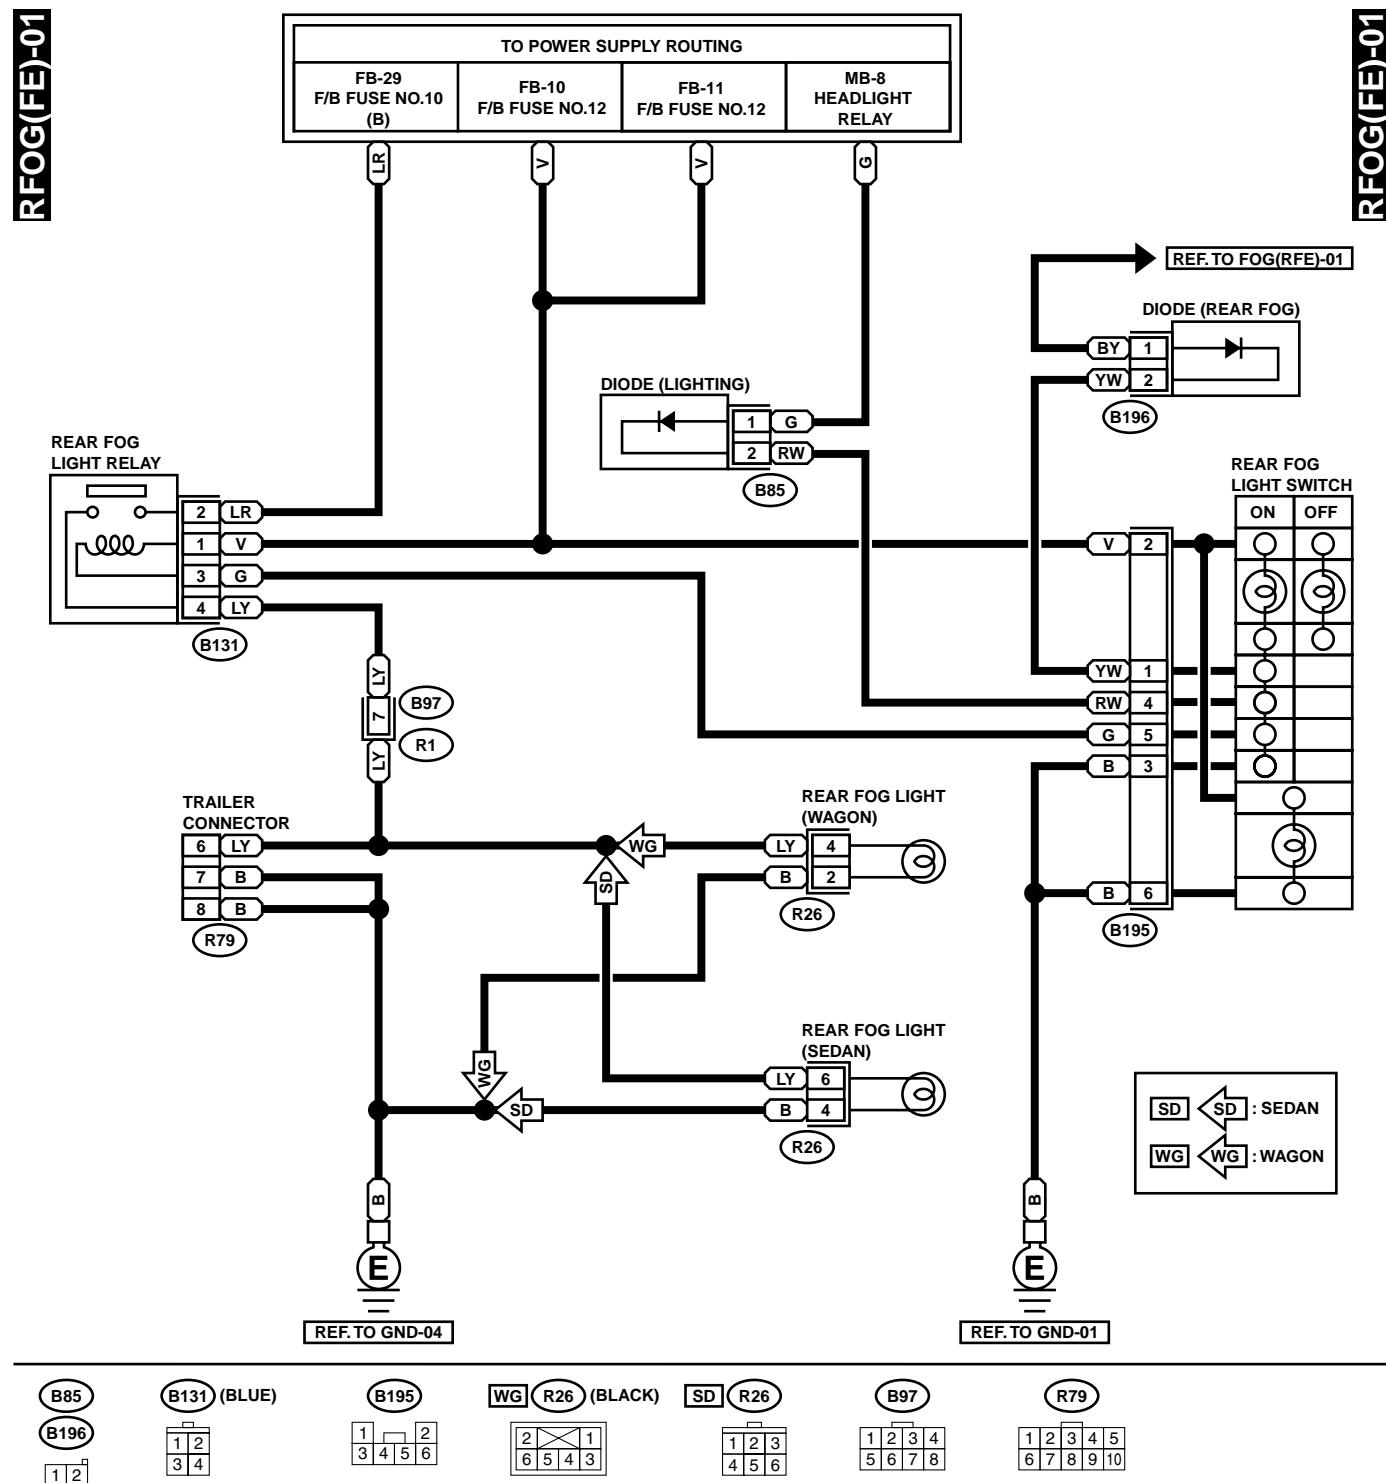


GR30-20

# REAR FOG LIGHT SYSTEM
       
## WIRING SYSTEM

### 3. RHD EXCEPT FOR EUROPE MODEL

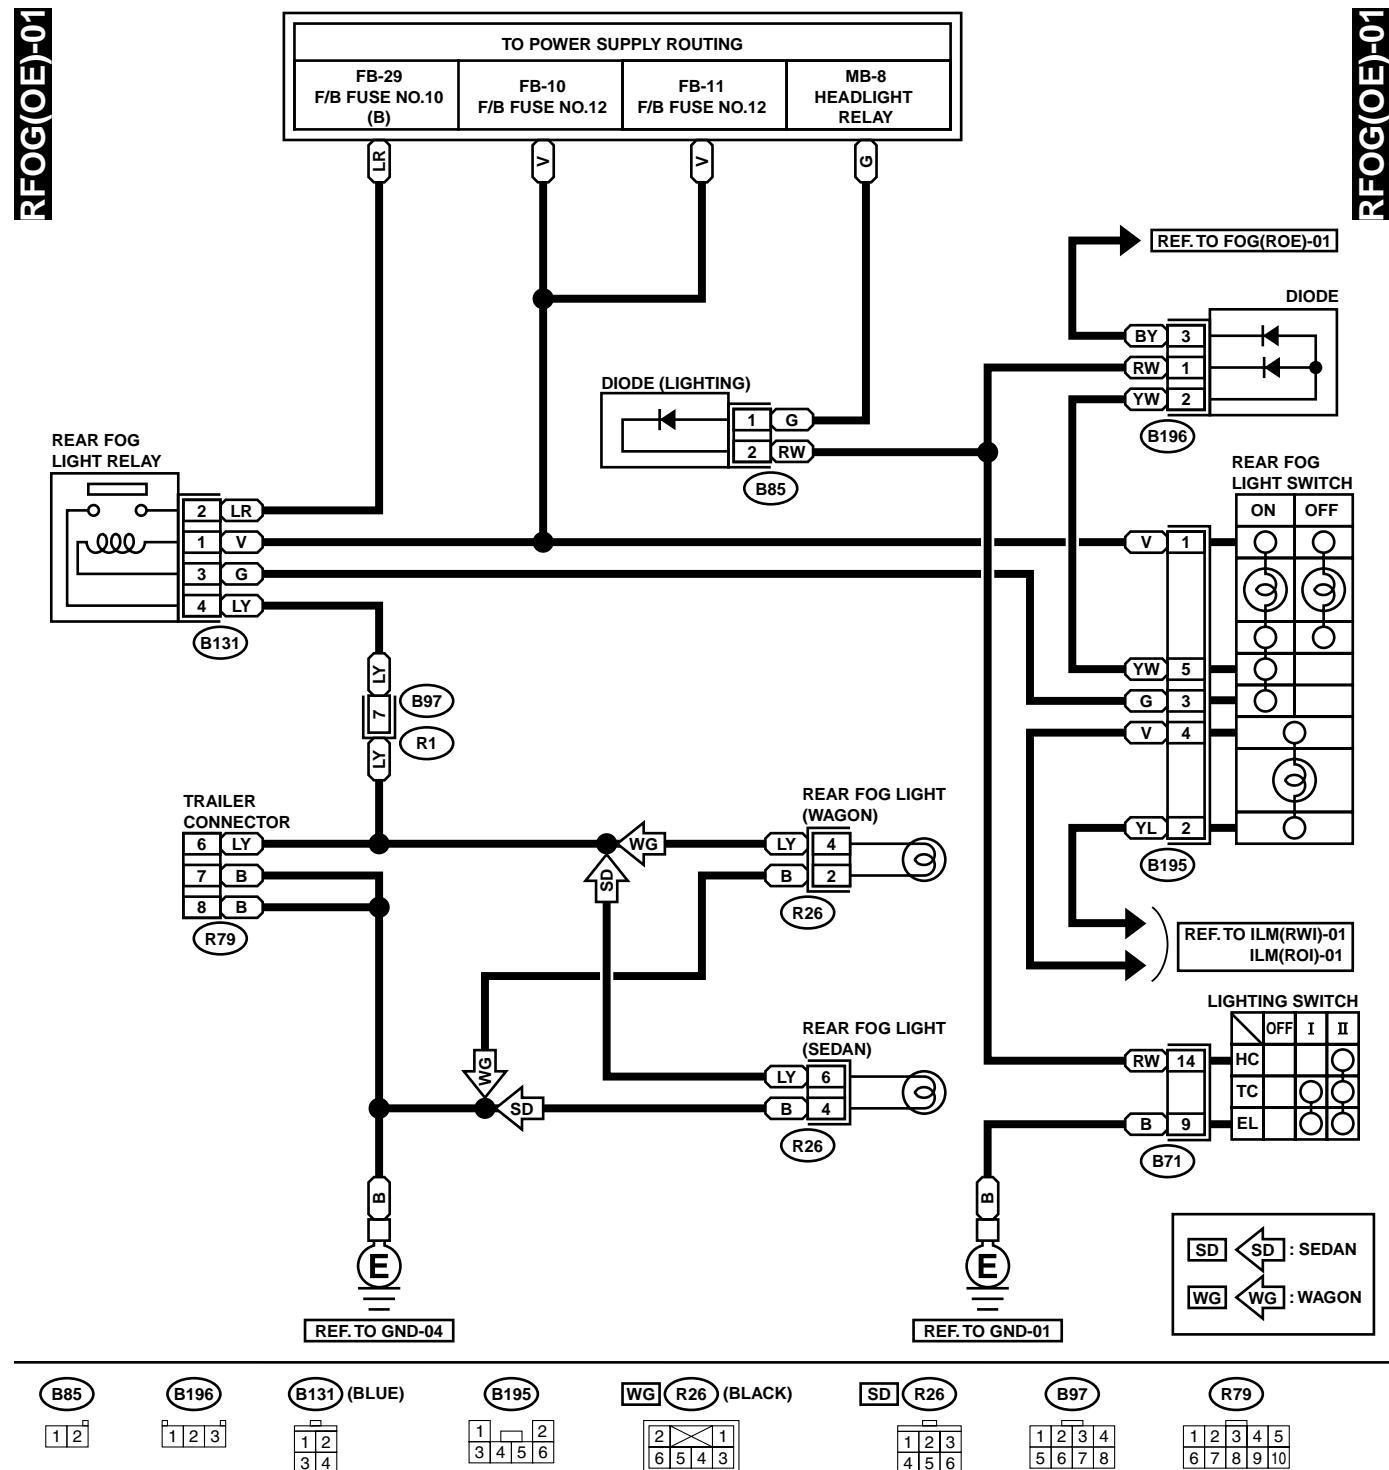


## **37.Rear Window Defogger System**

### **A: SCHEMATIC**

# REAR WINDOW DEFOGGER SYSTEM

## WIRING SYSTEM


### 1. LHD MODEL

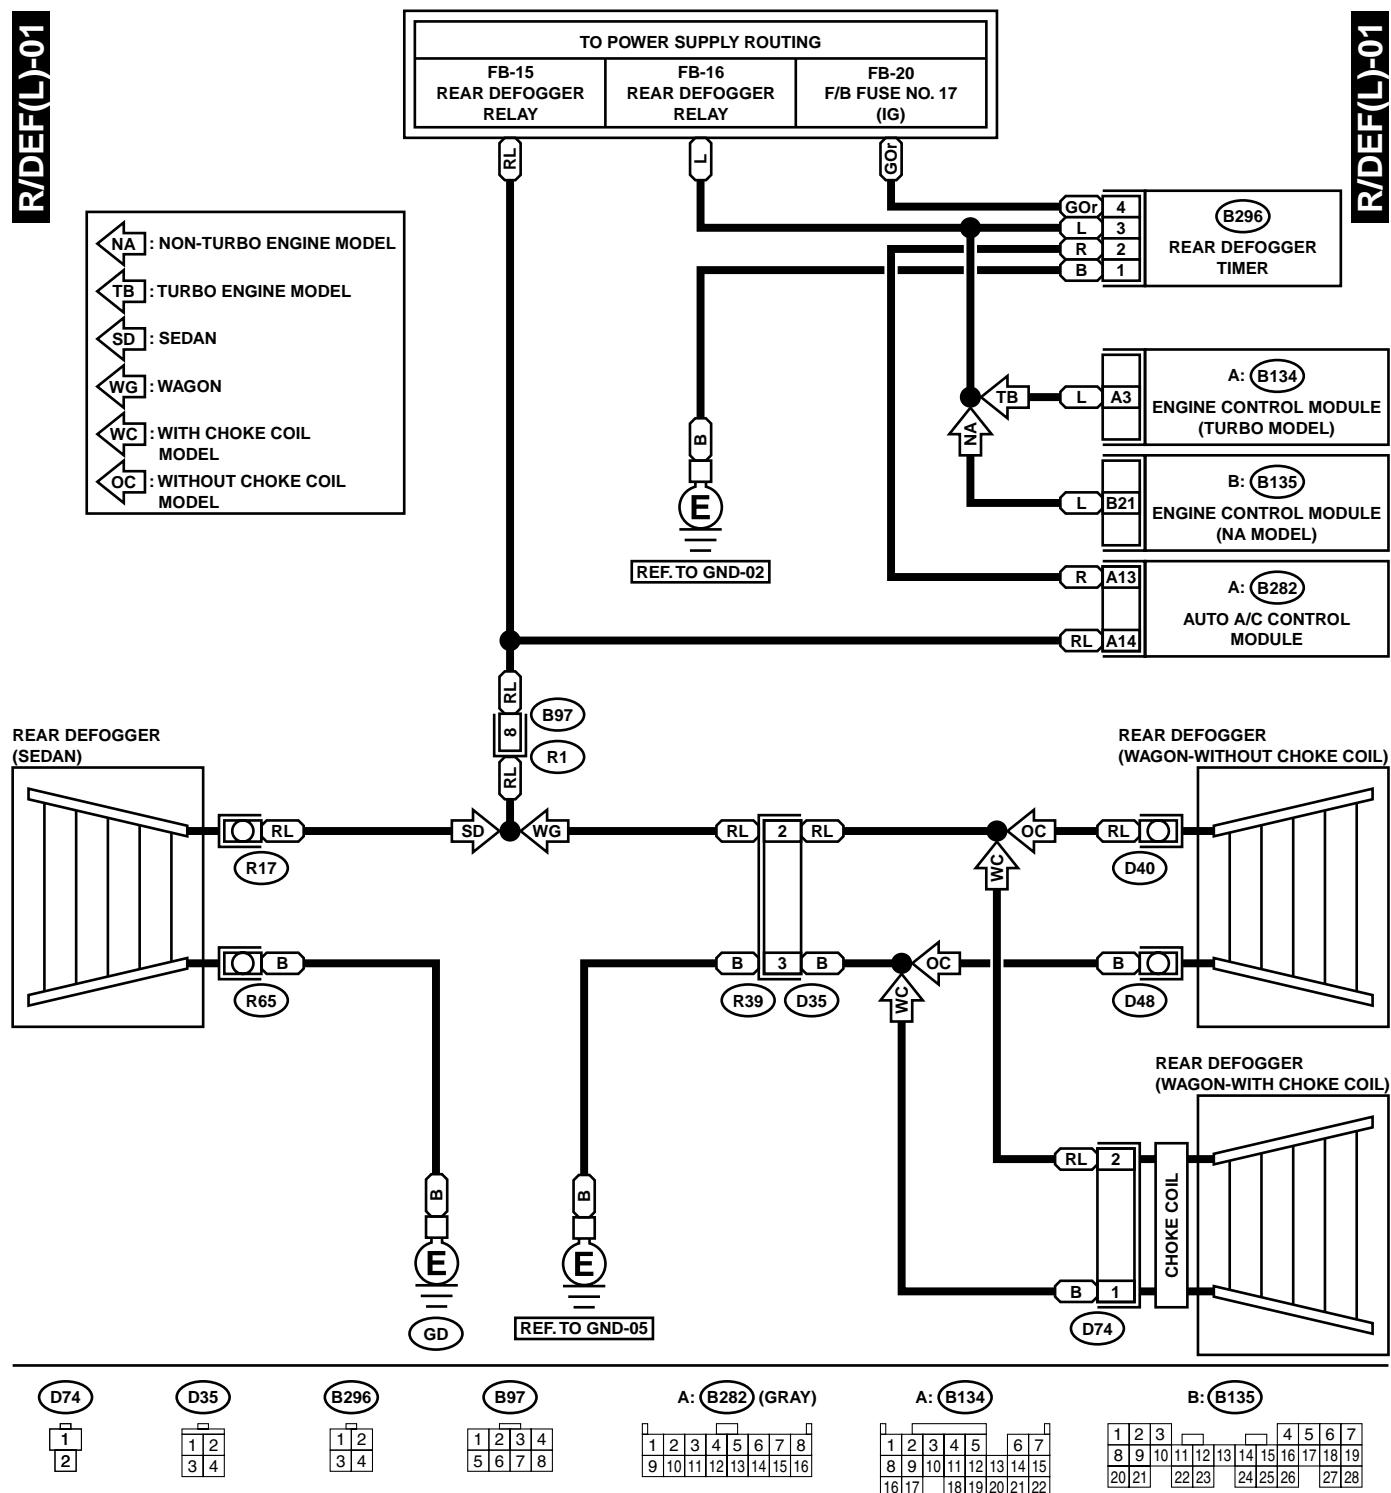

# REAR WINDOW DEFOGGER SYSTEM

WIRING SYSTEM

## 2. RHD MODEL

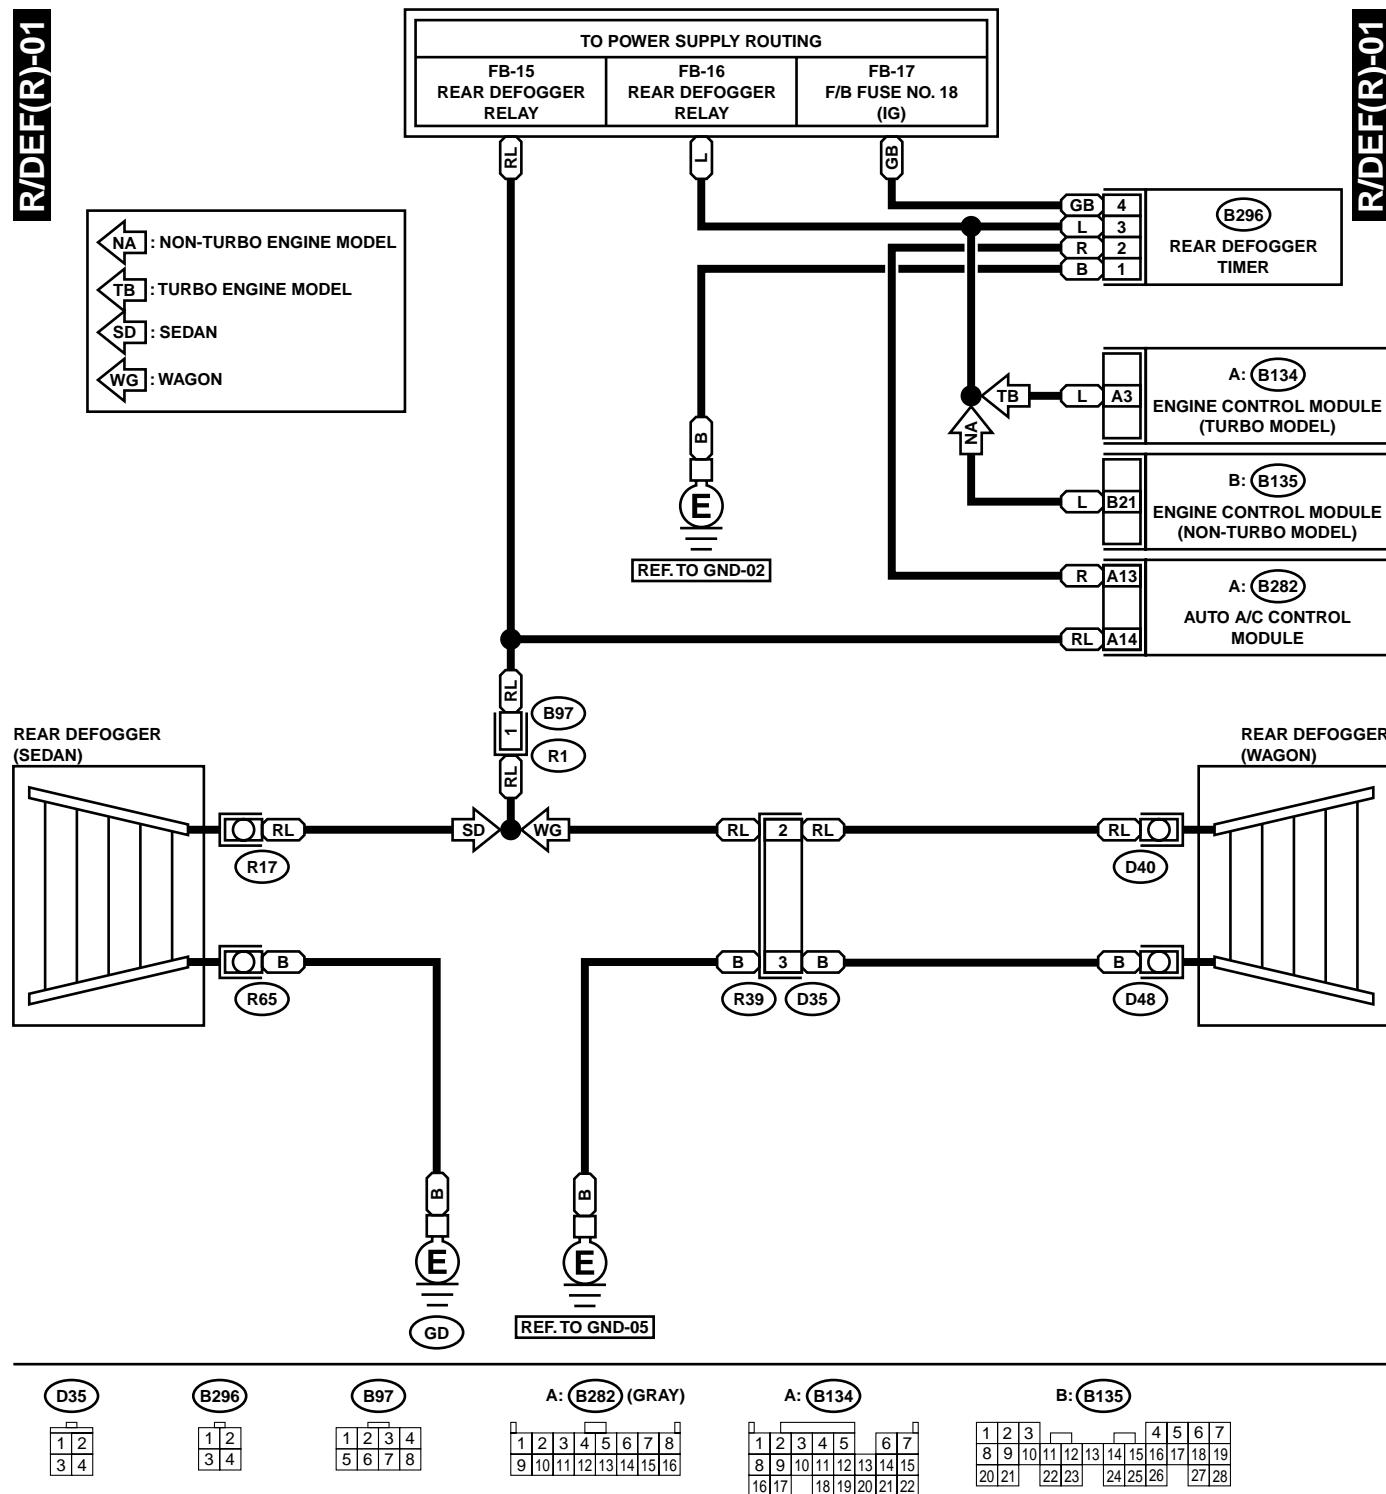

---


## **38. Remote Controlled Rearview Mirror System**

### **A: SCHEMATIC**

# REMOTE CONTROLLED REARVIEW MIRROR SYSTEM

WIRING SYSTEM


## 1. LHD MODEL

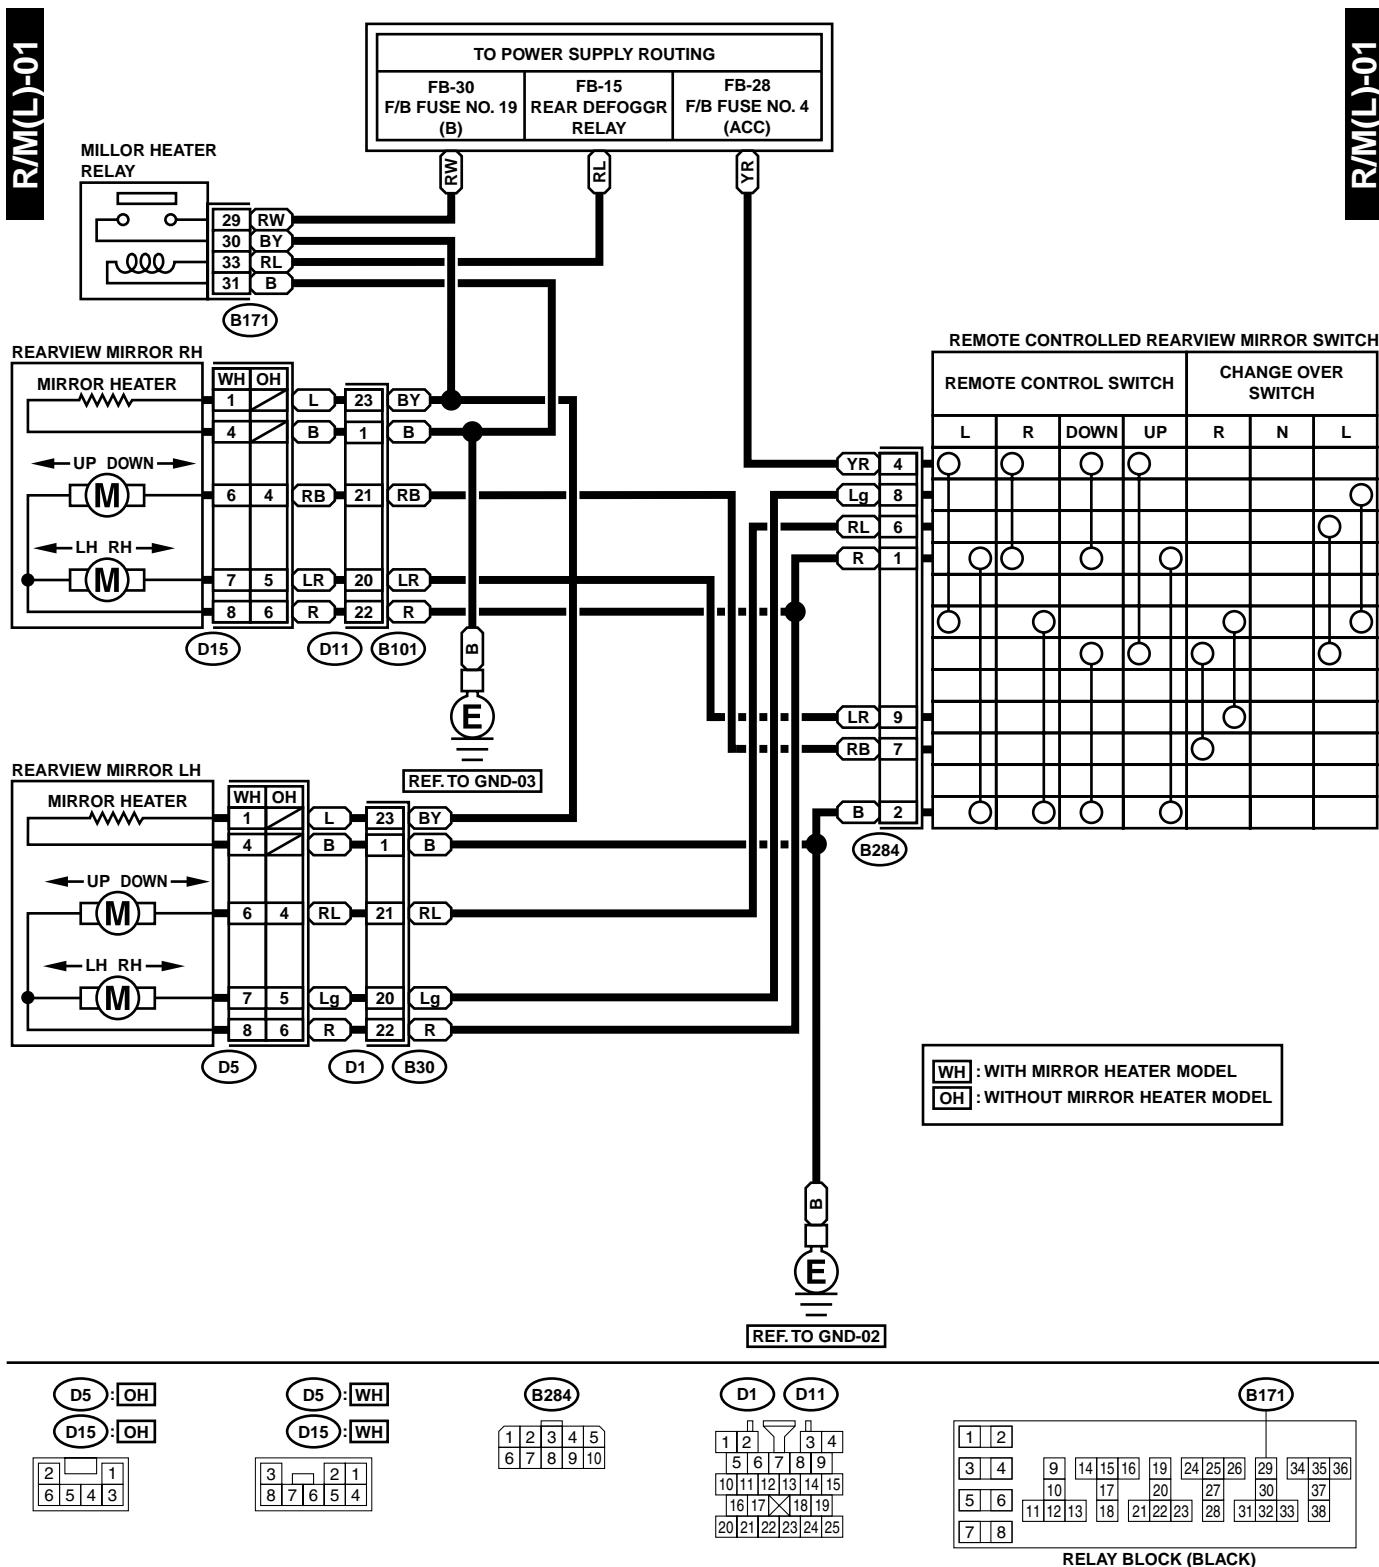

# REMOTE CONTROLLED REARVIEW MIRROR SYSTEM

## WIRING SYSTEM

### 2. RHD MODEL

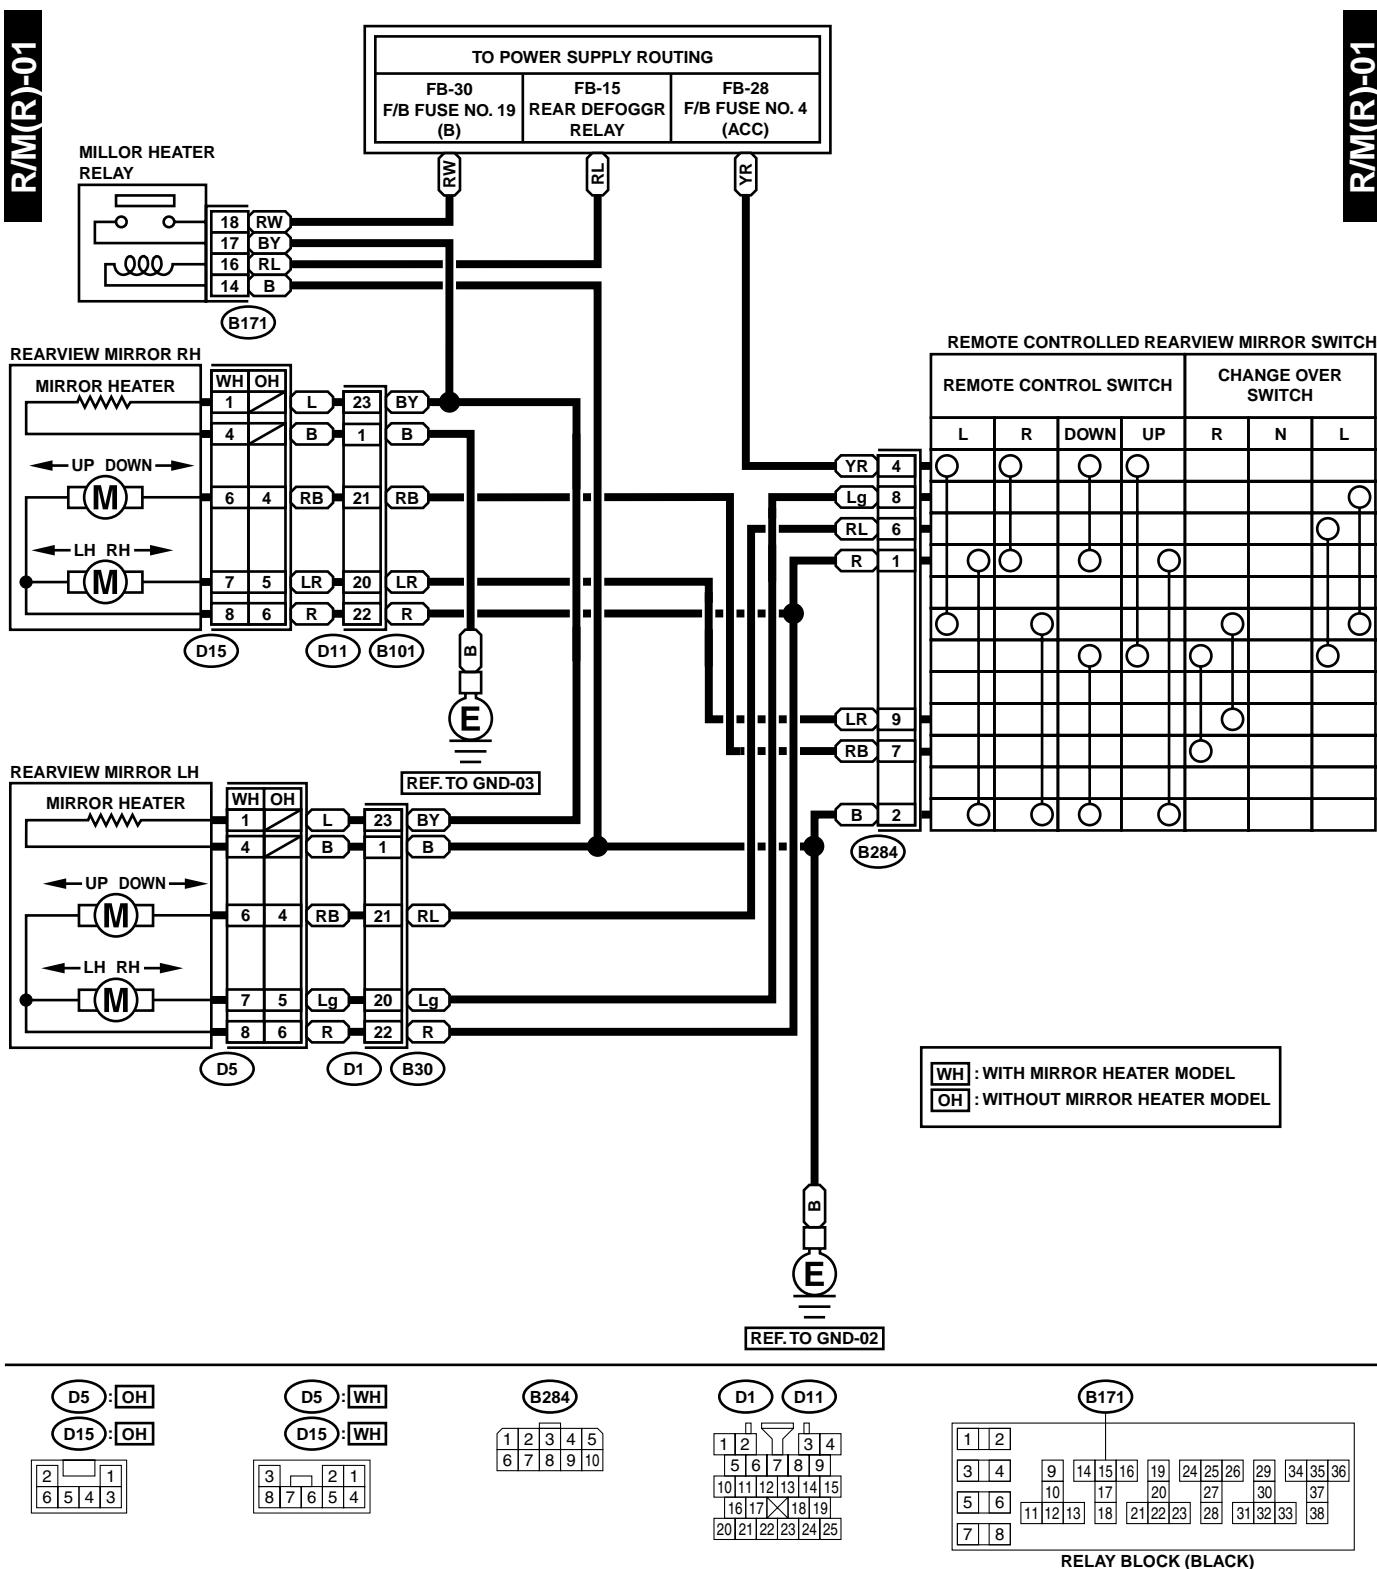


## **39.Seat Belt Warning System**

### **A: SCHEMATIC**

# SEAT BELT WARNING SYSTEM

## WIRING SYSTEM


### 1. WITHOUT SEAT BELT TIMER MODEL

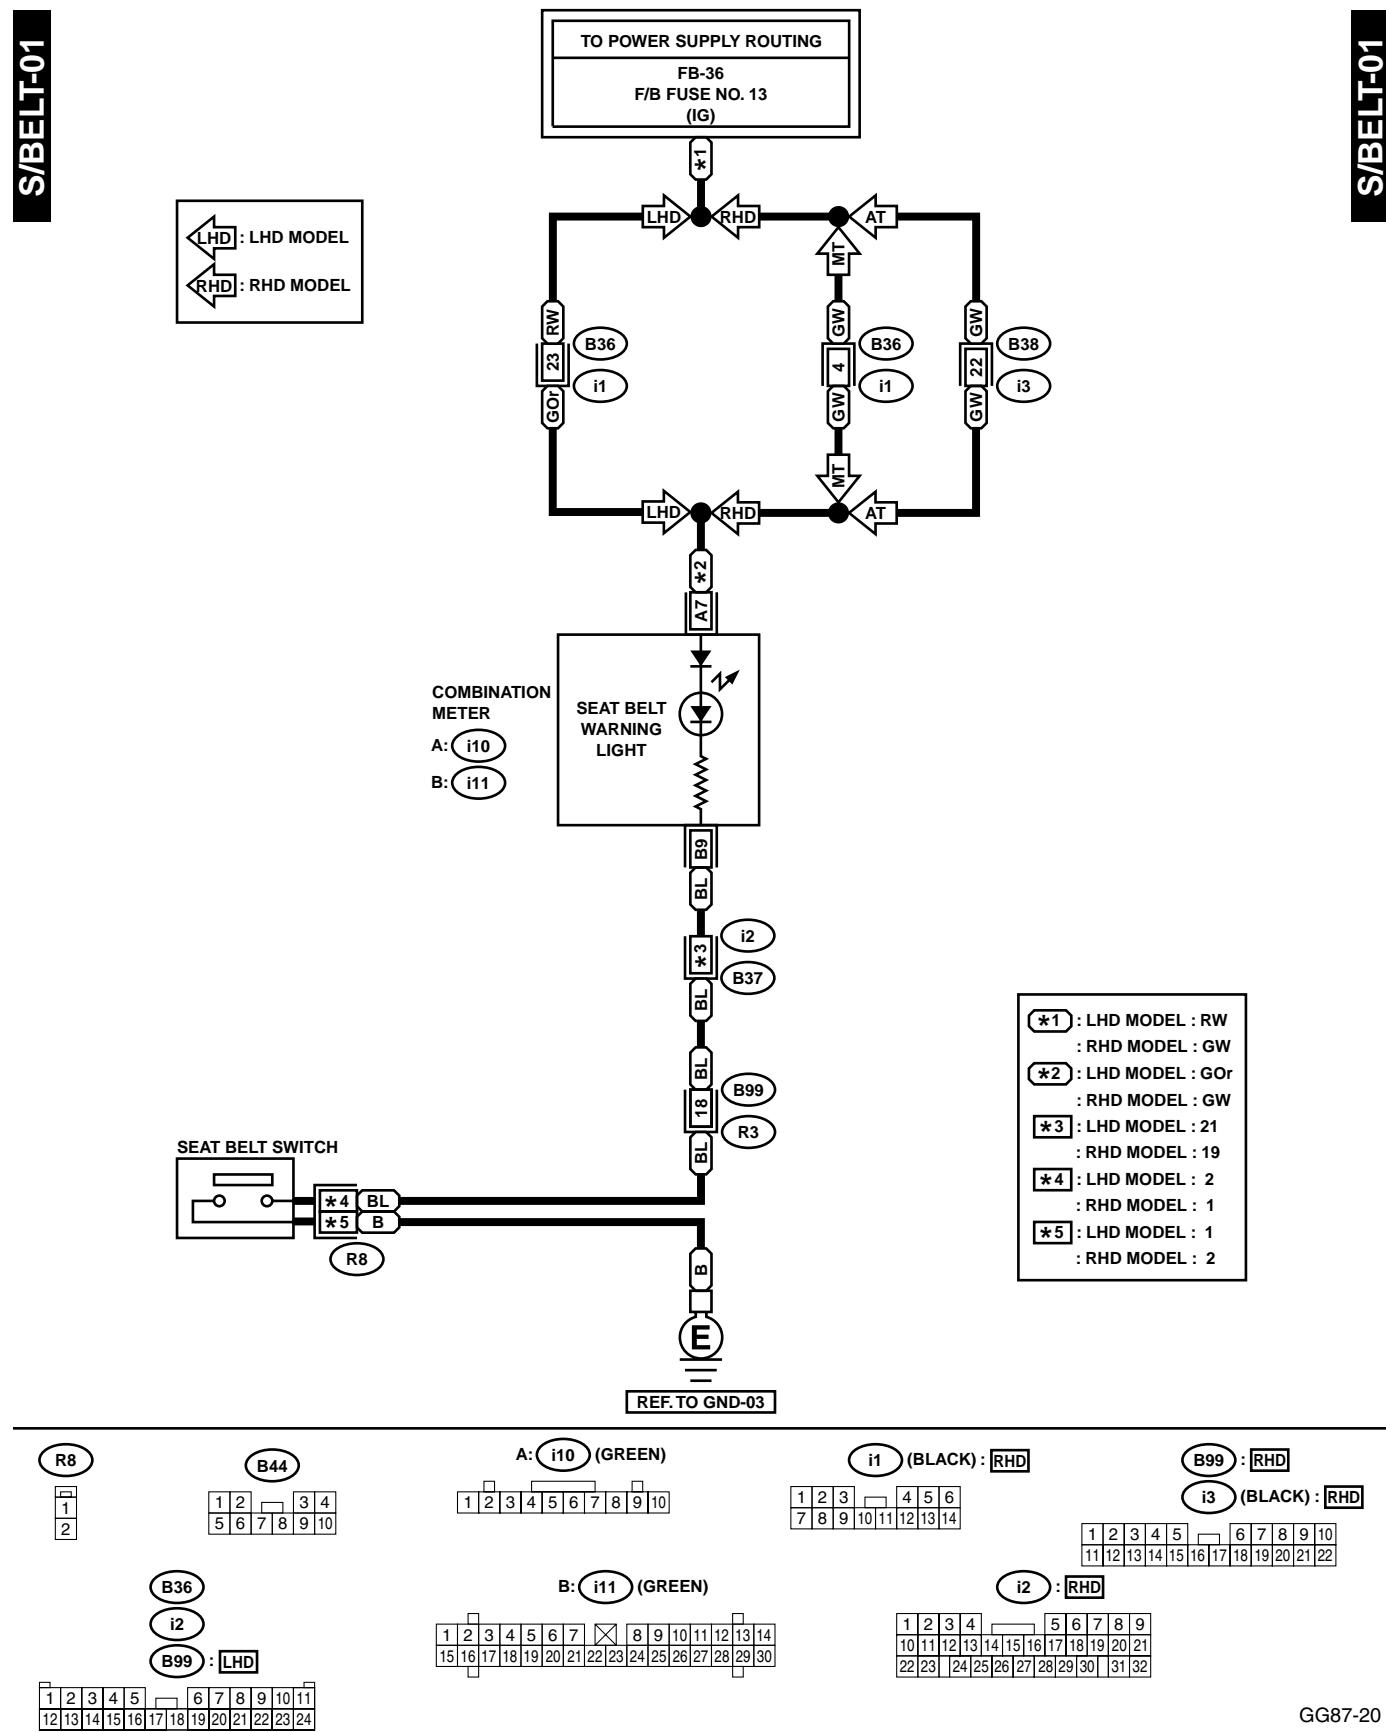

# SEAT BELT WARNING SYSTEM

WIRING SYSTEM

## 2. WITH SEAT BELT TIMER MODEL

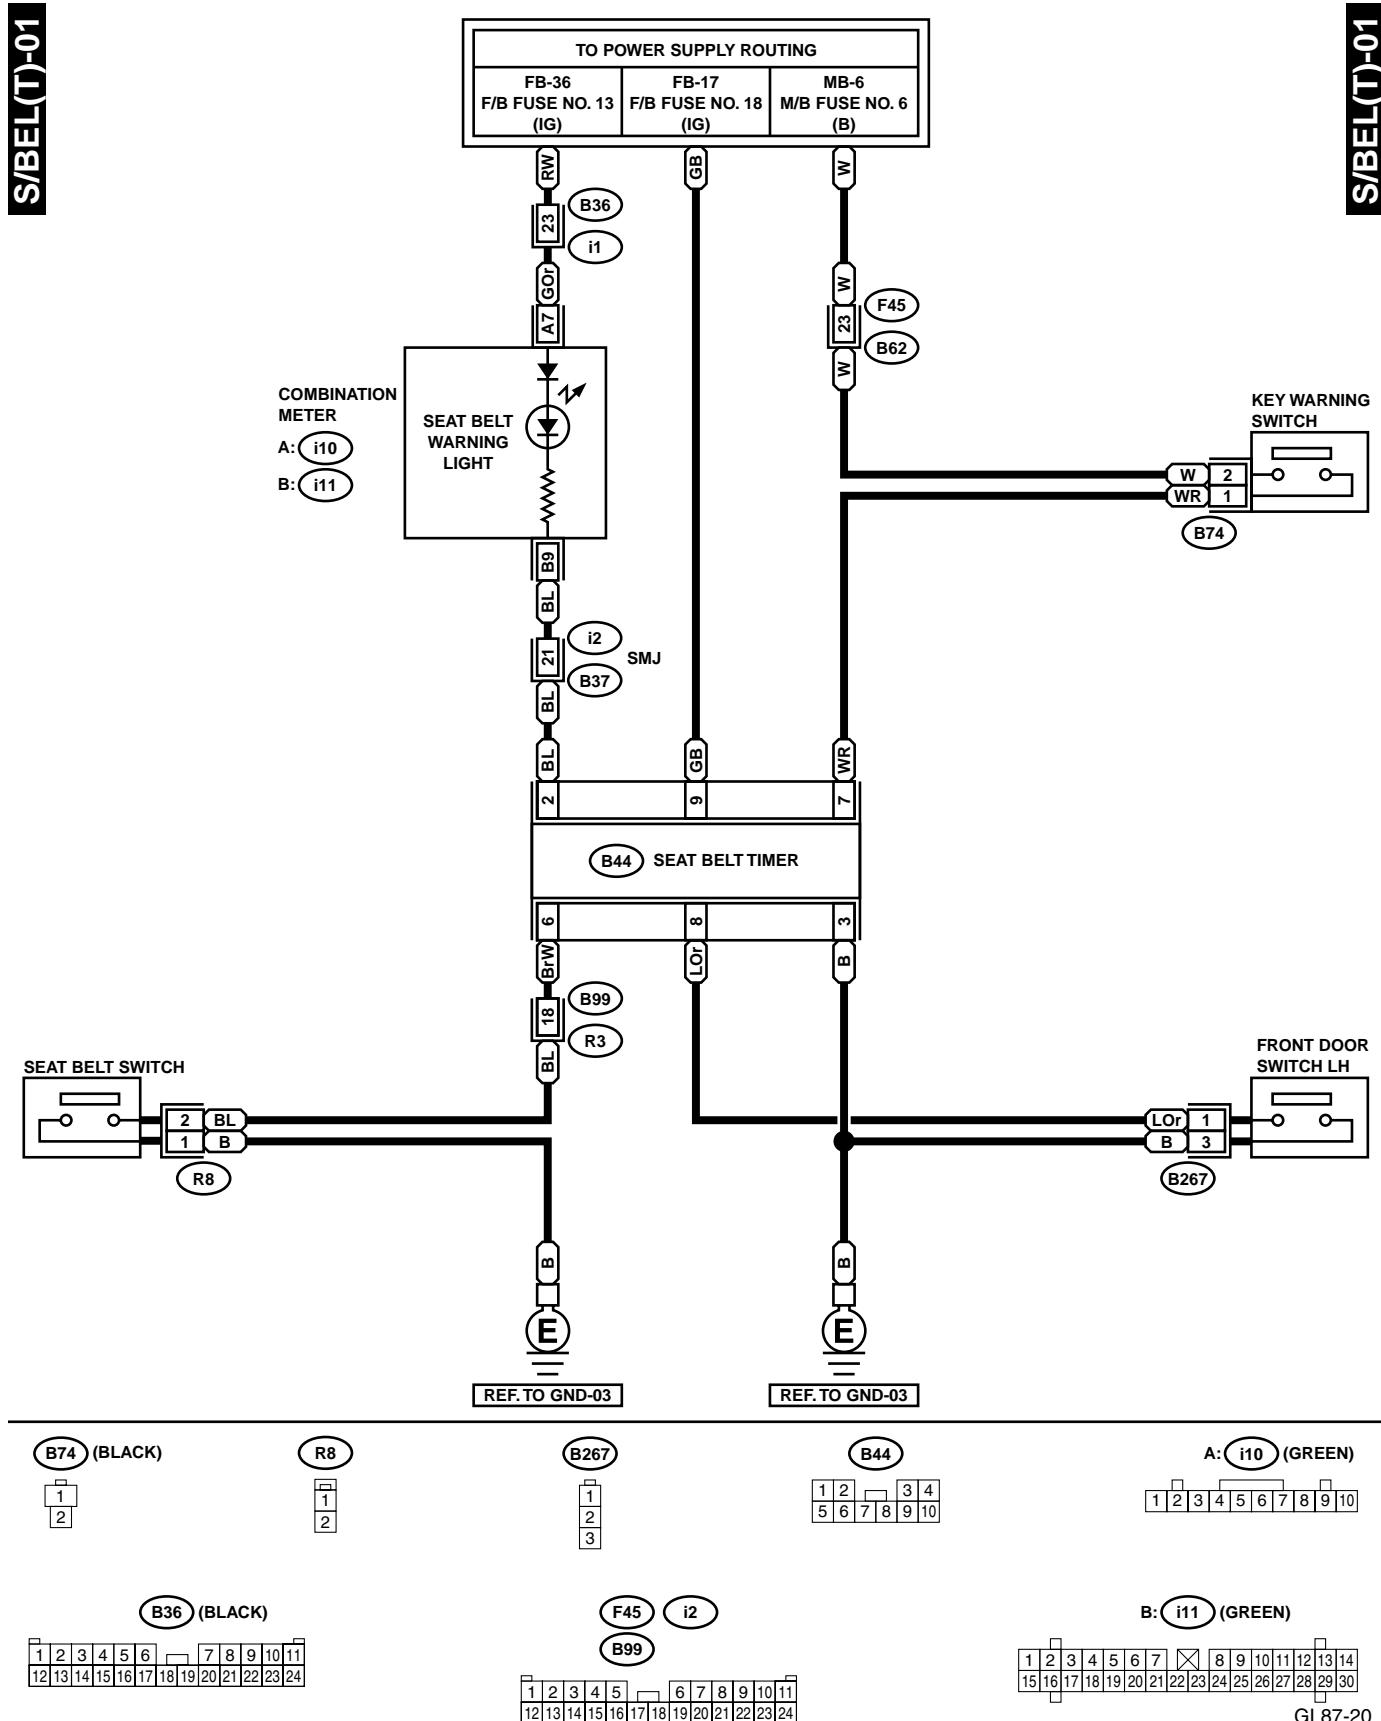

## **STARTER SYSTEM**

WIRING SYSTEM

---


### **40. Starter System**

#### **A: SCHEMATIC**

# STARTER SYSTEM

WIRING SYSTEM

## 1. MT MODEL

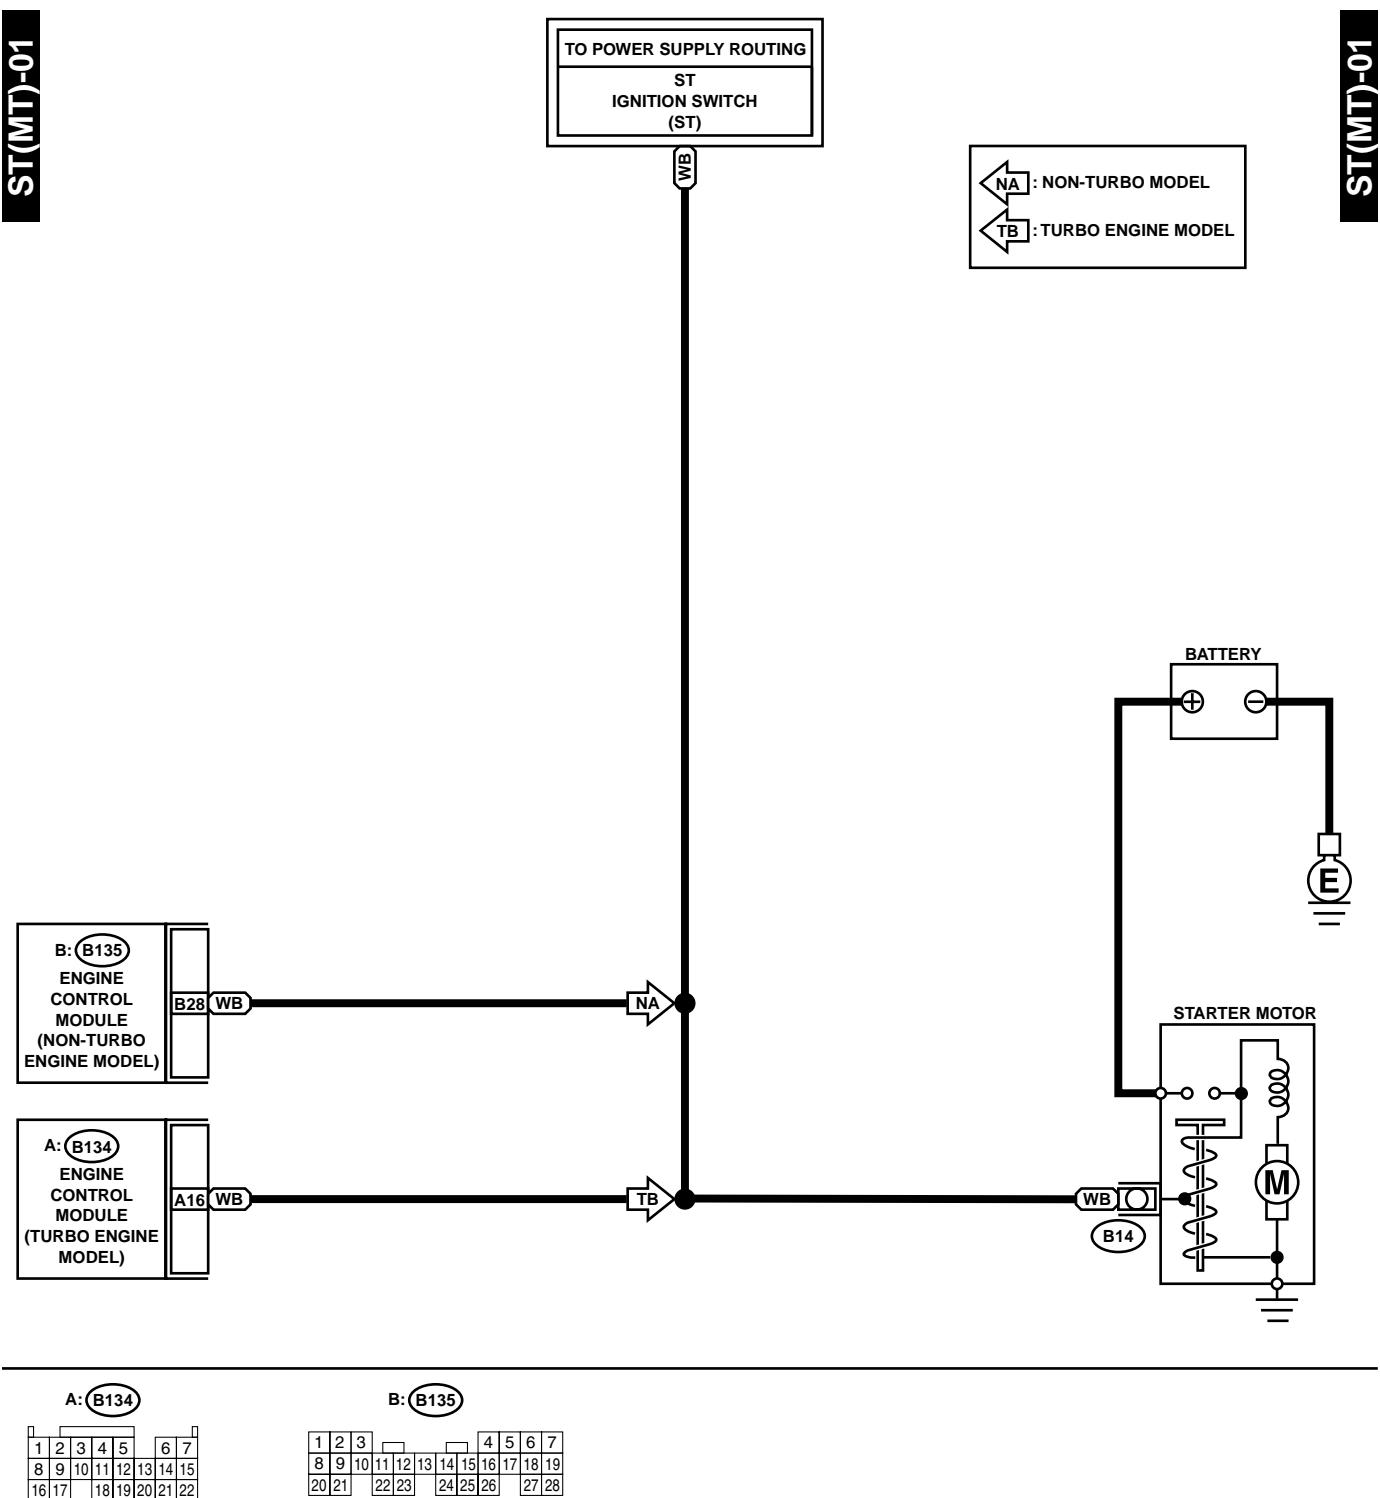


GG03-20

# STARTER SYSTEM

## WIRING SYSTEM


### 2. AT MODEL

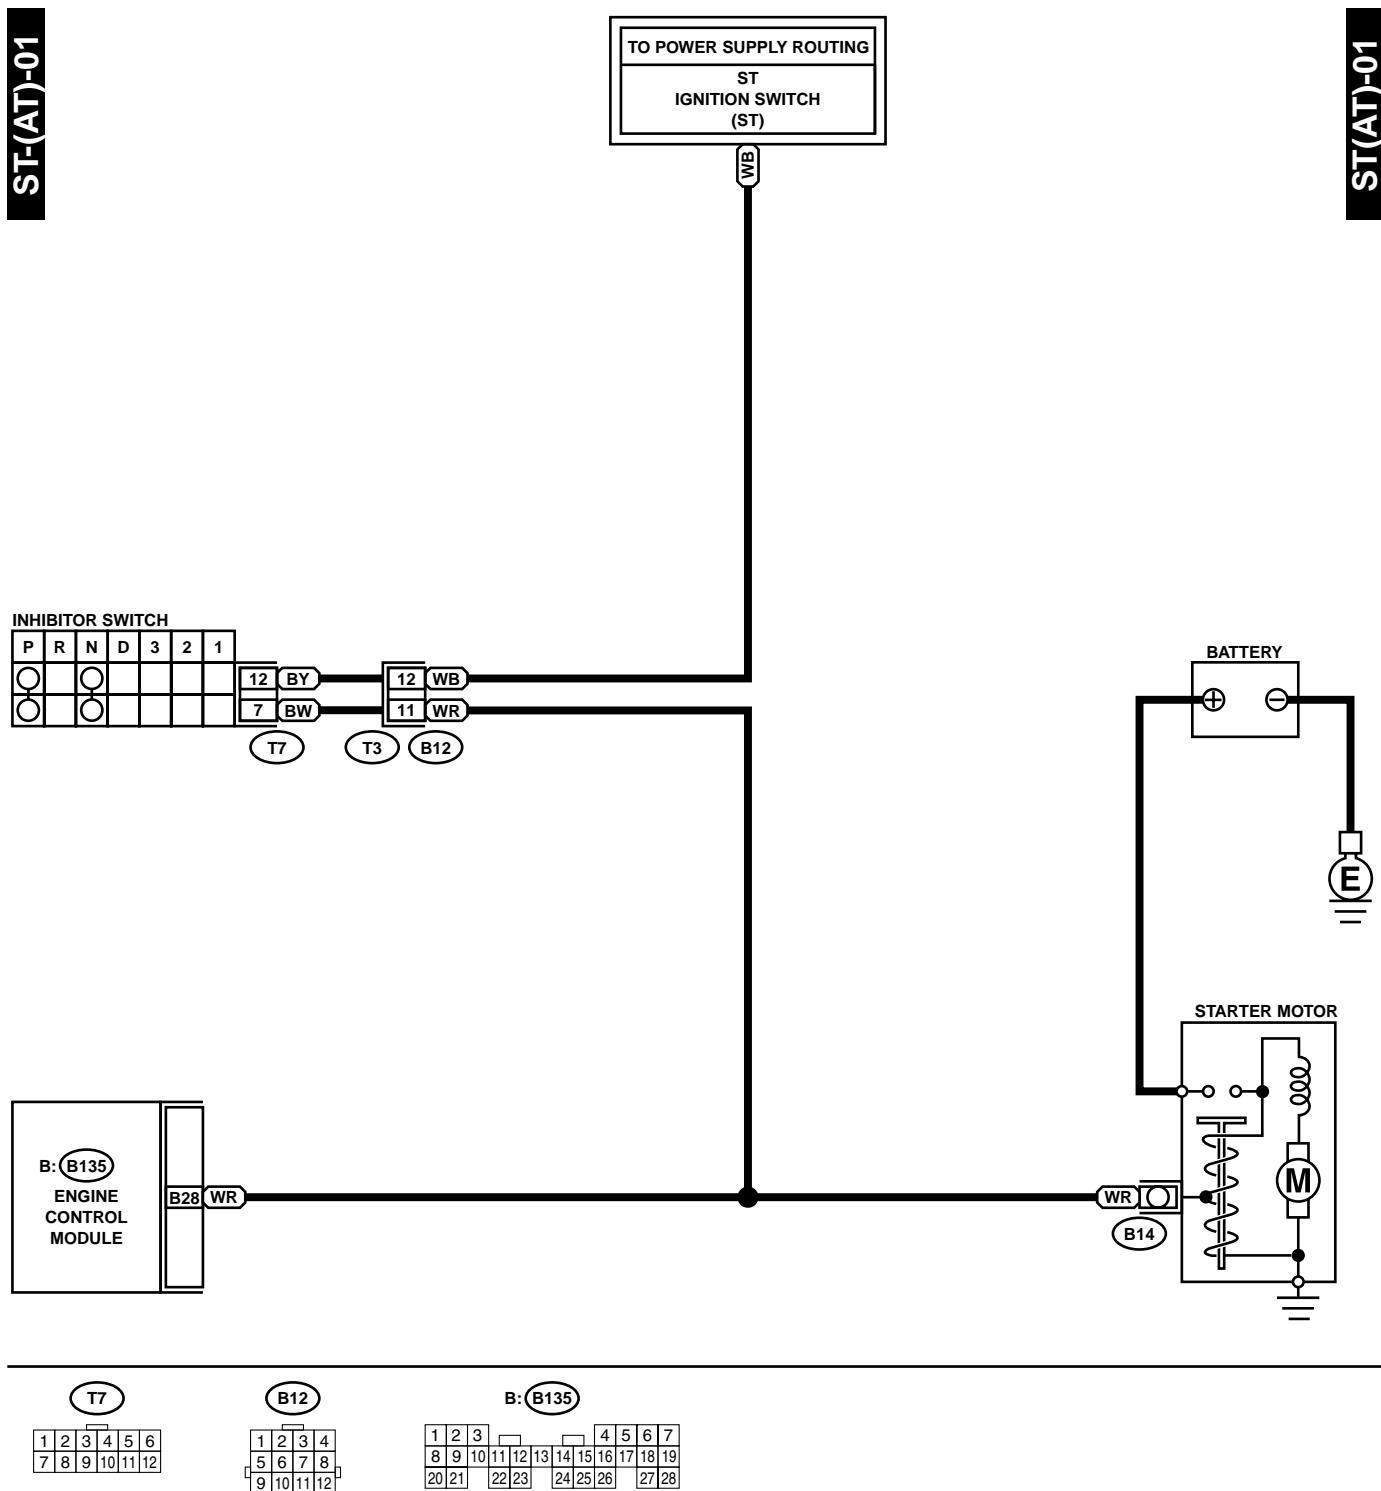

GG03-21

# 41. Sunroof System

## A: SCHEMATIC

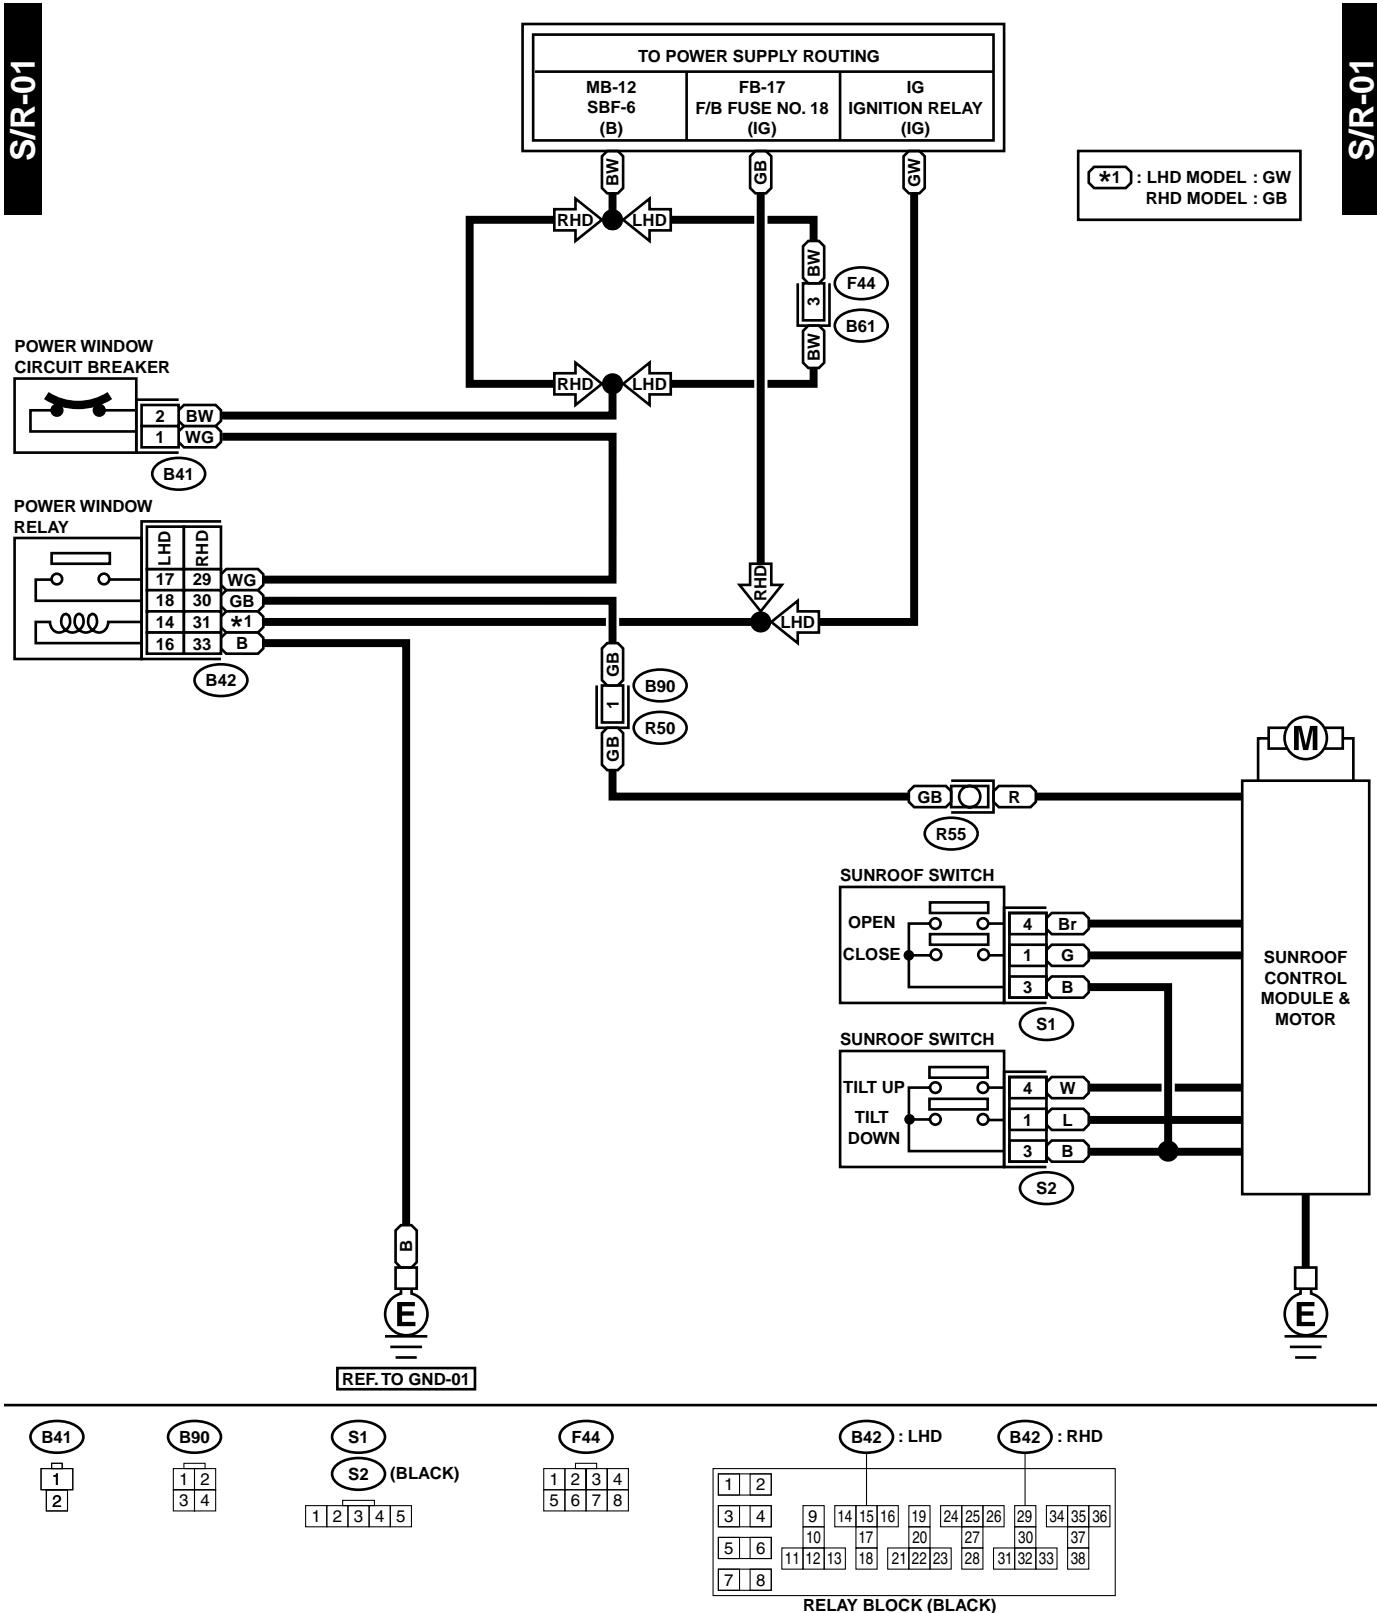

## **WIPER AND WASHER SYSTEM (FRONT)**

WIRING SYSTEM

---


### **42.Wiper and Washer System (Front)**

#### **A: SCHEMATIC**

# WIPER AND WASHER SYSTEM (FRONT)

WIRING SYSTEM


## 1. LHD MODEL

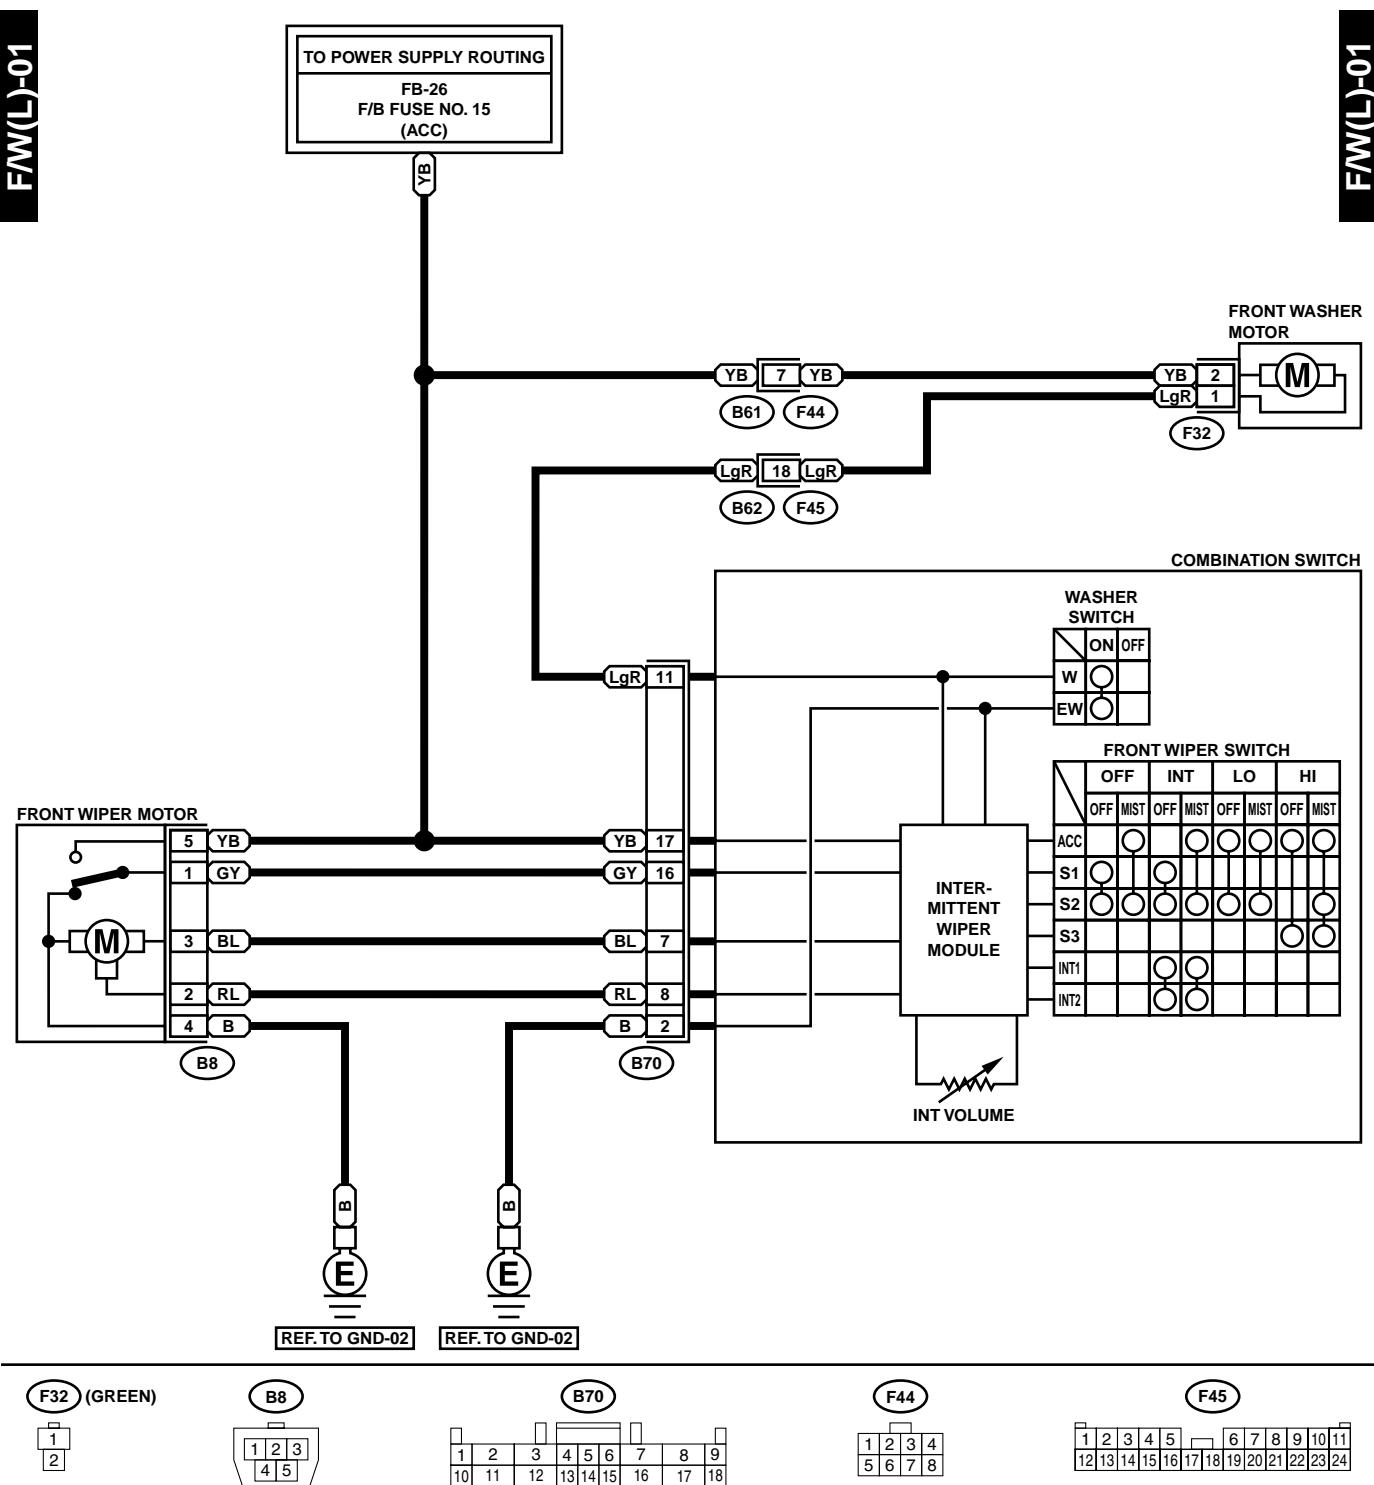

# WIPER AND WASHER SYSTEM (FRONT)

## WIRING SYSTEM

### 2. RHD MODEL

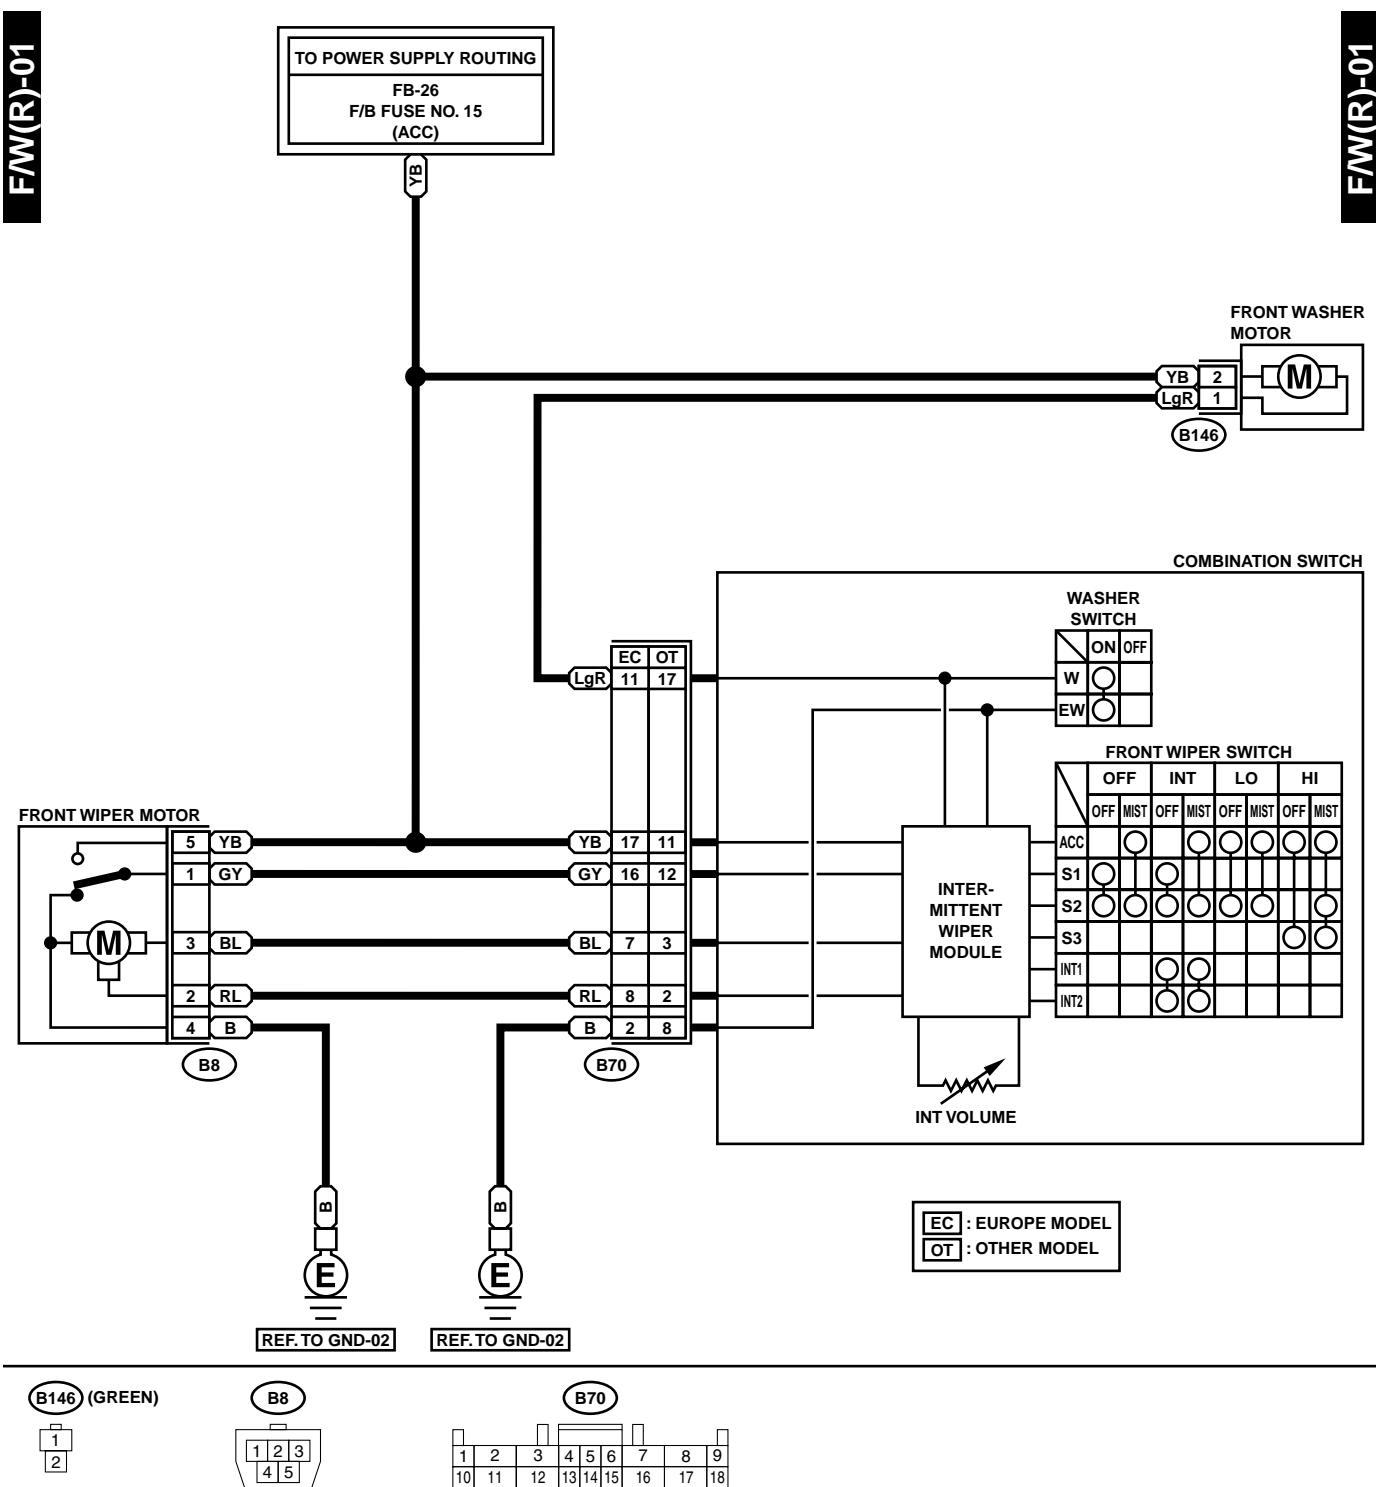


**43.Wiper and Washer System (Rear)**

**A: SCHEMATIC**

# WIPER AND WASHER SYSTEM (REAR)

## WIRING SYSTEM


### 1. LHD MODEL

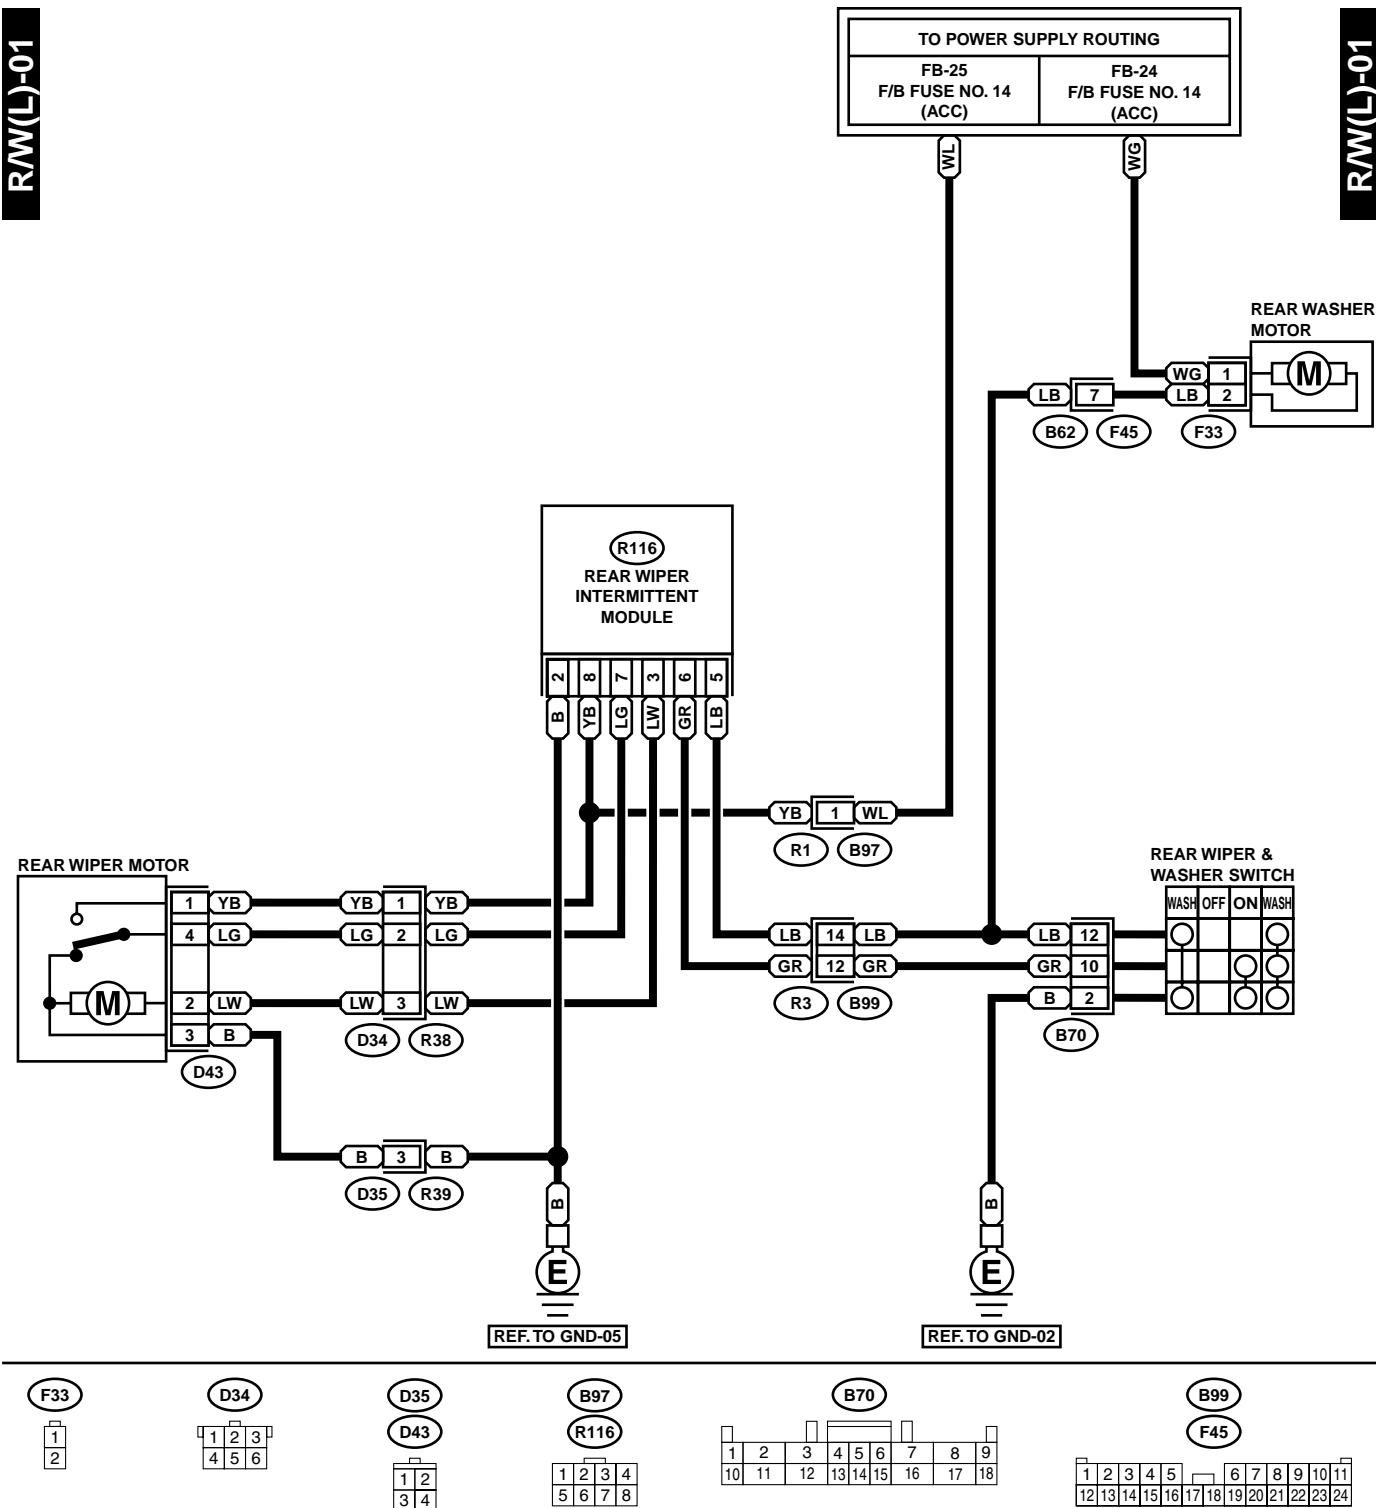

# WIPER AND WASHER SYSTEM (REAR)

WIRING SYSTEM

## 2. RHD MODEL

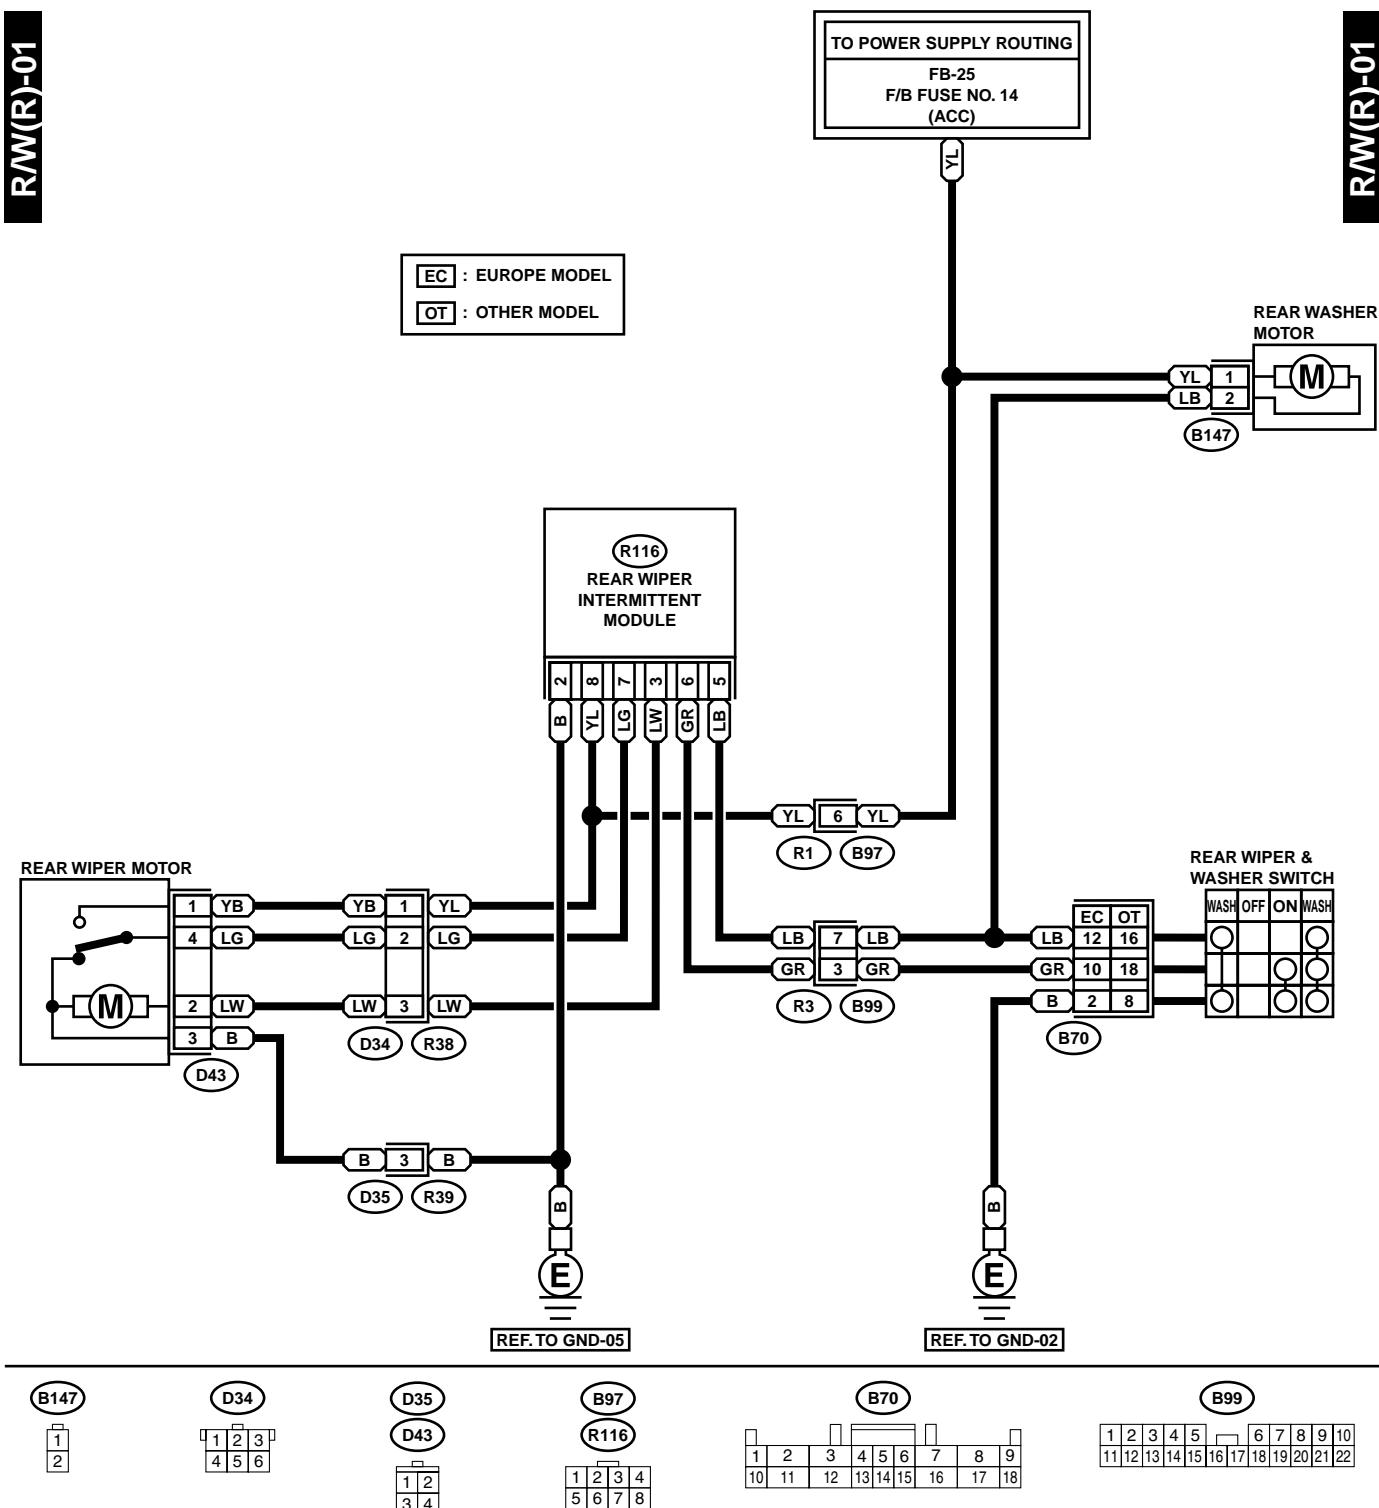

GR51-20


# OVERALL SYSTEMS

## WIRING SYSTEM

### 44. Overall Systems

#### A: LOCATION

##### 1. LHD MODEL

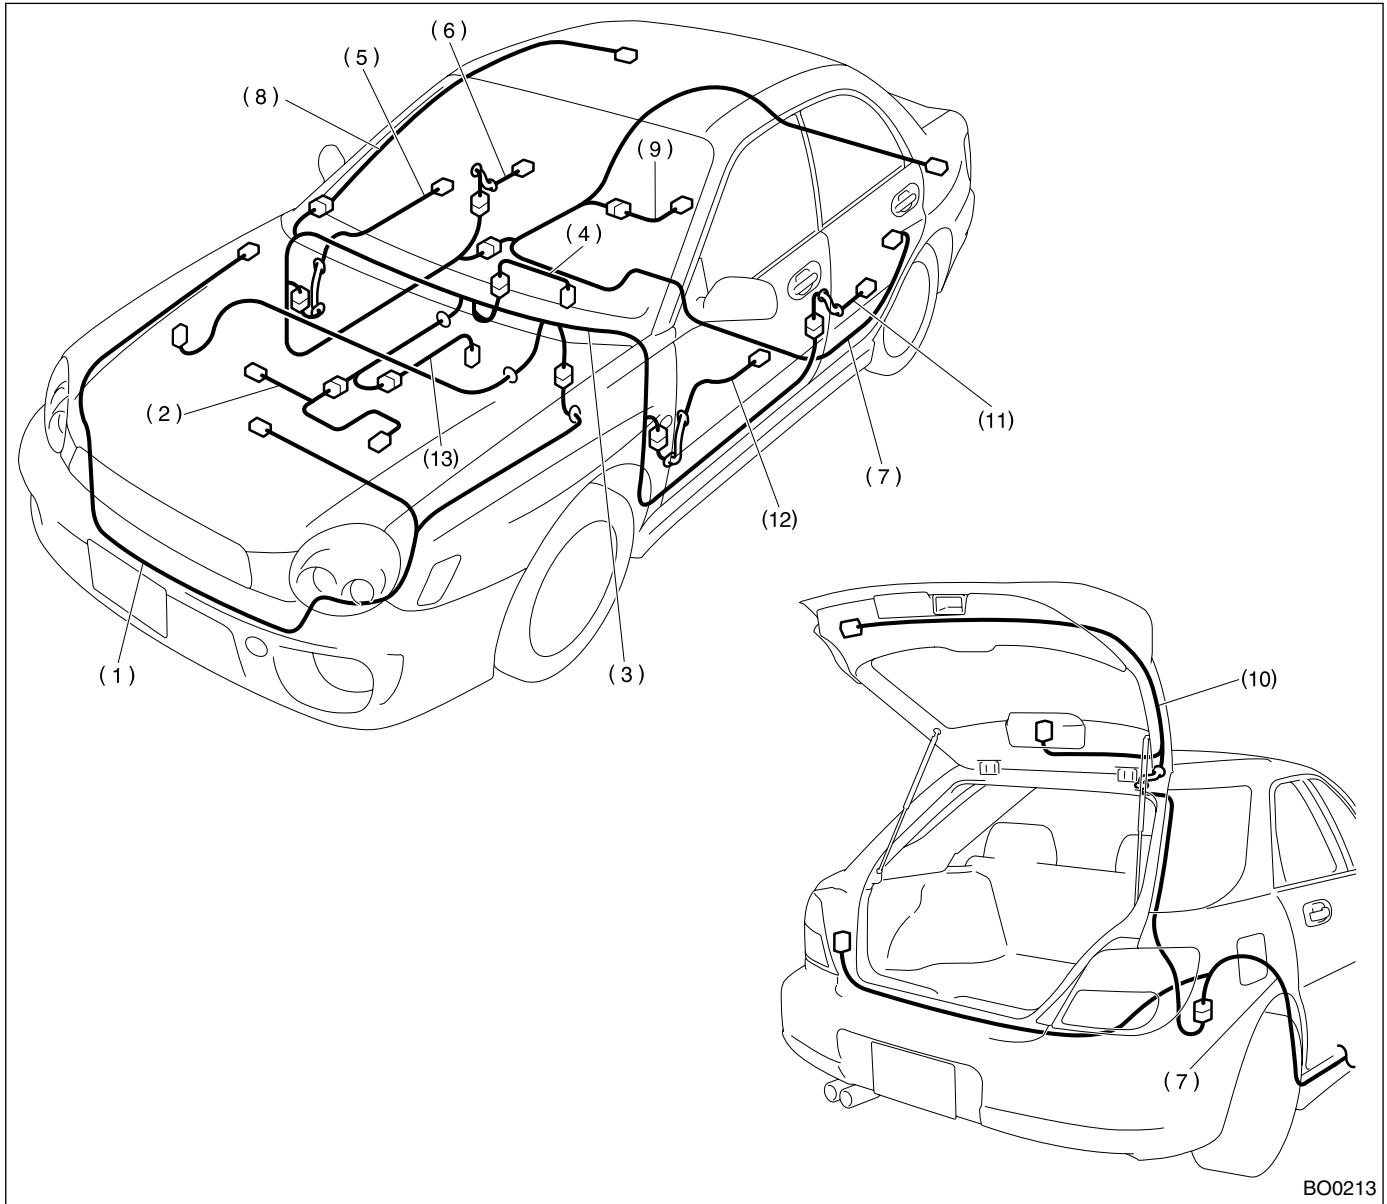


- |                                     |                         |                         |
|-------------------------------------|-------------------------|-------------------------|
| (1) Front wiring harness            | (6) Rear door cord RH   | (11) Rear door cord LH  |
| (2) Engine wiring harness           | (7) Rear wiring harness | (12) Front door cord LH |
| (3) Bulkhead wiring harness         | (8) Roof cord           | (13) Transmission cord  |
| (4) Instrument panel wiring harness | (9) Fuel tank cord      |                         |
| (5) Front door cord RH              | (10) Trunk lid cord     |                         |

# OVERALL SYSTEMS

## WIRING SYSTEM

### 2. RHD MODEL

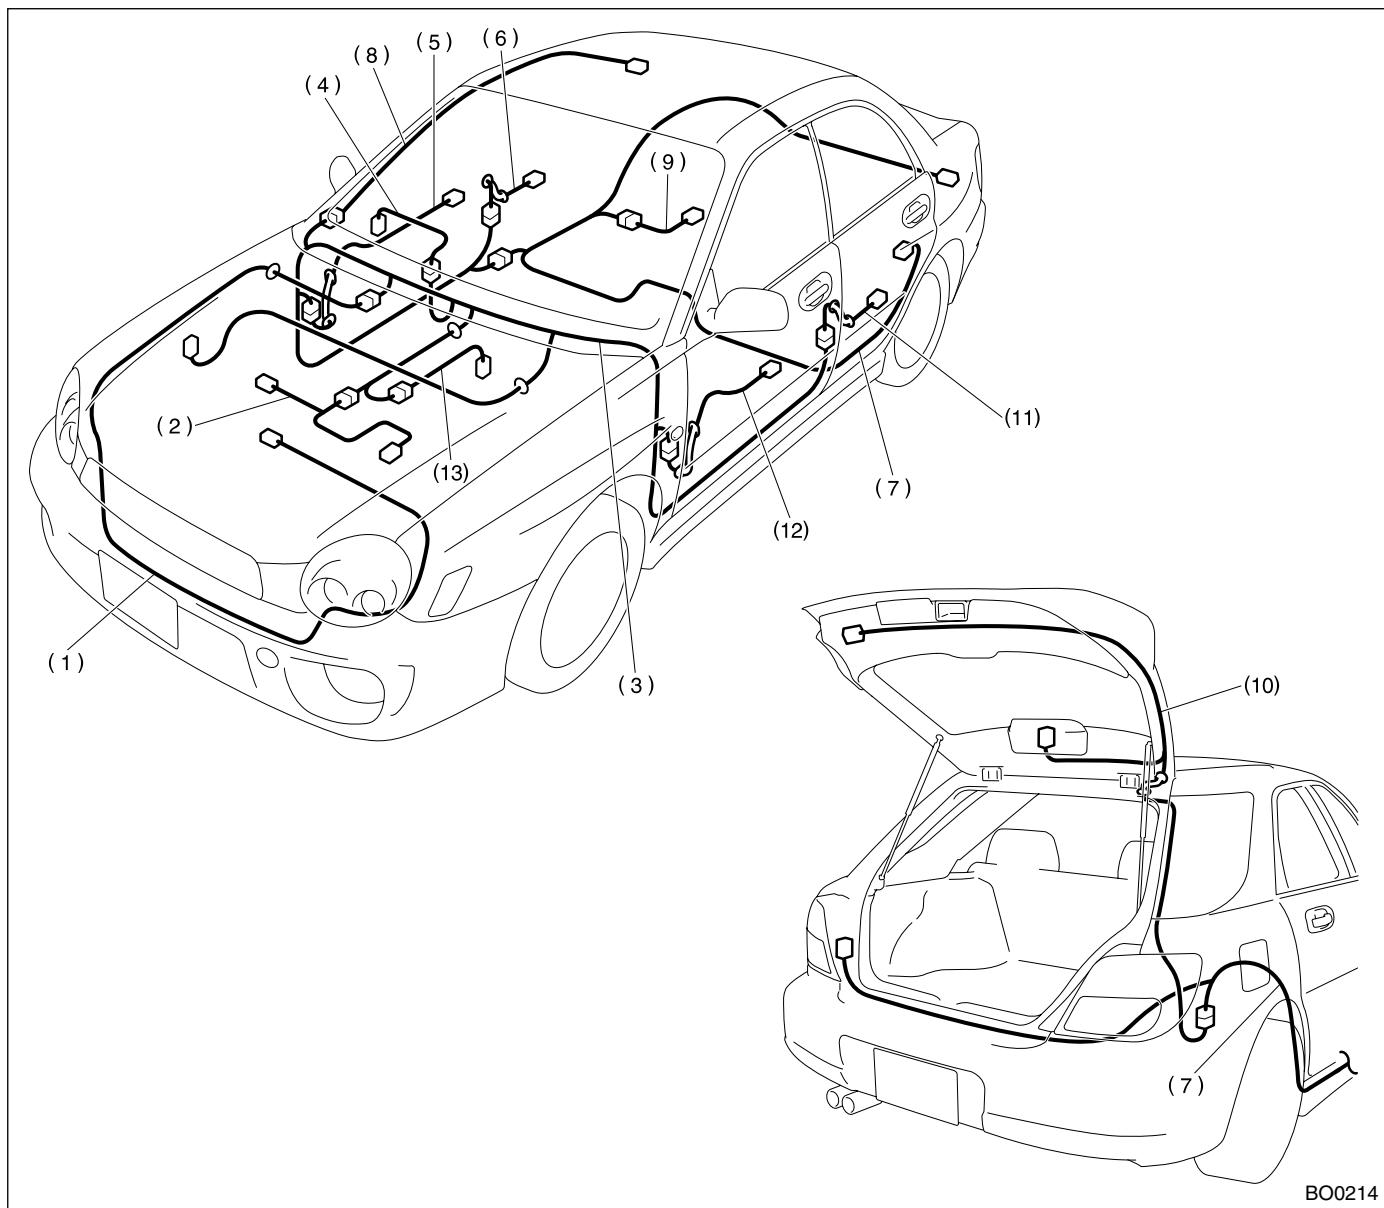

- |                                     |                         |                         |
|-------------------------------------|-------------------------|-------------------------|
| (1) Front wiring harness            | (6) Rear door cord RH   | (11) Rear door cord LH  |
| (2) Engine wiring harness           | (7) Rear wiring harness | (12) Front door cord LH |
| (3) Bulkhead wiring harness         | (8) Roof cord           | (13) Transmission cord  |
| (4) Instrument panel wiring harness | (9) Fuel tank cord      |                         |
| (5) Front door cord RH              | (10) Trunk lid cord     |                         |

# FRONT WIRING HARNESS

## WIRING SYSTEM

### 45.Front Wiring Harness

#### A: LOCATION

##### 1. LHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
F4	3	Gray	B-1		Front clearance light RH and front turn signal light RH
F5	1	Black	C-2		Horn
F6	2	Black	C-1		Front fog light RH
F7	3	★	B-1		Headlight RH
F16	2	Black	D-1		Sub fan motor (Non-turbo model)
	3	Black	D-1		Sub fan motor (Turbo model)
F17	2	Black	C-2		Radiator main fan motor (Non-turbo model)
	3	Black	C-2		Radiator main fan motor (Turbo model)
F21	2	Black	D-3		Front fog light LH
F22	3	Gray	B-3		Front clearance light LH and front turn signal light LH
F23	3	★	C-2		Headlight LH
F24	3	Gray	B-2		A/C compressor
F25	1	★	B-2		Generator
F26	3	Green	B-2		
F27	4	Black	C-4		A/C fuse (Relay holder)
F28	4	Black	C-4		A/C sub fan relay-1 (Relay holder-turbo model)
F29	4	Black	C-4		A/C sub fan relay (Relay holder-non-turbo model)
	4	Black	C-4		A/C sub fan relay-2 (Relay holder-turbo model)
F30	4	Black	C-4		Radiator main fan relay-2 (Relay holder-turbo model)
F31	4	Black	C-4		A/C relay (Relay holder)
F32	2	Green	B-4		Front washer motor
F33	2	★	B-4		Rear washer motor
F34	4	Black	B-4		SBF holder
F35	2	Black	B-3		M/B
F36	3	★	A-3		
F37	6	Black	A-3		
F38	1	★	A-3		
F39	8	Black	B-3		F/B
F40	9	Brown	B-3		
F41	7	Gray	A-4		F/B
F44	8	★	A-3	B61	Bulkhead wiring harness
F45	24	★	B-3	B62	Bulkhead wiring harness
F46	2	Black	B-3	B108	Bulkhead wiring harness
F47	1	Black	C-2		Horn
F49	31	Black	A-1		ABS control module
F51	2	★	A-2		Side turn signal light RH
F54	2	★	B-4		Side turn signal light LH
F58	3	Black	C-4		Headlight beam leveler LH
F59	3	Black	B-1		Headlight beam leveler RH
F60	16	Brown	B-4	E3	Engine wiring harness (Turbo model)
F61	20	Black	B-4	E2	Engine wiring harness (Turbo model)
F62	8	★	B-2		Shield joint connector (ABS)
F66	4	Black	C-4		Radiator main fan relay (Relay holder-non-turbo model)
	4	Black	C-4		Radiator main fan relay-1 (Relay holder-turbo model)
F67	2	Black	C-4		FWD switch (AWD AT model)

# FRONT WIRING HARNESS


WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
F68	4	Black	B-3		M/B
F73	1	★	B-1		ABS motor ground
F74	20	★	A-2	B200	Bulkhead wiring harness (ABS)
F76	40	Gray	A-3	B209	Bulkhead wiring harness (SMJ)
F78	2	Black	C-2		Ambient sensor
F79	2	Gray	B-3		A/C pressure switch
F94	2	Gray	A-3		ABS front sensor LH
F95	2	Gray	A-2		ABS front sensor RH

★: Non-colored

# FRONT WIRING HARNESS

## WIRING SYSTEM

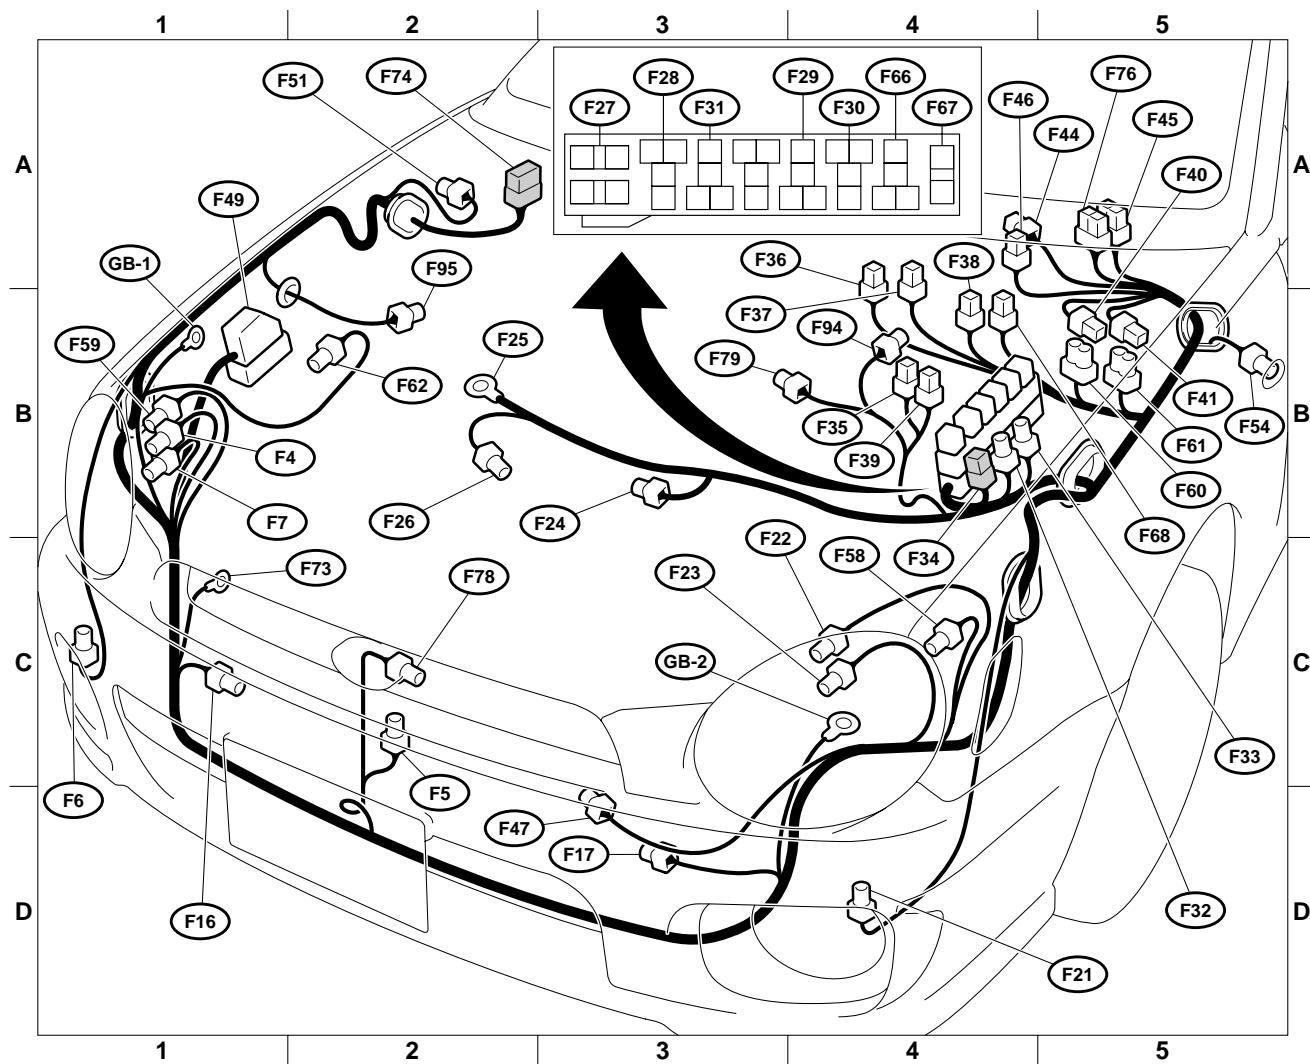

BO0215

# **FRONT WIRING HARNESS**

**WIRING SYSTEM**

---

# FRONT WIRING HARNESS

## WIRING SYSTEM


### 2. RHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
F4	3	Gray	B-1		Front clearance light RH and front turn signal light RH
F5	1	Black	C-2		Horn
F6	2	Black	C-1		Front fog light RH
F7	3	★	B-1		Headlight RH
F16	2	Black	D-1		Sub fan motor (Non-turbo model)
	3	Black	D-1		Sub fan motor (Turbo model)
F17	2	Black	D-2		Radiator main fan motor (Non-turbo model)
	3	Black	D-2		Radiator main fan motor (Turbo model)
F21	2	Black	D-4		Front fog light LH
F22	3	Gray	C-3		Front clearance light LH and front turn signal light LH
F23	3	★	C-3		Headlight LH
F24	3	Gray	B-2		A/C compressor
F25	1	★	B-2		Generator
F26	3	Green	B-2		
F27	4	Black	A-3		A/C fuse (Relay holder)
F28	4	Black	A-3		A/C sub fan relay-1 (Relay holder-turbo model)
F29	4	Black	A-4		A/C sub fan relay (Relay holder-non-turbo model)
	4	Black	A-4		A/C sub fan relay-2 (Relay holder-turbo model)
F30	4	Black	A-4		Radiator main fan relay-2 (Relay holder-turbo model)
F31	4	Black	A-3		A/C relay (Relay holder)
F34	4	Black	B-4		SBF holder
F35	2	Black	B-4		M/B
F39	8	Black	B-4		
F41	7	Gray	A-3		F/B
F44	8	★	A-3	B61	Bulkhead wiring harness
F45	18	Black	A-2	B62	Bulkhead wiring harness
F47	1	★	C-2		Horn
F49	31	Black	A-1		ABS control module
F51	2	★	A-2		Side turn signal light RH
F58	3	Black	C-4		Headlight beam leveler LH
F59	3	Black	B-1		Headlight beam leveler RH
F62	8	★	B-2		Shield joint connector (ABS)
F66	4	Black	A-4		Radiator main fan relay (Relay holder-non-turbo model)
	4	Black	A-4		Radiator main fan relay-1 (Relay holder)
F67	2	Black	A-4		FWD switch (AWD AT model)
F73	1	★	B-2		ABS motor ground
F74	22	★	A-3	B200	Bulkhead wiring harness (ABS)
F78	2	Black	C-2		Ambient sensor
F79	2	Gray	C-2		A/C pressure switch
F94	2	Gray	A-3		ABS front sensor LH
F95	2	Gray	A-2		ABS front sensor RH
F96	1	White	D-4	B255	Bulkhead wiring harness

★:Non-colored

# FRONT WIRING HARNESS

WIRING SYSTEM

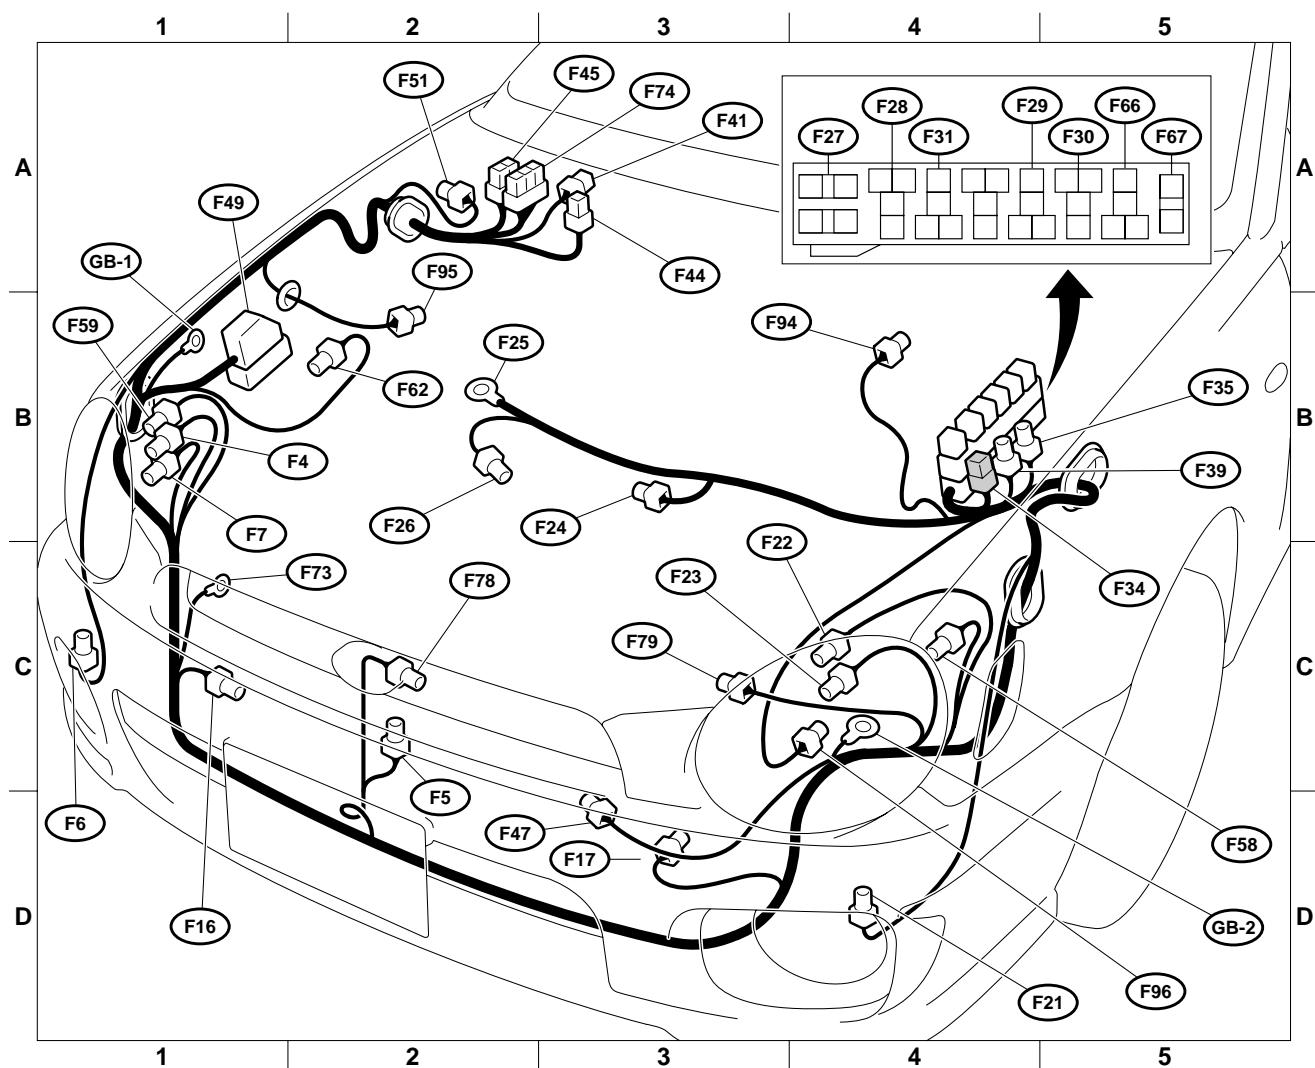

BO0216


**46.Bulkhead Wiring Harness (In Engine Room)****A: LOCATION****1. LHD NON-TURBO ENGINE MODEL**

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B8	5	Gray	A-2		Front wiper motor
B11	20	Black	B-2	T4	Transmission (AT)
B12	12	★	B-3	T3	
B14	1	★	B-3		Starter (Magnet)
B16	2	Gray	A-2		Brake fluid level switch
B17	3	★	C-2		Vehicle speed sensor (MT)
B18	4	★	C-4		Oxygen sensor (Catalytic converter equipped vehicle without OBD)
B20	10	★	C-4	E1	Engine wiring harness
B21	20	Light gray	C-3	E2	
B22	16	Brown	C-3	E3	
B24	2	Gray	B-2	T1	Back-up light switch (MT)
B25	2	Brown	A-2	T2	Neutral position switch (MT)
B28	3	★	C-4		CO resistor
B29	2	★	B-2	T8	Lo (AWD) indicator light switch (MT)

★:Non-colored

# BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

WIRING SYSTEM

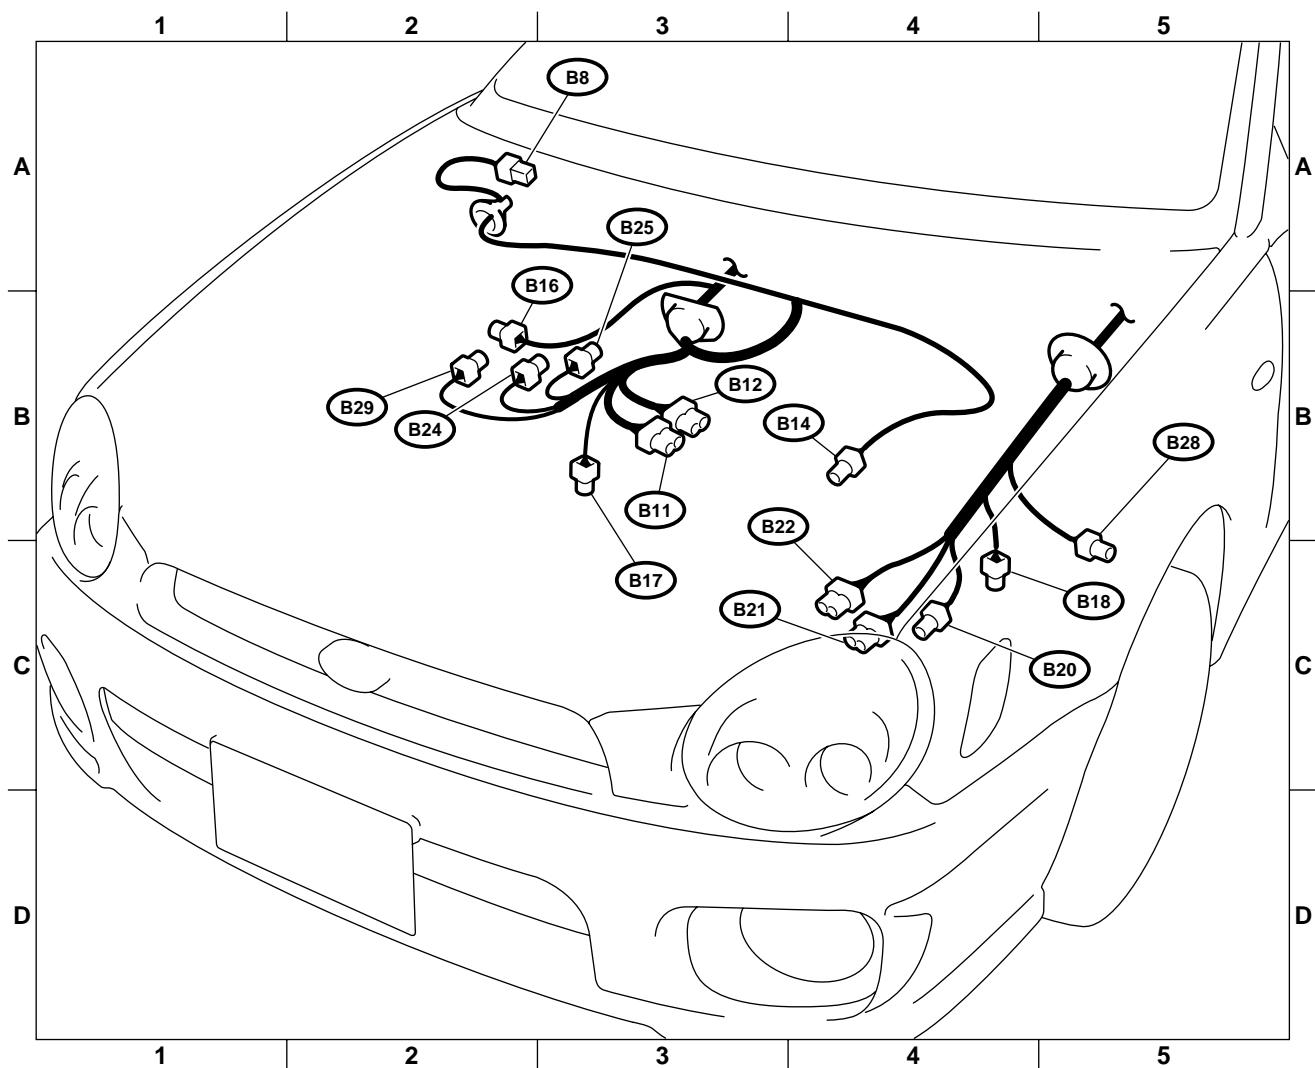

BO0218

WI-267

# BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

## WIRING SYSTEM


### 2. LHD TURBO ENGINE MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B3	5	Gray	C-4		Mass air flow sensor
B8	5	★	A-2		Front wiper motor
B14	1	★	B-3		Starter (Magnet)
B16	2	Gray	B-2		Brake fluid level switch
B17	4	★	B-2		Vehicle speed sensor (MT)
B18	4	★	C-4		Front oxygen (A/F) sensor
B19	4	★	B-2		Rear oxygen sensor
B20	10	★	C-4	E1	Engine wiring harness
B127	2	★	D-4		Waist gate control solenoid valve
B128	4	★	B-2	T9	Transmission (MT)
B279	2	★	C-4		Exhaust temperature sensor

★:Non-colored

# BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

WIRING SYSTEM

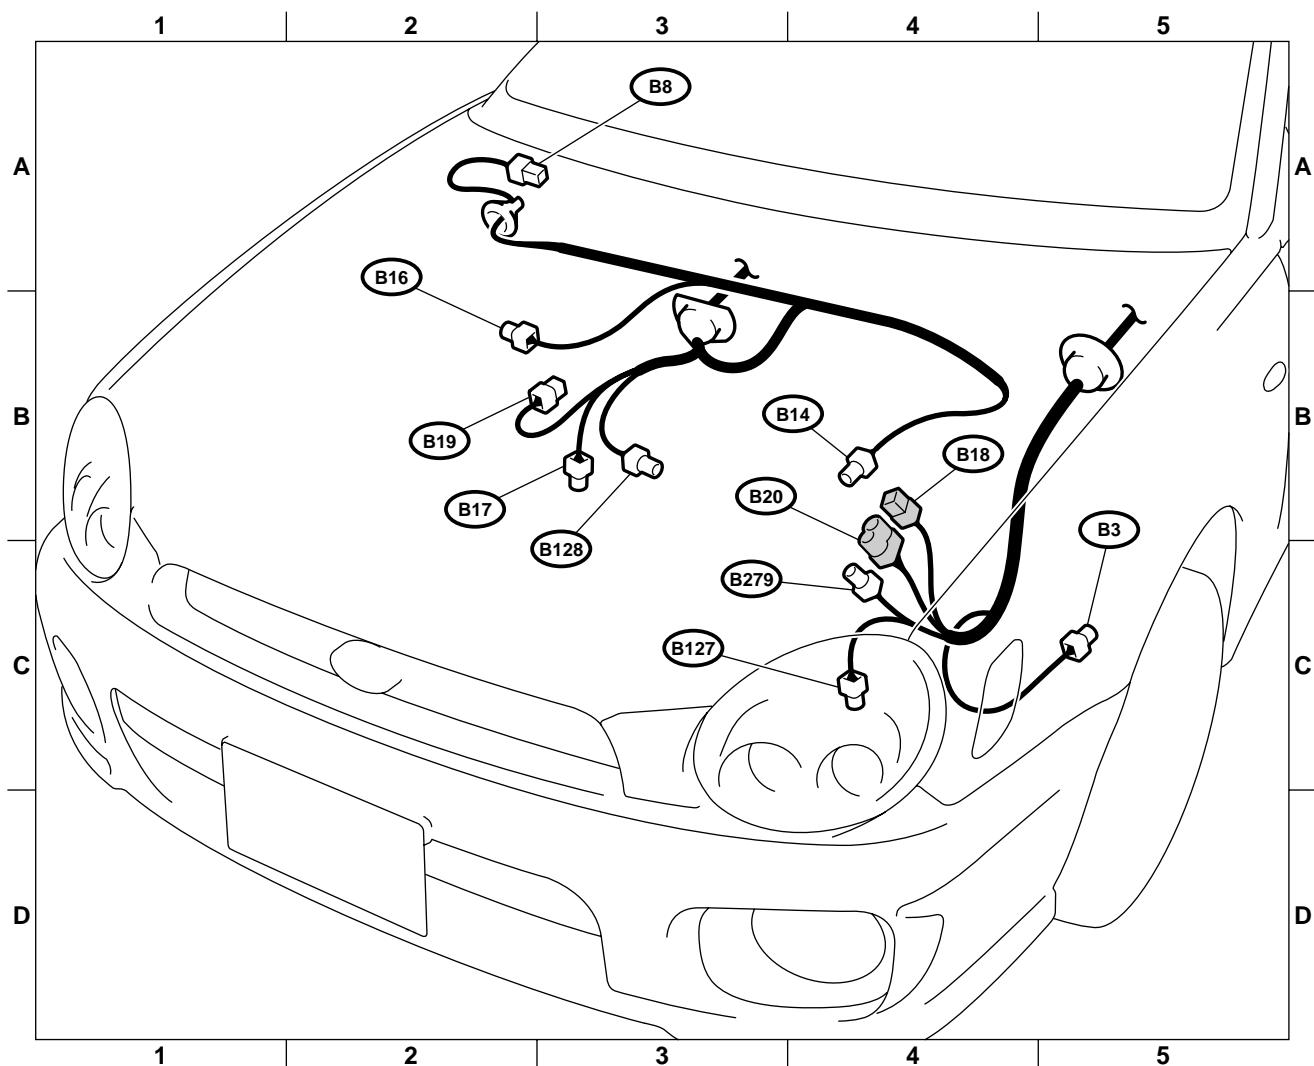

BO0217

# BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

## WIRING SYSTEM


### 3. RHD NON-TURBO ENGINE MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B2	3	★	B-1		Pressure sensor (With OBD)
B7	6	Black	C-4		Cruise control actuator
B8	5	Gray	A-2		Front wiper motor
B11	20	Black	B-2	T4	Transmission (AT)
B12	12	White	B-3	T3	
B14	1	★	B-3		Starter (Magnet)
B16	2	Gray	A-2		Brake fluid level switch
B17	3	★	C-2		Vehicle speed sensor (MT)
B18	4	★	C-4		Oxygen sensor (Catalytic converter equipped vehicle without OBD)
B20	10	★	C-2	E1	Engine wiring harness
B21	20	Light gray	C-2	E2	
B22	16	Brown	C-2	E3	
B24	2	Gray	B-2	T1	Back-up light switch (MT)
B25	2	Brown	A-2	T2	Neutral position switch (MT)
B28	3	★	A-1		CO resistor (Without catalytic converter)
B29	2	★	B-2	T8	Lo (AWD) indicator light switch (MT)
B143	3	★	B-3		M/B
B144	6	Black	B-3		
B145	1	★	C-4		
B146	2	Green	B-3		
B147	2	★	B-3		Front washer motor
B148	2	★	A-4		Rear washer motor
B186	4	Black	B-3		Side turn signal light LH
B255	1	White	C-2	F96	M/B
Front wiring harness (With ABS)					

★:Non-colored

# BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

WIRING SYSTEM

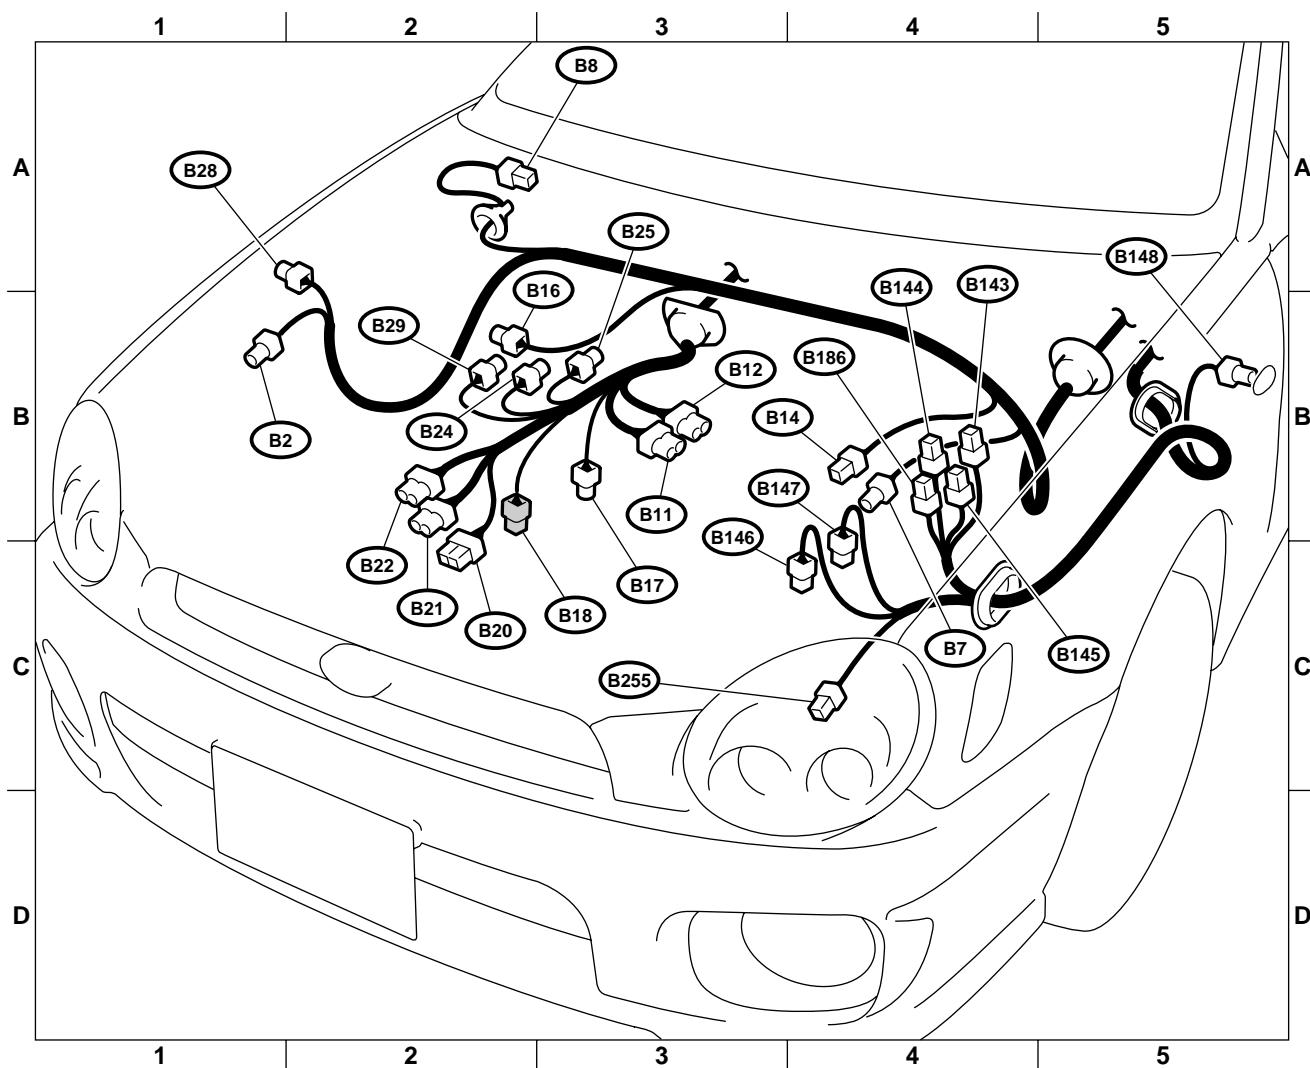

BO0220

# BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

## WIRING SYSTEM


### 4. RHD TURBO ENGINE MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B3	5	Gray	B-2		Mass air flow sensor
B7	6	Black	C-4		Cruise control actuator
B8	5	Gray	A-2		Front wiper motor
B14	1	★	B-3		Starter (Magnet)
B16	2	Gray	B-2		Brake fluid level switch
B17	4	★	B-2		Vehicle speed sensor
B18	4	★	A-1		Front oxygen (A/F) sensor
B19	4	★	B-2		Oxygen sensor
B20	10	★	A-1	E-1	Engine wiring harness
B21	20	Black	B-2	E2	Engine wiring harness
B22	16	Brown	C-2	E3	
B127	2	★	A-1		Waste gate control solenoid valve
B128	4	★	C-2	T9	Transmission (MT)
B143	3	★	A-3		M/B
B144	6	Black	A-3		
B145	1	★	C-4		
B146	2	Green	B-3		Front washer motor
B147	2	★	B-3		Rear washer motor
B148	2	★	A-4		Side turn signal light LH
B186	4	Black	B-3		M/B
B255	1	White	C-2	F96	Front wiring harness (With ABS)
B279	2	★	A-1		Exhaust temperature sensor

★:Non-colored

# BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

WIRING SYSTEM

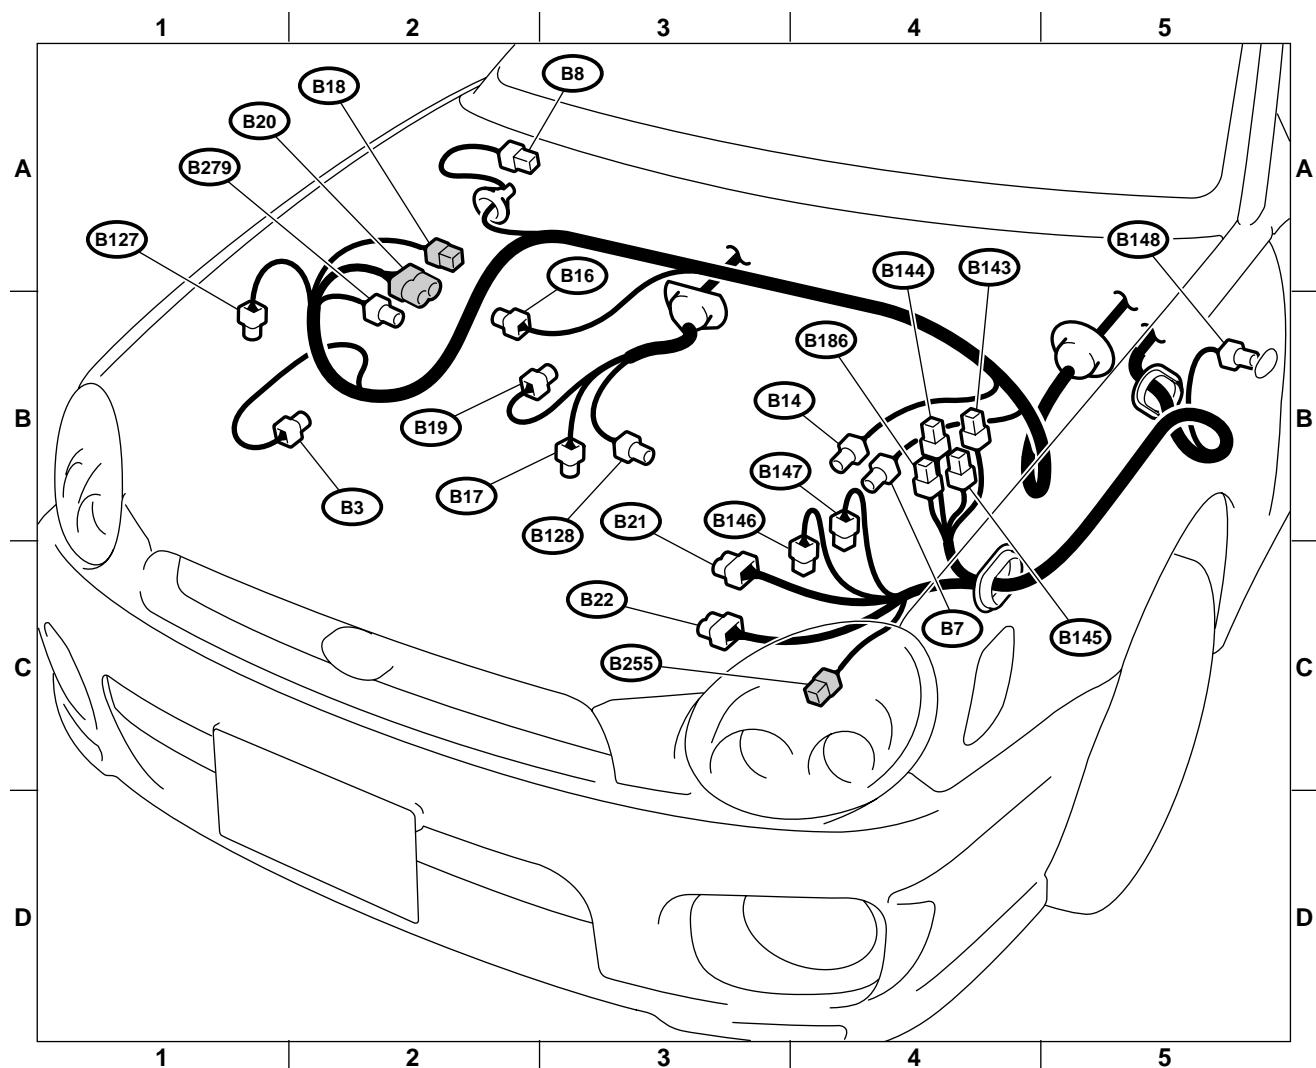

BO0219

# BULKHEAD WIRING HARNESS (IN COMPARTMENT)

## WIRING SYSTEM

### 47.Bulkhead Wiring Harness (In Compartment)

#### A: LOCATION

##### 1. LHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B30	25	★	D-1	D1	Front door cord LH
B31	6	Yellow	D-1	AB1	SRS (Airbag) harness
B32	3	Black	B-2		Turn & hazard module
B36	24	Black	B-1	i1	Instrument panel wiring harness
B37	24	★	B-3	i2	
B40	16	Gray	C-2		Data link connector
B41	2	★	C-1		Power window
B42	5	★	C-1		Power window
B43	6	Black	C-3		Illumination control module
B44	10	★			Seat belt warning module
B46	4	Green	C-1		Fuel pump relay
B47	6	Brown	C-4		Main relay
B48	5	★	C-1		Front fog light
B50	4	★	C-1		Blower motor relay
B51	8	Blue	C-1		F/B
B52	7	★	B-1		
B53	12	Black	B-2		Shield joint connector (AT)
B54	24	★	A-2		
B55	24	Gray	A-2		Transmission control module
B56	24	Green	A-2		
B61	8	★	B-1	F44	Front wiring harness
B62	24	★	B-2	F45	
B64	2	Black	B-2		Stop light switch
B68	5	Black	C-3		Steering roll connector
B69	4	★	D-2		
B70	18	★	C-2		Combination switch
B71	17	★	C-2		
B72	4	Blue	C-2		Ignition switch
B74	2	Black	C-2		Key warning switch
B75	2	Green	C-2	B76	
B76	2	Green	C-2	B75	Test mode connector
B77	3	★	B-3		Mode actuator
B79	14	Gray	C-2		Check connector
B81	1x2	★	C-2		Diagnosis terminal (Ground)
B82	6	Black	C-2		Diagnosis connector
B83	6	★	C-4		Shield&sensor ground joint connector (E/G) With OBD
	8	★	C-4		Shield&sensor ground joint connector (E/G) Without OBD
B84	17	★	B-3		Engine control module

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B85	2	★	A-2		Diode (Rear fog light)
B86	4	★	B-3		Blower motor resistor
B87	2	★	B-4		Blower motor
B88	4	★	B-3		Evaporator thermostowitch
B90	4	★	B-4	R50	Roof cord
B91	6	Black	C-4		FRESH/RECIRC actuator
B92	8	★	C-2		Door lock timer
B101	25	★	B-4	D11	Front door cord RH
B108	2	★	B-1	F46	Front wiring harness
B116	6	★	D-3		Select lever illumination
B119	4	★	C-3		Cigarette lighter (Power)
B120	14	★	B-3		Radio
B121		★	B-3		Audio ground
B125	1	Black	C-2	B126	Read memory connector
B126	1	Black	C-2	B125	
B129	2	★	B-1		Kick down switch (AT)
B131	4	★	C-1		Rear fog light relay
B132	4	★	C-2		Head light beam leveller switch
B133	6	★	D-4		AT power mode & hold mode switch
B134	35	★	C-4		
B135	28	★	C-4		
B136	30	★	C-4		
B137	31	★	B-3		
B141	12	★	B-2		Immobilizer control module
B152	12	★	C-1		F/B
B157	5	★	C-1		Ignition relay (Relay block)
B158	10	Gray	D-1		F/B
B160	6	Gray	C-1		Front fog light switch
B168	16	★	C-3		Mode control panel (Manual A/C)
B169	6	★	C-3		Fan switch (Manual A/C)
B171	5	★	C-1		Mirror heated relay
B176	18	★	C-4		Keyless entry control module
B183	1	★	D-1	B184	Joint connector (Keyless entry)
B184	1	★	D-1	B183	
B195	6	★	C-1		Rear fog light switch
B196	3	★	B-4		Diode (Rear fog light)


# BULKHEAD WIRING HARNESS (IN COMPARTMENT)

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B200	20	★	B-4	F74	Front wiring harness
B208	2	★	A-4		Glove box light
B209	40	★	B-1	F76	Front wiring harness
B225	8	★	C-1		Fuse (Relay box)
B250	3	★	C-2		Flash memory connector
B256	2	★	B-3		Evaporator sensor
B259	2	★	B-2	B260	Shield joint connector (E/G)Non-turbo model
B260	2	★	B-2	B259	
B264	4	Red	C-1		ABS relay
B271	12	Blue	C-1		F/B
B275	4	★	B-3		Fan control amp
B282	16	Gray	C-3		Auto A/C control module
B283	20	Gray	C-3		
B284	10	★	D-4		Remote control rear-view mirror switch
B292	3	★	D-3		ABS sensor
B293	3	★	B-3		Air mix actuator (Auto A/C)
B296	4	★	B-4		Rear defogger timer
★:Non-colored					

# BULKHEAD WIRING HARNESS (IN COMPARTMENT)

## WIRING SYSTEM

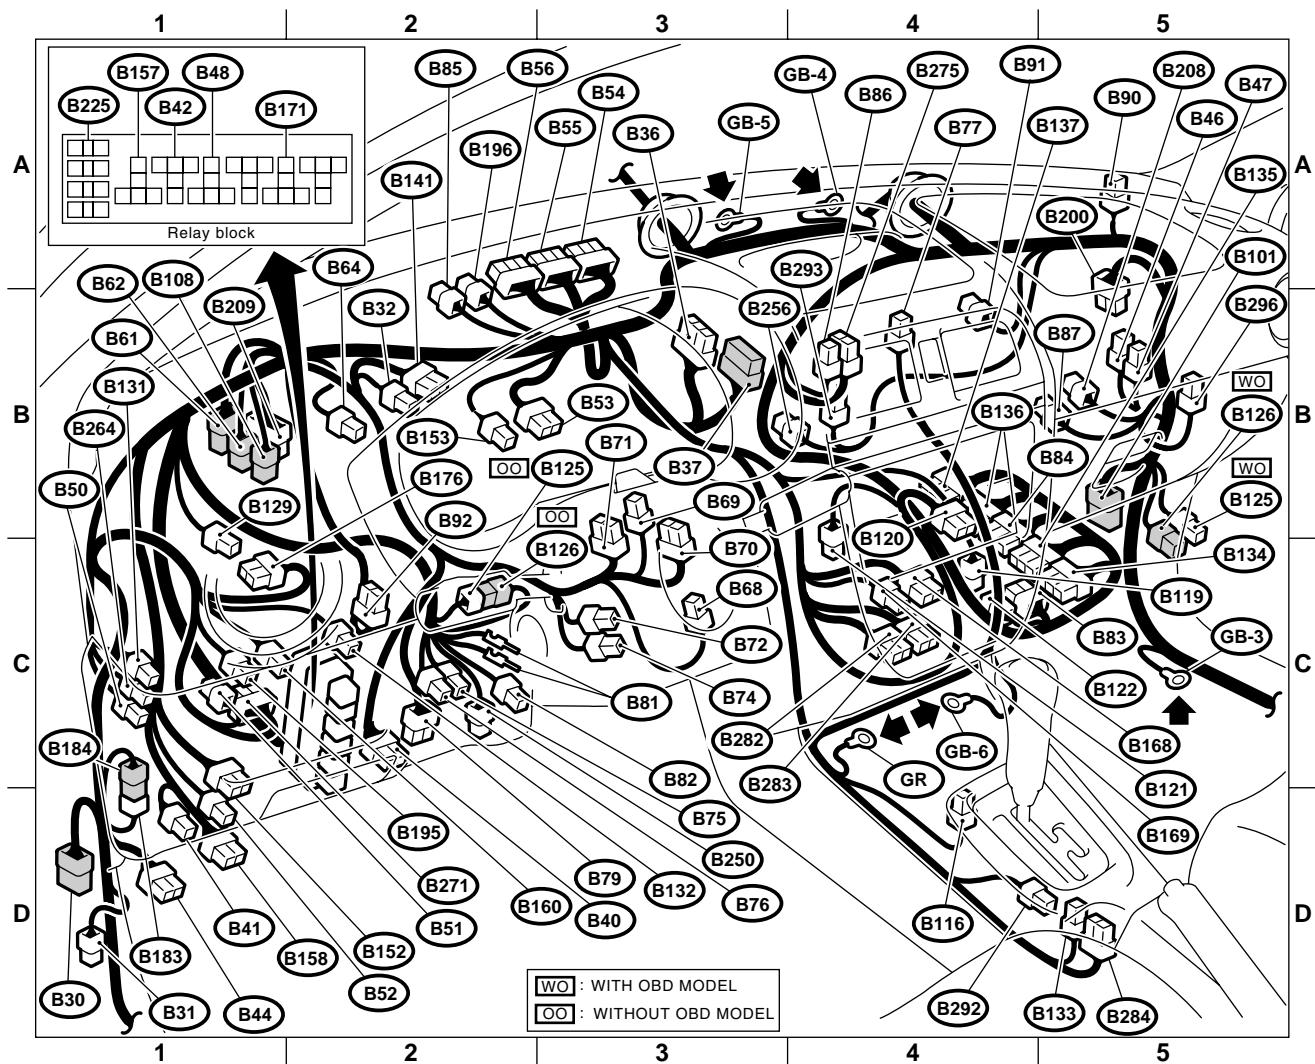

BO0221

# BULKHEAD WIRING HARNESS (IN COMPARTMENT)

WIRING SYSTEM

## 2. RHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B30	25	★	D-4	D1	Front door cord RH
B31	6	Yellow	D-4	AB1	SRS (Airbag) harness
B32	3	Black	B-3		Turn & hazard module
B36	14	Black	B-2	i1	Instrument panel wiring harness
B37	32	★	B-2	i2	
B38	22	Black	B-2	i3	
B40	16	Gray	C-3		Data link connector
B41	2	★	C-4		Power window circuit
B42	5	Black	C-4		Power window relay (Relay block)
B43	6	Black	C-4		Illumination control module
B46	4	Green	C-1		Fuel pump relay
B47	6	★	C-4		Main relay
B48	5	★	C-3		Front fog light relay (Relay block)
B50	4	★	C-4		Blower motor relay
B51	8	Blue	C-4		F/B
B52	7	★	C-4		
B53	12	Black	B-3		Shield joint connector (AT)
B54	24	★	A-3		Transmission control module
B55	24	Gray	A-3		
B56	24	Green	A-3		
B61	8	★	B-4	F44	Front wiring harness
B62	18	Black	B-4	F45	
B64	2	Black	B-3		Stop light switch
B65	4	Black	B-3		Stop&brake switch (with cruise control)
B68	5	Black	C-2		Cruise control sub switch
B69	4	★	B-3		Combination switch
B70	18	★	C-3		
B71	17	★	C-3		
B72	4	Blue	C-3		Ignition switch
B74	2	Black	C-3		Key warning switch
B75	2	Green	C-3	B76	Test mode connector
B76	2	Green	C-3	B75	
B77	3	★	B-2		Mode actuator
B79	14	Gray	C-3		Check connector
B81	1x2	★	C-3		Diagnosis terminal (Ground)
B82	6	Black	C-3		Diagnosis connector
B83	6	★	C-2		Shield&sensor ground joint connector (E/G) non-turbo model
	12	★	C-2		Shield&sensor ground joint connector (E/G) Turbo model
B85	2	★	B-3		Diode (Rear fog light)
B86	4	★	B-4		Blower motor resistor

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B87	2	★	B-1		Blower motor
B88	4	Brown	B-3		Evaporator thermostowitch
B90	6	★	B-4	R50	Roof cord
B91	6	Black	B-2		FRESH/RECIRC actuator
B92	8	★	C-3		Door lock timer
B101	25	★	B-1	D11	Front door cord LH
B107	2	★	A-3		Clutch switch (cruise control)
B116	6	★	D-2		Select lever illumination light (AT)
B119	4	★	C-2		Cigarette lighter (Power)
B120	14	★	B-2		Radio
B121	1	★	B-2		Audio ground
B125	1	Black	C-3	B126	Read memory connector
B126	1	Black	C-3	B125	
B129	2	★	C-4		Kick down switch (AT)
B131	4	Blue	C-4		Rear fog light relay
B132	4	★	C-4		Head light beam leveler switch
B133	6	★	D-1		AT power mode & hold mode switch
B134	22	★	C-3		Engine control module
B135	28	★	C-3		
B136	24	★	C-3		
B137	31	★	C-4		
B141	14	★	B-3		Immobilizer control module
B152	12	★	C-4		F/B
B157	4	★	C-4		Ignition relay (Relay block)
B158	10	Gray	D-1		F/B
B159	9	Brown	C-4		F/B
B160	6	Brown	C-4		Front fog light switch
B161	6	Brown	C-4		Cruise sub switch
B168	10	★	C-2		Mode control panel (Manual A/C)
B169	6	★	C-2		Fan switch (Manual A/C)
B171	5	★	C-3		Mirror heated relay
B176	18	★	C-4		Keyless entry control module
B183	1	★	D-4	B184	Joint connector (Keyless entry)
B184	1	★	C-4	B183	
B195	6	★	C-4		Rear fog light switch
B196	3	★	B-3		Diode (Rear fog light)
B198	1	★	B-2	B199	Joint connection (Ground)
B199	1	★	B-2	B198	
B200	22	★	B-4	F74	Front wiring harness


# BULKHEAD WIRING HARNESS (IN COMPARTMENT)

## WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B208	2	★	B-1		Glove box light
B225	8	Black	C-3		Fuse (Relay box)
B250	3	★	C-3		Flash memory connector
B256	2	★	B-2		Evaporator sensor
B259	2	★	B-2	B260	Shield joint connector (E/G) NA model
B260	2	★	B-2	B259	
B264	4	Pink	C-4		ABS relay
B271	12	Blue	C-4		F/B
B275	4	★	B-2		Fan control amp
B282	16	Gray	C-2		Auto A/C control module
B283	20	Gray	C-2		
B284	10	★	D-1		Remote control rear-view mirror switch
B292	3	★	D-1		ABS sensor
B293	3	★	B-2		Air mix actuator (Auto A/C)
B296	4	★	B-1		Rear defogger timer
★:Non-colored					

# BULKHEAD WIRING HARNESS (IN COMPARTMENT)

WIRING SYSTEM

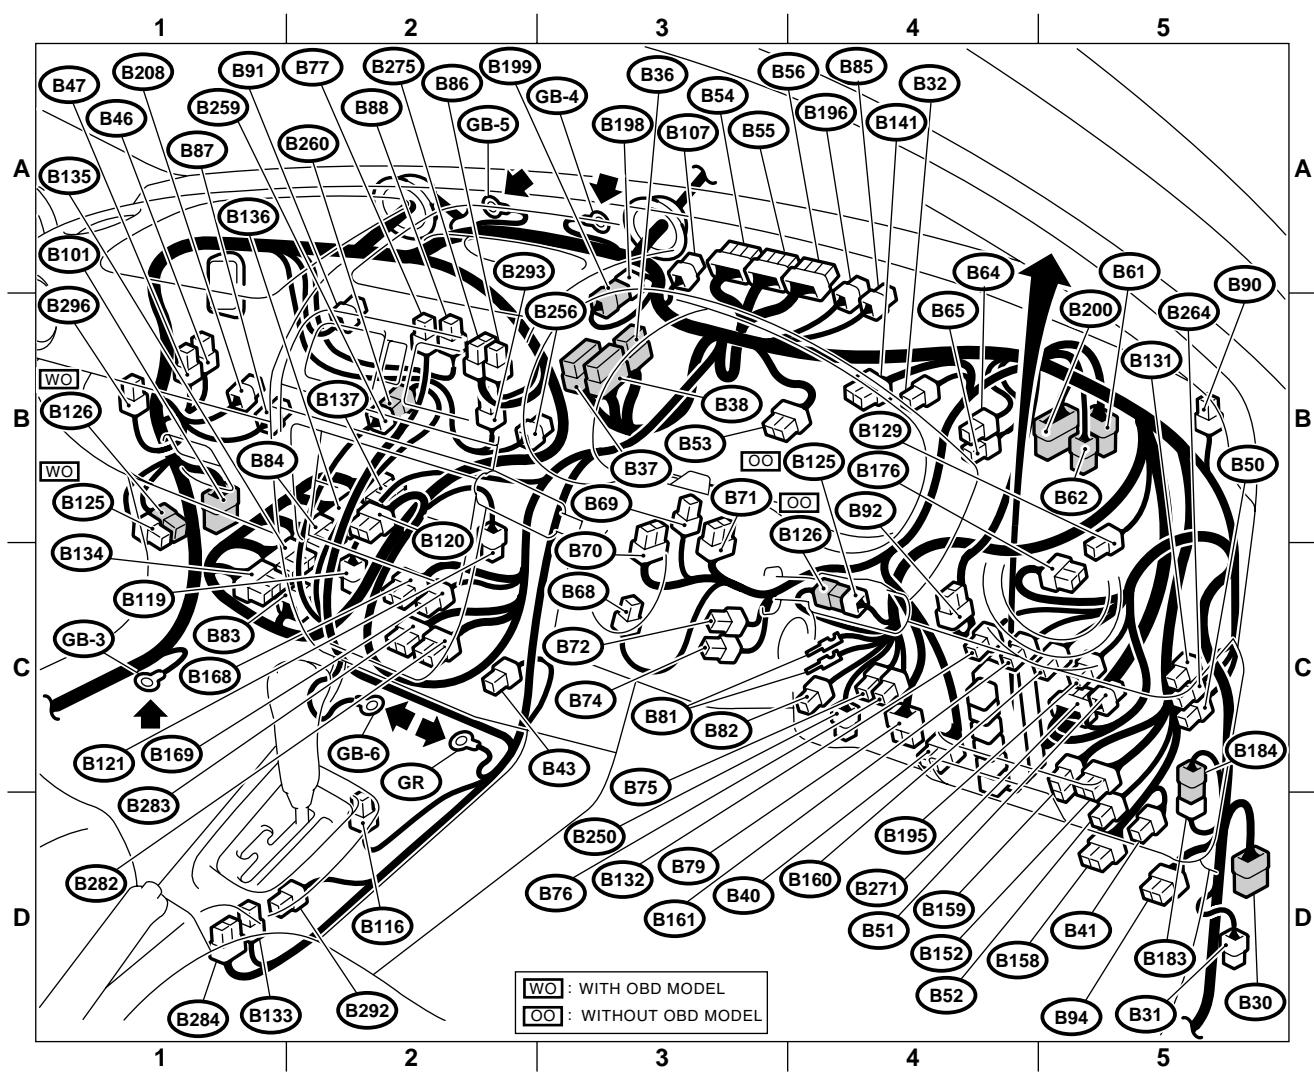

BO0222

# ENGINE WIRING HARNESS AND TRANSMISSION CORD

## WIRING SYSTEM

### 48.Engine Wiring Harness and Transmission Cord

#### A: LOCATION

##### 1. SOHC W/O OBD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
E2	20	Light gray		B21	Bulkhead wiring harness
E3	16	Brown		B22	Bulkhead wiring harness
E4	2	Blue			Purge control solenoid valve
E5	2	Light gray			Fuel injector No.1
E6	2	Light gray			Fuel injector No.3
E7	6	Black			Idle air control solenoid valve
E8	3	Light gray			Engine coolant temperature sensor and thermometer
E10	2	Light gray			Crank shaft position sensor
E11	1	★			Oil pressure switch
E12	4	Gray			Ignition coil and ignitor (1.6L model)
		Dark gray			Ignition coil and ignitor (2.0L model)
E13	4	Dark brown			Throttle position sensor
E14	2	★			Knock sensor
E15	2	Black			Camshaft position sensor
E16	2	Light gray			Fuel injector No.2
E17	2	Light gray			Fuel injector No.4
E19	1	★			Power steering oil pressure switch
E20	4	Black			Pressure sensor and intake air temperature sensor


★:Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
T1	2	Gray		B31	Bulkhead wiring harness
T2	2	Brown		B30	Bulkhead wiring harness
T3	28	★		B1	Bulkhead wiring harness
T4	36	Black		B2	Bulkhead wiring harness

★:Non-colored

# ENGINE WIRING HARNESS AND TRANSMISSION CORD

WIRING SYSTEM

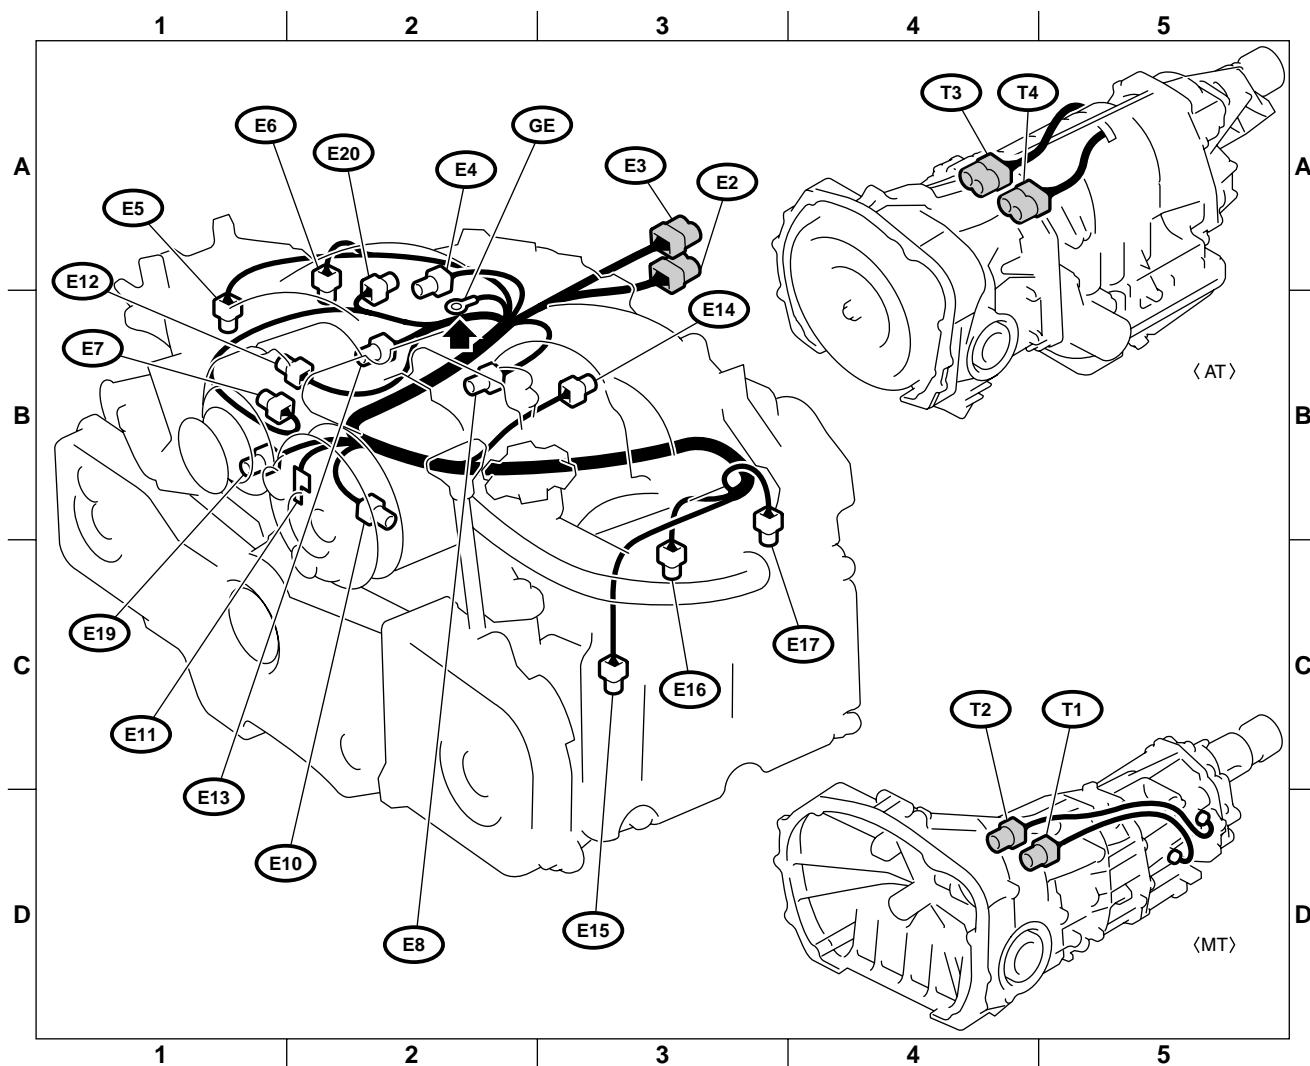

BO0224

# ENGINE WIRING HARNESS AND TRANSMISSION CORD

## WIRING SYSTEM

### 2. SOHC MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
E2	20	Light gray		B21	Bulkhead wiring harness
E3	16	Brown		B22	Bulkhead wiring harness
E4	2	Blue			Purge control solenoid valve
E5	2	Light gray			Fuel injector No.1
E6	2	Light gray			Fuel injector No.3
E7	6	Black			Idle air control solenoid valve
E8	3	Light gray			Engine coolant temperature sensor and thermometer
E10	2	Light gray			Crank shaft position sensor
E11	1	★			Oil pressure switch
E12	4	Gray			Ignition coil and ignitor (1.6L model)
		Dark gray			Ignition coil and ignitor (2.0L model)
E13	4	Dark brown			Throttle position sensor
E14	2	★			Knock sensor
E15	2	Black			Camshaft position sensor
E16	2	Light gray			Fuel injector No.2
E17	2	Light gray			Fuel injector No.4
E19	1	★			Power steering oil pressure switch
E20	4	Black			Pressure sensor and intake air temperature sensor
E42	2	Purple			Air assist injector solenoid valve


★:Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
T1	2	Gray		B31	Bulkhead wiring harness
T2	2	Brown		B30	Bulkhead wiring harness
T3	28	★		B1	Bulkhead wiring harness
T4	36	Black		B2	Bulkhead wiring harness

★:Non-colored

# ENGINE WIRING HARNESS AND TRANSMISSION CORD

WIRING SYSTEM

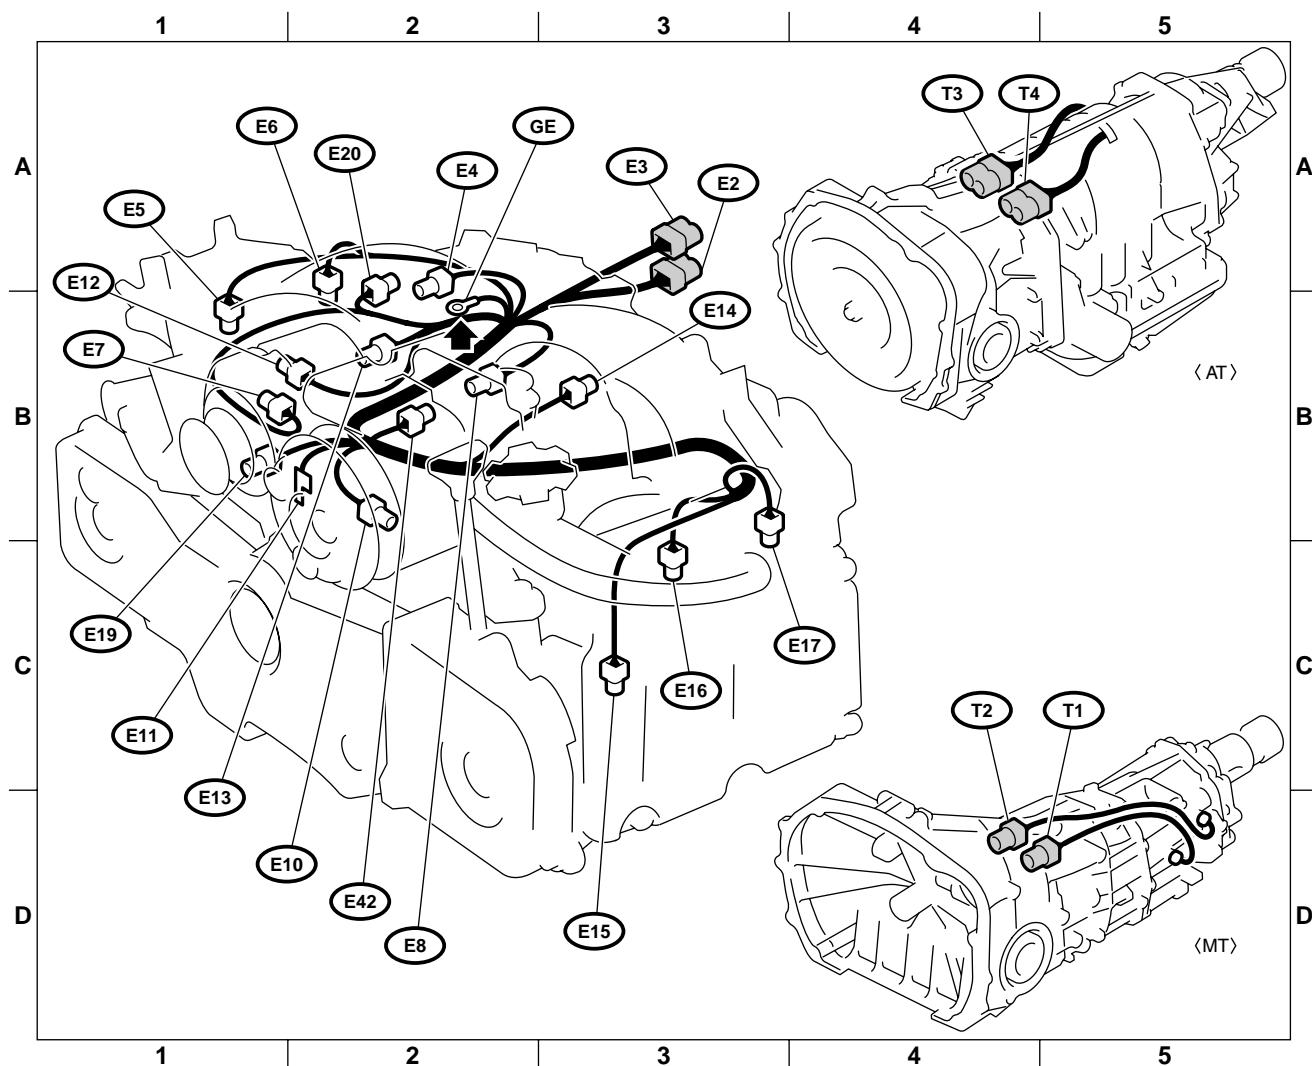

BO0223

# ENGINE WIRING HARNESS AND TRANSMISSION CORD

## WIRING SYSTEM

---

### 3. DOHC TURBO MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
E1	10	Light gray		B20	Bulkhead wiring harness
E2	20	Black		F61	Front wiring harness
E3	16	Brown		F60	Front wiring harness
E4	2	Black			Purge control solenoid valve
E5	2	Dark gray			Fuel injector No.1
E6	2	Dark gray			Fuel injector No.3
E7	3	Black			Idle air control solenoid valve
E8	3	Light gray			Engine coolant temperature sensor and thermometer
E10	2	Light gray			Crank shaft position sensor
E11	1	★			Oil pressure switch
E13	3	Black			Throttle position sensor
E14	2	Gray			Knock sensor
E15	2	Light gray			Camshaft position sensor
E16	2	Dark gray			Fuel injector No.2
E17	2	Dark gray			Fuel injector No.4
E19	1	★			Power steering oil pressure switch
E21	3	Black			Pressure sensor
E31	3	★			Ignition coil No.1
E32	3	★			Ignition coil No.2
E33	3	Black			Ignition coil No.3
E34	3	Black			Ignition coil No.4
E50	3	Black			TGV angle sensor LH
E51	2	Black			TGV LH
E54	3	Black			TGV angle sensor RH
E55	2	Black			TGV RH


★:Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
T9	4	★		B128	Bulkhead wiring harness

★:Non-colored

# ENGINE WIRING HARNESS AND TRANSMISSION CORD

WIRING SYSTEM

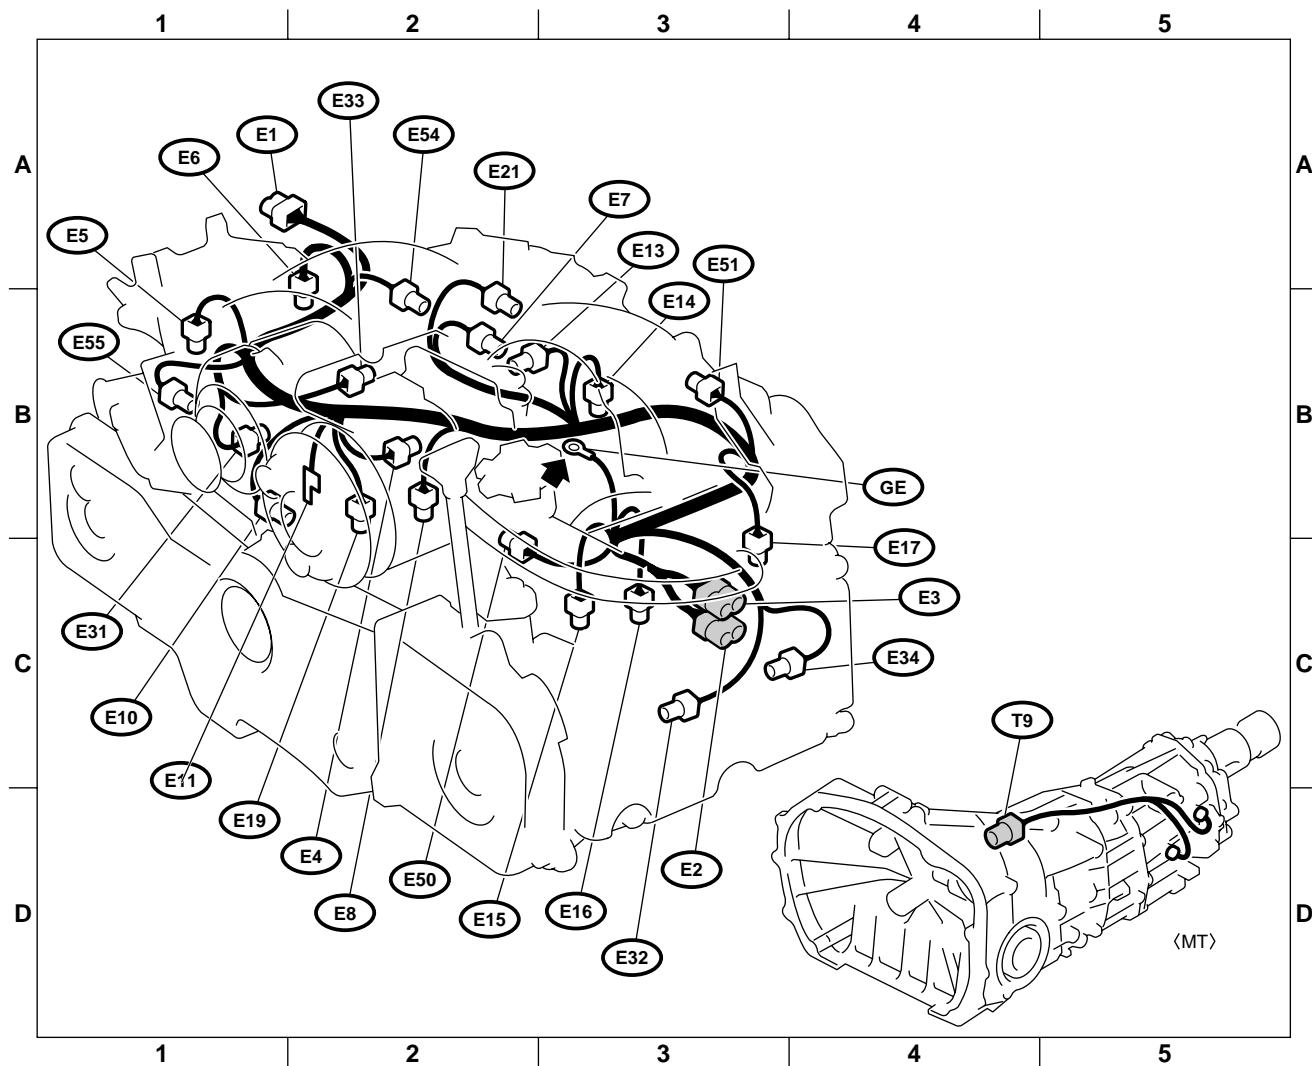

BO0225

# INSTRUMENT PANEL WIRING HARNESS

## WIRING SYSTEM

### 49. Instrument Panel Wiring Harness


#### A: LOCATION

##### 1. LHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
i1	24	Black		B36	Bulkhead wiring harness
i2	24	★		B37	
i10	10	Green			
i11	30	Green			Combination meter
i12	14	Green			
i22	8	★			Hazard switch
i51	2	★			Sunload sensor
i59	4	★			Clock

# INSTRUMENT PANEL WIRING HARNESS

WIRING SYSTEM

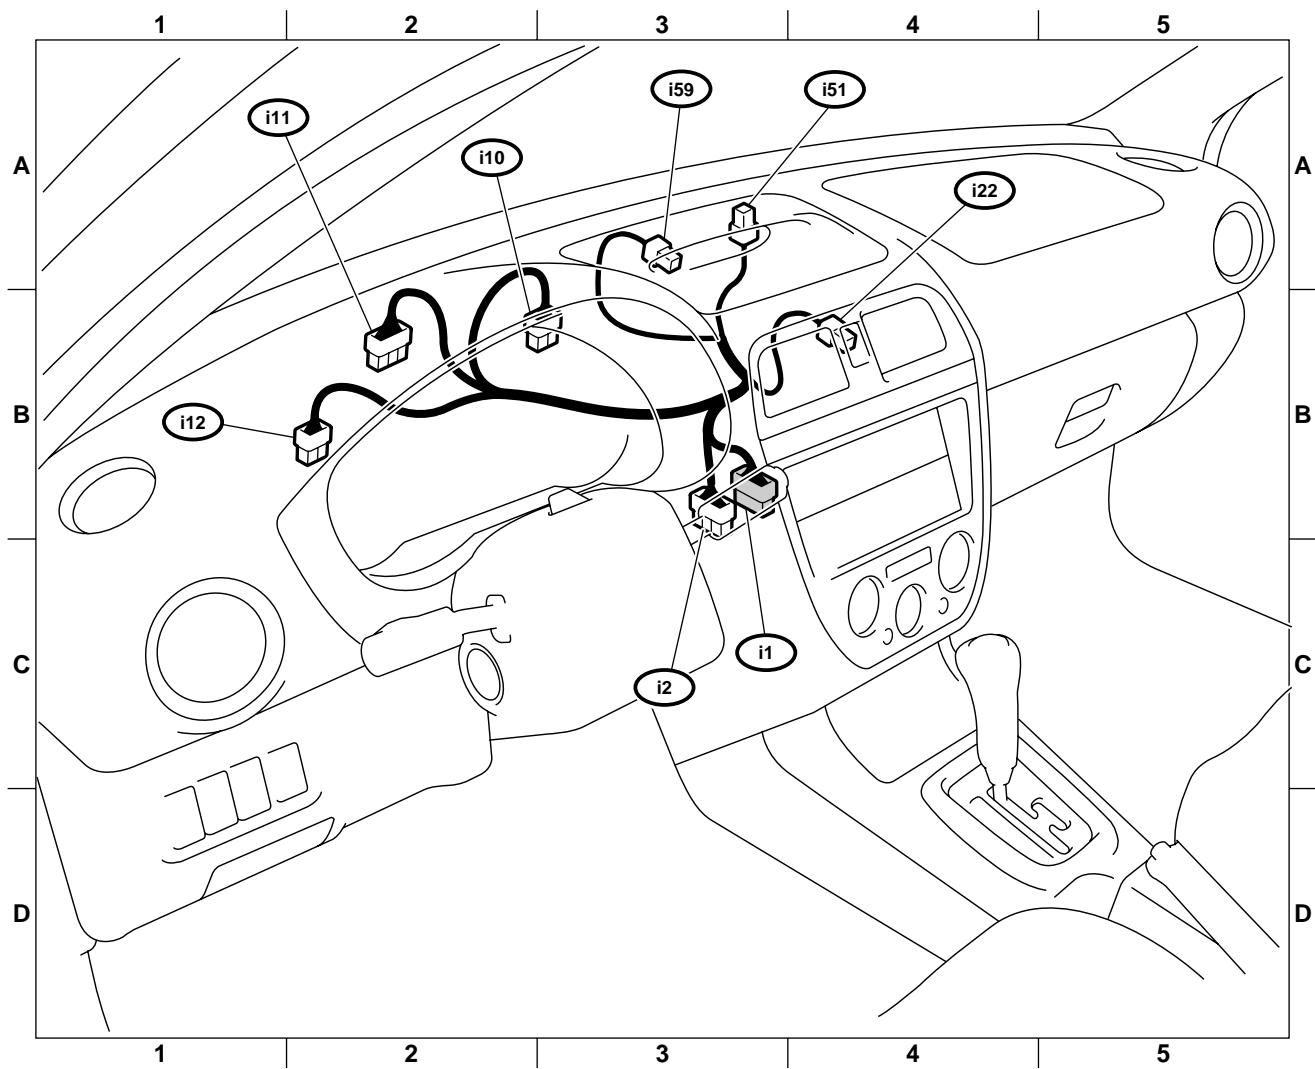

BO0226

# INSTRUMENT PANEL WIRING HARNESS


## WIRING SYSTEM

### 2. RHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
i1	14	Black		B36	Bulkhead wiring harness
i2	32	★		B37	
i3	22	Black		B38	
i10	10	Green			Combination meter
i11	30	Green			
i12	14	Green			
i22	8	★			Hazard switch
i51	2	★			Sunload sensor
i59	4	★			Clock

# INSTRUMENT PANEL WIRING HARNESS

WIRING SYSTEM

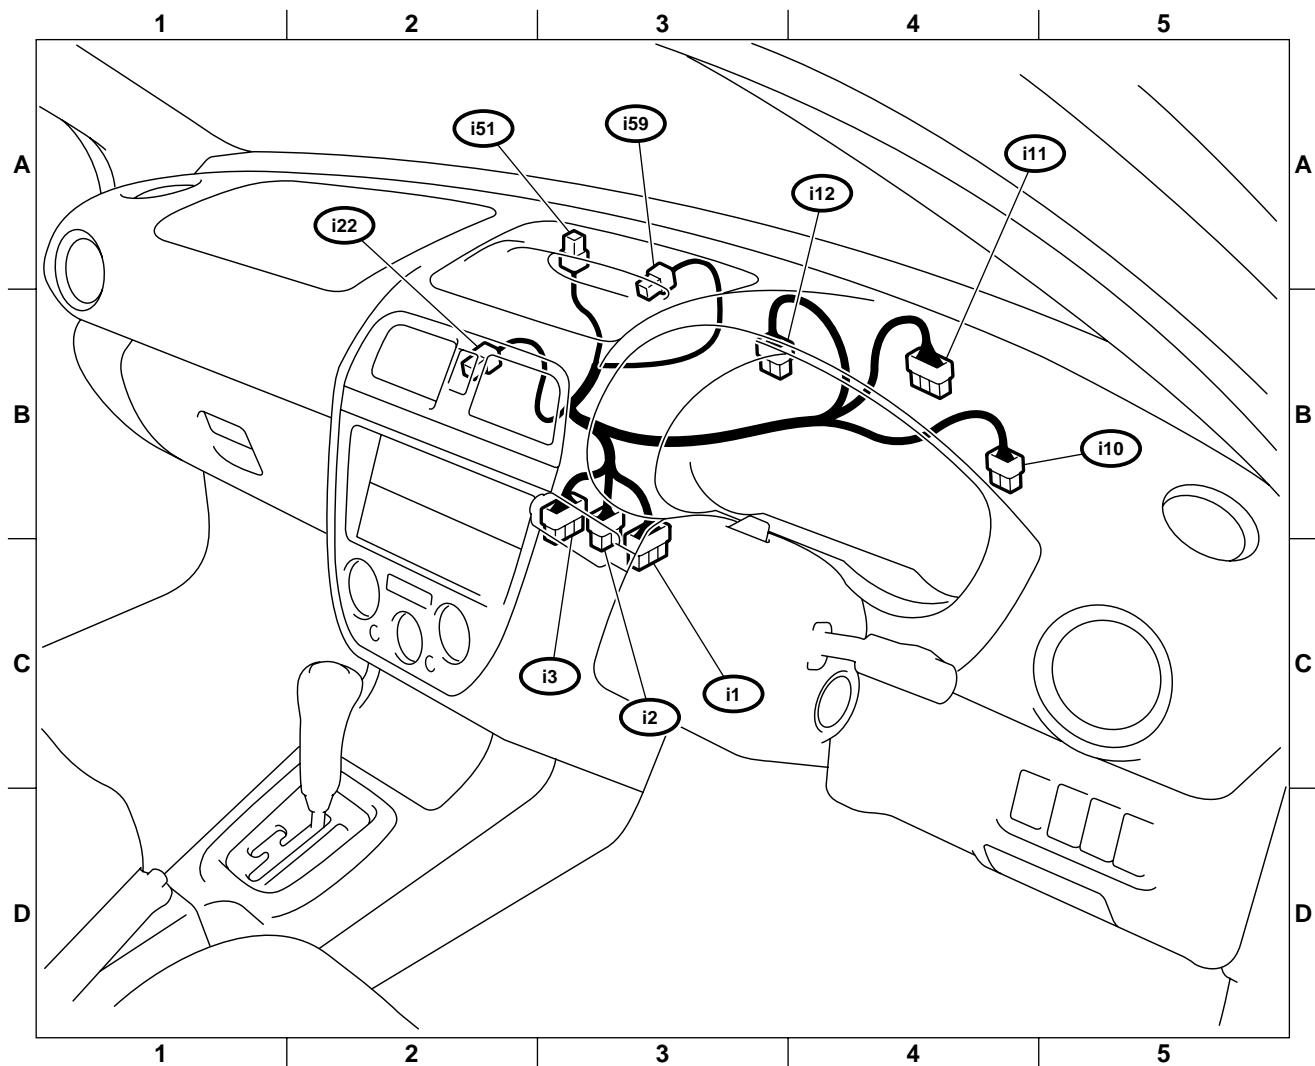

BO0227

# REAR WIRING HARNESS, BULKHEAD WIRING HARNESS, ROOF CORD AND FUEL TANK CORD

## WIRING SYSTEM

### 50. Rear Wiring Harness, Bulkhead wiring Harness, Roof Cord and Fuel Tank Cord

#### A: LOCATION

##### 1. LHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R1	8	★		B97	Bulkhead wiring harness
R3	24	★		B99	Bulkhead wiring harness
R4	1	★			Parking brake switch
R8	2	★			Seat belt switch
R15	6	Black		R57	Fuel tank cord
R22	3	★			Rear door switch LH
R72	2	★			Rear ABS sensor RH
R73	2	★			Rear ABS sensor LH

★: Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B97	8	★		R1	Rear wiring harness
B99	24	★		R3	Rear wiring harness
B265	4	★		D27	Rear door cord RH
B266	3	★		D28	Rear door cord RH
R267	3	★			Front door switch LH
R268	3	★			Front door switch RH
B269	4	★		D21	Rear door cord LH
B270	3	★		D22	Rear door cord LH

★: Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R50	4	★		B90	Bulkhead wiring harness
B52	3	★			Room light
B55	1	Gray			Sunroof
R56	2	★			Spot light


★: Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R57	6	Black		R15	Rear wiring harness
R58	6	★			Fuel pump assembly
R59	2	★			Fuel sub level sensor

★: Non-colored

# REAR WIRING HARNESS, BULKHEAD WIRING HARNESS, ROOF CORD AND FUEL TANK CORD

## WIRING SYSTEM

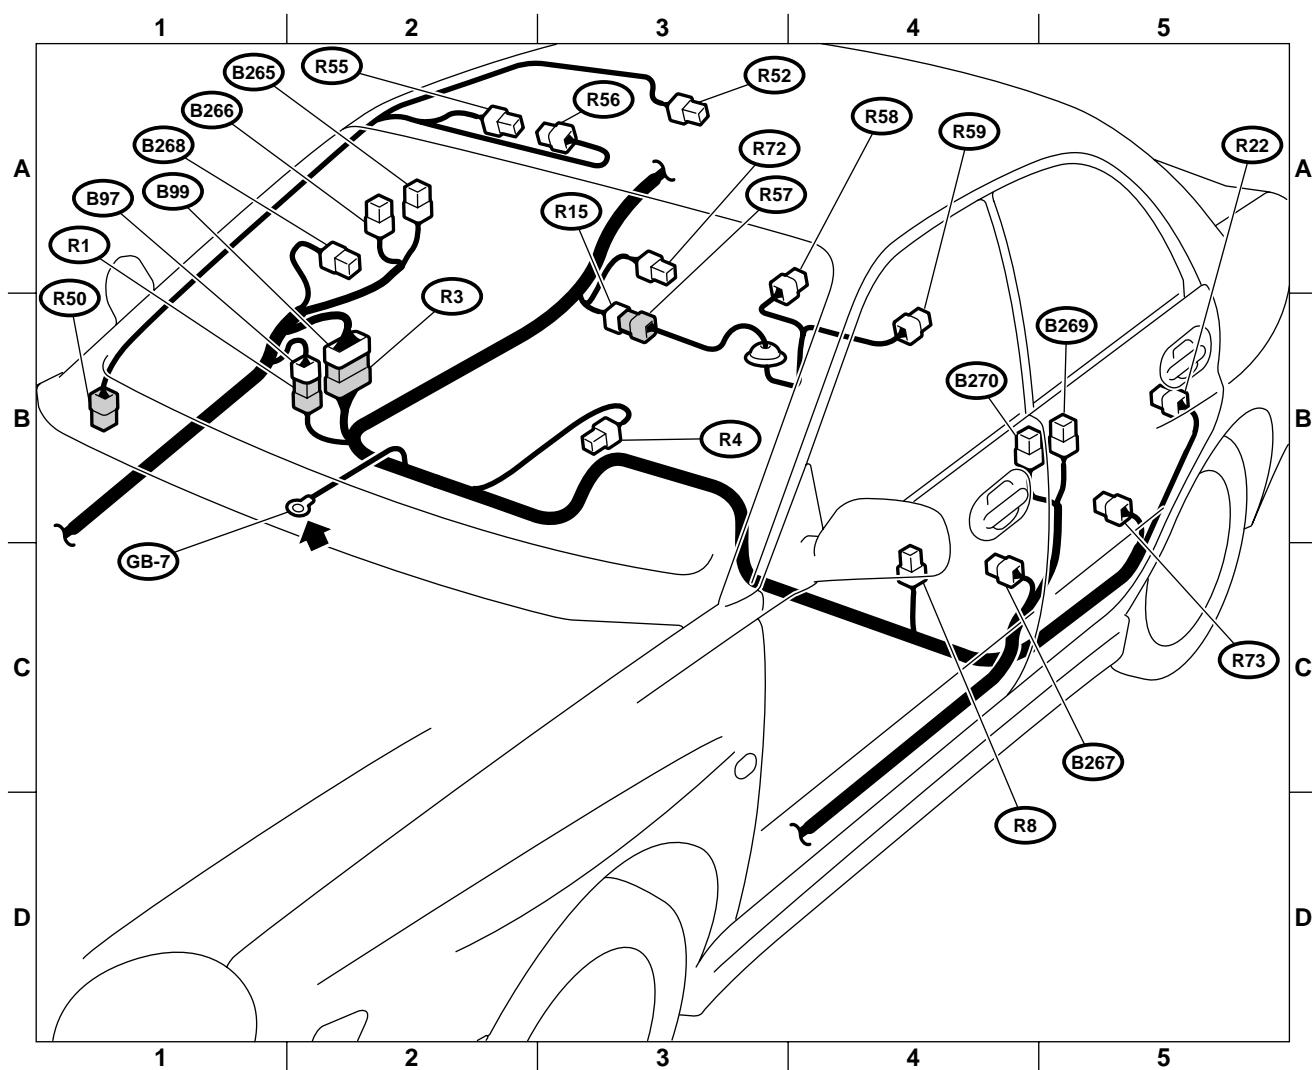

BO0228

# REAR WIRING HARNESS, BULKHEAD WIRING HARNESS, ROOF CORD AND FUEL TANK CORD

## WIRING SYSTEM

### 2. RHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R1	8	★		B97	Bulkhead wiring harness
R3	22	★		B99	Bulkhead wiring harness
R4	1	★			Parking brake switch
R8	2	★			Seat belt switch
R15	6	Black		R57	Fuel tank cord
R22	3	★			Rear door switch LH
R72	2	★			Rear ABS sensor RH
R73	2	★			Rear ABS sensor LH

★: Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B97	8	★		R1	Rear wiring harness
B99	22	★		R3	Rear wiring harness
B265	4	★		D27	Rear door cord RH
B266	3	★		D28	Rear door cord RH
R267	3	★			Front door switch RH
R268	3	★			Front door switch LH
B269	4	★		D21	Rear door cord LH
B270	3	★		D22	Rear door cord LH

★: Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R50	4	★		B90	Bulkhead wiring harness
B52	3	★			Room light
B55	1	Gray			Sunroof
R56	2	★			Spot light


★: Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R57	6	Black		R15	Rear wiring harness
R58	6	★			Fuel pump assembly
R59	2	★			Fuel sub level sensor

★: Non-colored

# REAR WIRING HARNESS, BULKHEAD WIRING HARNESS, ROOF CORD AND FUEL TANK CORD

## WIRING SYSTEM

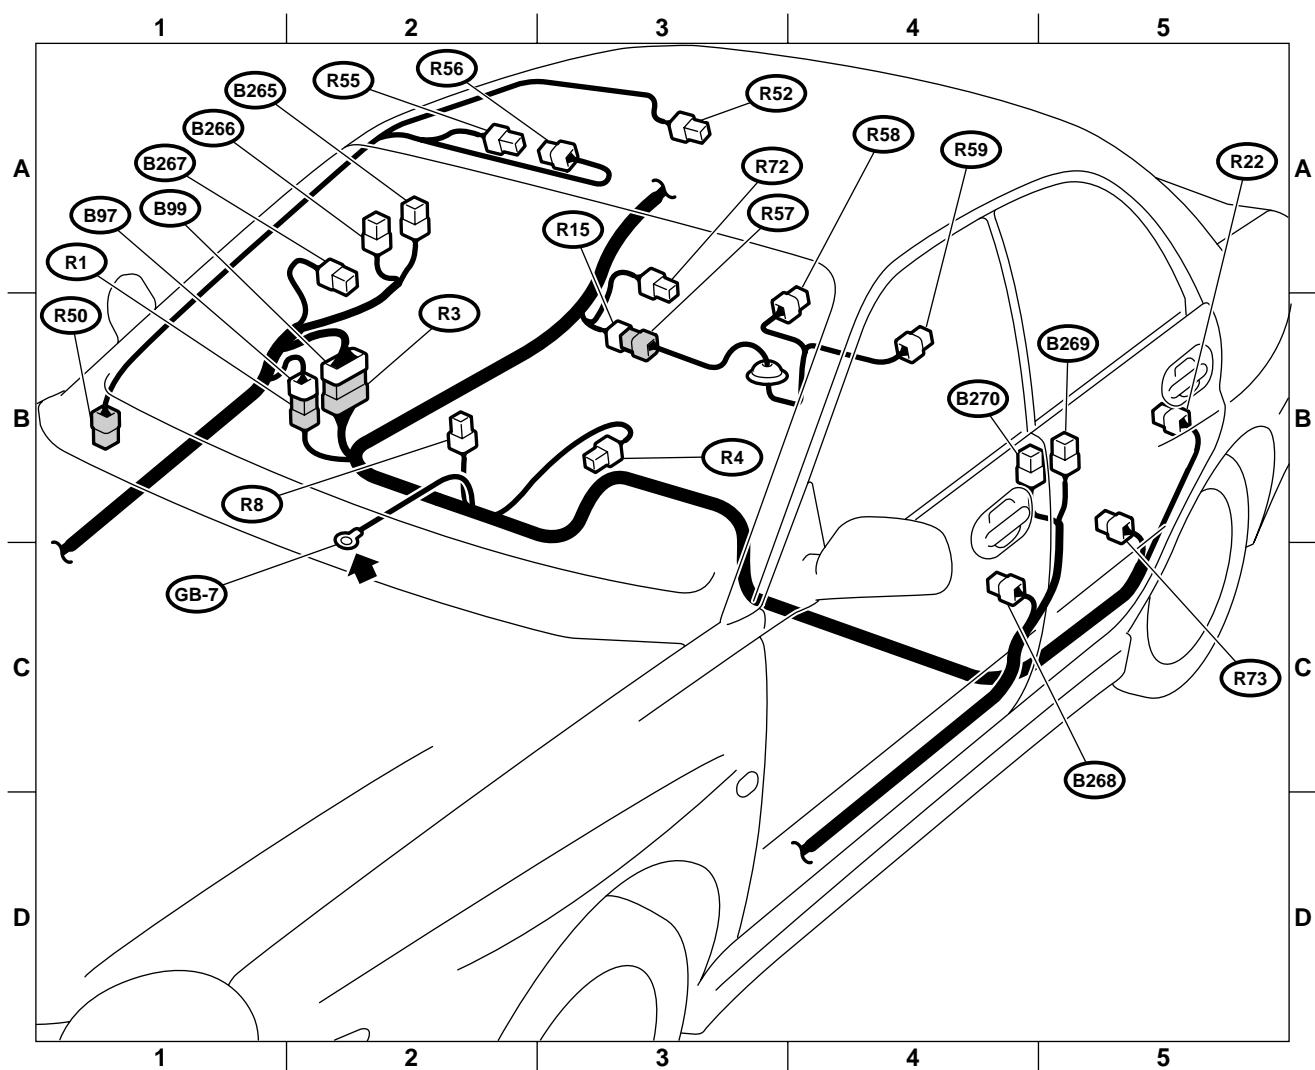

BO0229


**51.Door Cord****A: LOCATION****1. LHD MODEL**

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
D1	25	★	C-2	B30	Bulkhead wiring harness
D2	2	★	C-3		Front door speaker Driver side
D3	2	Black	C-3		Front power window motor Driver side
D4	2	Black	C-3		Front door tweeter Driver side
D5	6	★	C-3		Remote control rearview mirror Driver side
	8	Black			Remote control rearview mirror Driver side
D7	16	★	C-4		Power window main switch
D8	2	Gray	C-4		Front door lock actuator LH
D10	2	★	C-3		Step light LH
D11	25	★	C-1	B101	Bulkhead wiring harness
D12	2	★	C-1		Front door speaker RH
D13	2	Green	B-2		Front power window motor RH
D14	2	★	B-1		Front door tweeter RH
D15	6	★	B-1		Remote control rearview mirror RH (Without mirror heater)
	8	Black			Remote control rearview mirror RH (With mirror heater)
D17	6	★	B-2		Front power window sub switch RH
D18	4	★	B-2		Front door lock actuator RH
D20	2	★	B-2		Step light RH
D21	8	★	C-4	B269	Rear wiring harness
D22	3		C-4	B270	Bulkhead wiring harness
D23	2	★	C-4		Rear door speaker LH
D24	2	Black	B-4		Rear power window motor LH
D25	6	★	B-4		Rear power window sub switch LH
D26	4	★	B-4		Rear door lock actuator LH
D27	4	★	B-2	B265	Bulkhead wiring harness
D28	3			B266	Bulkhead wiring harness
D29	2	Black	B-2		Rear door speaker RH
D30	2	Black	A-2		Rear power window motor RH
D31	6	★	A-2		Rear power window sub switch RH
D32	4	★	A-3		Rear door lock actuator RH
D61	10	★	C-3		Remote control rearview mirror switch
D62	6	Brown	B-2		Front door lock switch RH
D68	2	★	C-3	R99	Rear wiring harness
D69	2	★	C-3	R101	Rear wiring harness
D72	4	★	C-3		Front door lock actuator LH

★: Non-colored

# DOOR CORD

WIRING SYSTEM

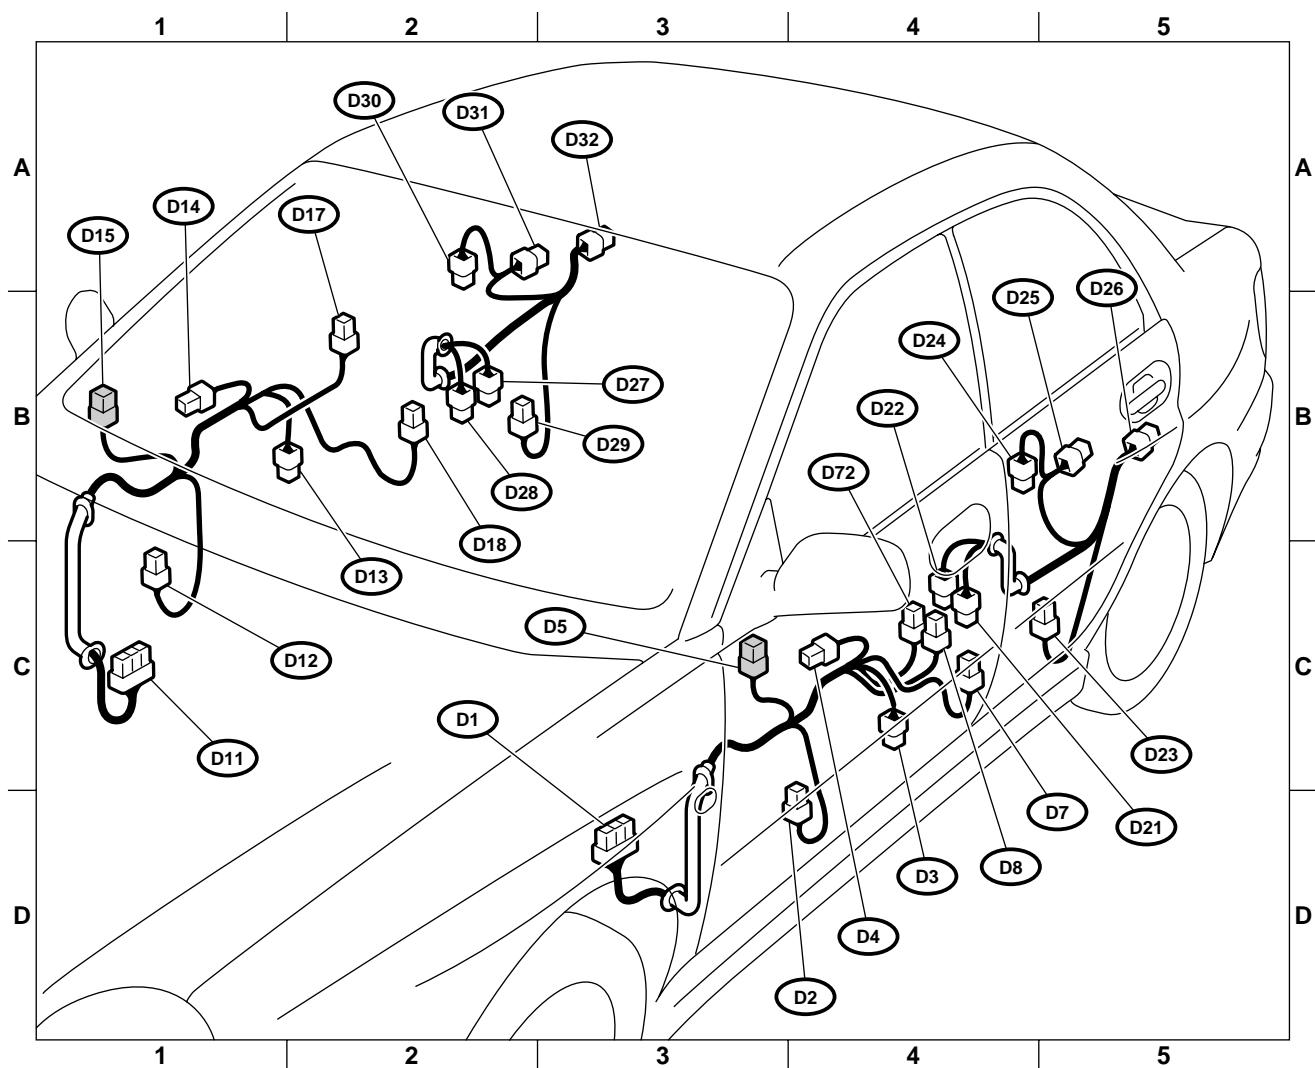

BO0230

## DOOR CORD


## 2. RHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
D1	25	★	C-1	B30	Bulkhead wiring harness
D2	2	★	C-1		Front door speaker Driver side
D3	2	Black	B-2		Front power window motor Driver side
D4	2	★	B-1		Front door tweeter Driver side
D5	6	★	B-1		Remote control rearview mirror Driver side
	8	Black	B-1		Remote control rearview mirror Driver side
D7	16	★	B-2		Power window main switch
D8	2	Gray	B-2		Front door lock actuator RH
D10	2	★	C-3		Step light LH
D11	25	★	D-3	B101	Bulkhead wiring harness
D12	2	★	D-3		Front door speaker LH
D13	2	Green	C-3		Front power window motor LH
D14	2	★	C-3		Front door tweeter LH
D15	6	★	C-3		Remote control rearview mirror LH (Without mirror heater)
	8	Black	C-3		Remote control rearview mirror LH (With mirror heater)
D17	8	★	C-4		Front power window sub switch LH
D18	4	★	C-3		Front door lock actuator LH
D20	2	★	B-2		Step light RH
D21	4	★	C-4	B269	Bulkhead wiring harness
D22	3		B-3	B270	Bulkhead wiring harness
D23	2	★	C-4		Rear door speaker LH
D24	2	Black	B-4		Rear power window motor LH
D25	8	★	B-4		Rear power window sub switch LH
D26	4	★	B-4		Rear door lock actuator LH
D27	4	★	B-2	B265	Bulkhead wiring harness
D28	3		B-2	B266	Bulkhead wiring harness
D29	2	Black	B-2		Rear door speaker RH
D30	2	Black	A-2		Rear power window motor RH
D31	8	★	A-2		Rear power window sub switch RH
D32	4	★	A-3		Rear door lock actuator RH
D61	10	★	C-3		Remote control rearview mirror switch
D62	6	Brown	B-2		Front door lock switch RH
D68	2	★	C-3	R99	Rear wiring harness
D69	2	★	C-2	R101	Rear wiring harness
D72	4	★	B-2		Front door lock actuator LH

★: Non-colored

# DOOR CORD

WIRING SYSTEM

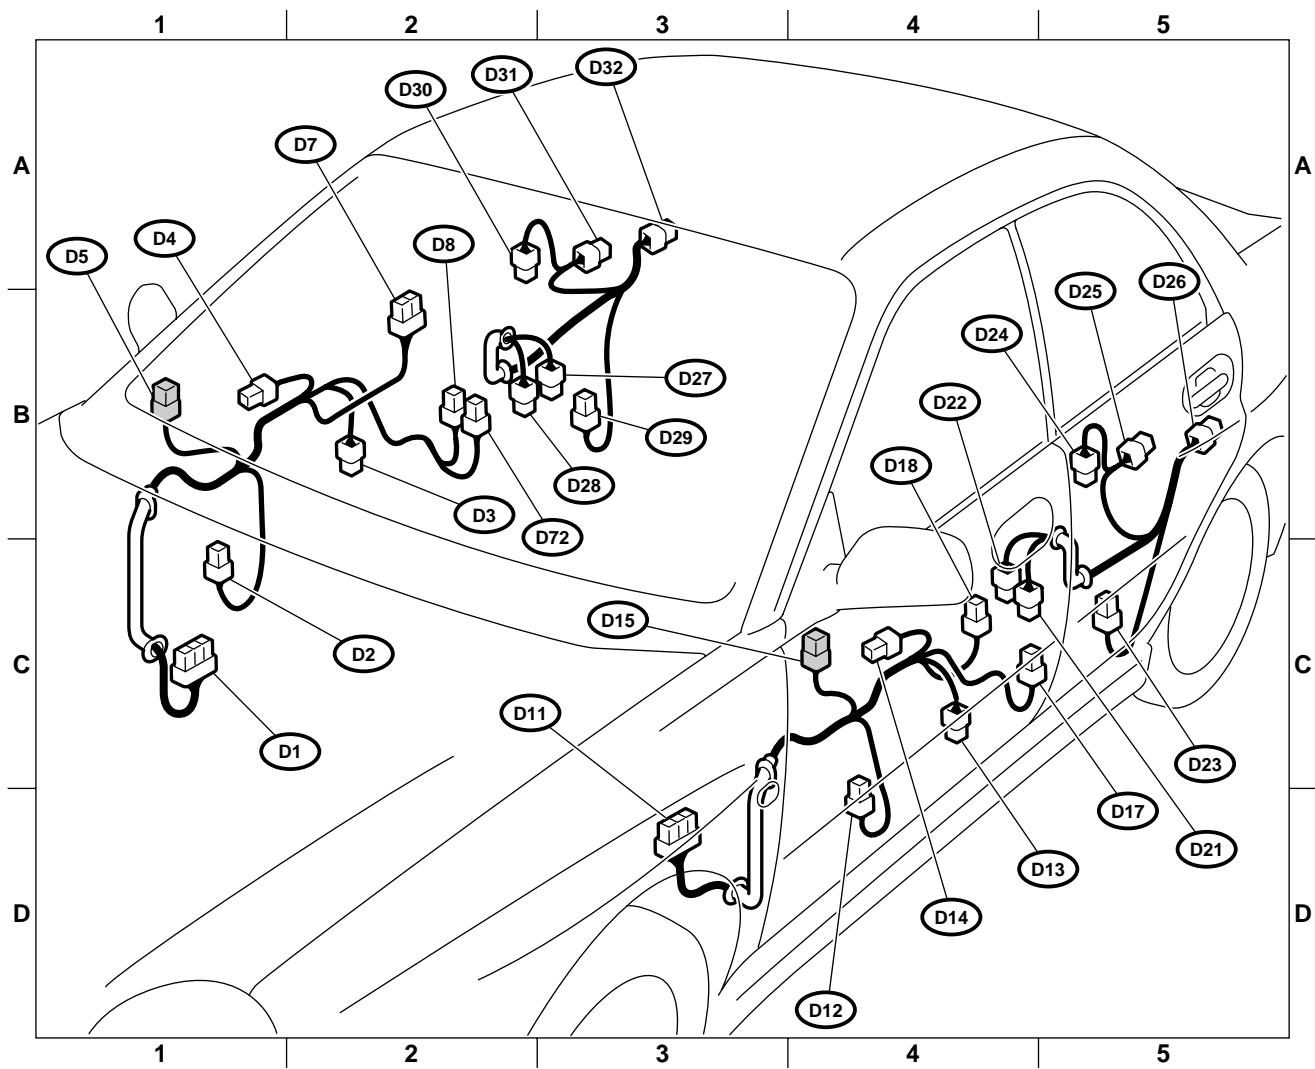

BO0231

# REAR WIRING HARNESS AND TRUNK LID CORD

## WIRING SYSTEM

### 52.Rear Wiring Harness and Trunk Lid Cord


#### A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R16	3	★	C-3		Rear door switch RH
R17	1	Black	B-4		Rear defogger (Power) (Without choke coil model)
R19	2	★	B-2		High-mounted stop light
R20	2	Black	B-2		Trunk room light
R24	2	★	C-4	R60	Trunk lid cord
R26	6	★	C-3		Rear combination light RH
R27	2	★	C-1		Trunk room light switch
R28	6	★	B-1		Rear combination light LH
R60	2	★	B-4	R24	Rear wiring harness
R63	2	★	C-1		License plate light
R65	1	Black	A-2		Rear defogger (Ground) (Without choke coil model)
R66	2	★	C-3		High-mounted stop light (Rear spoiler)
R79	10	★	C-3		Trailer connector
R122	10	★	C-4		Fuel pump control (Turbo Model)
R130	2	★	B-3		Rear defogger (With choke coil model)

★: Non-colored

# REAR WIRING HARNESS AND TRUNK LID CORD

WIRING SYSTEM

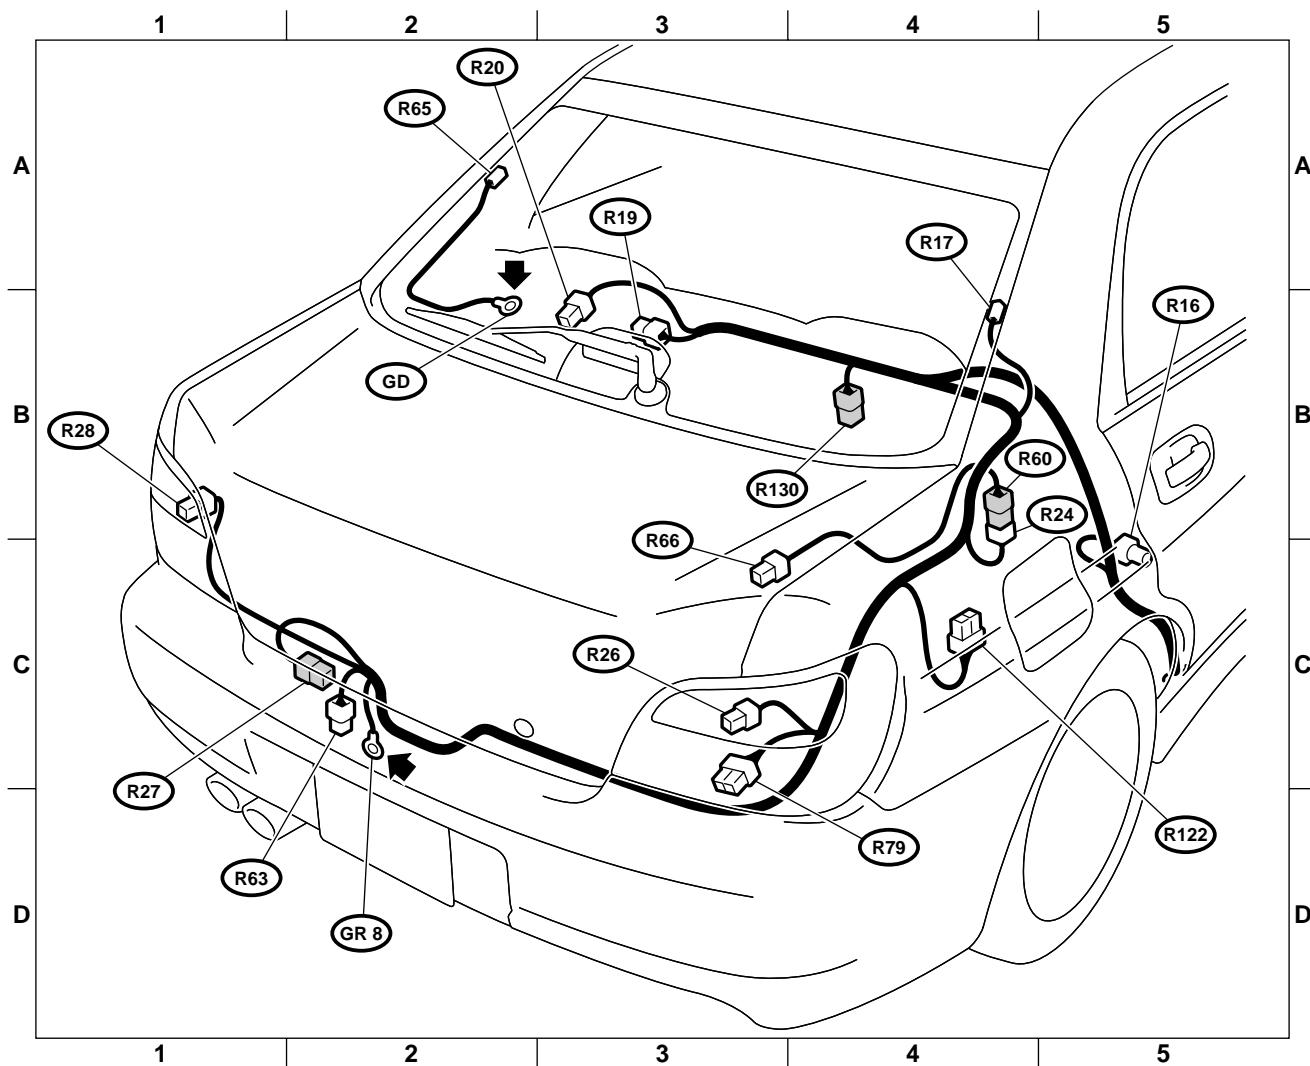

BO0232

# REAR WIRING HARNESS AND REAR GATE CORD

## WIRING SYSTEM

### 53.Rear Wiring Harness and Rear Gate Cord

#### A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R16	3		C-4		Rear door switch RH
R26	6		C-3		Rear combination light RH
R28	4		C-1		Rear combination light LH
R30	2	★	C-4		Diode
R38	8	★	C-3	D34	Rear gate cord
R39	4		D-4	D35	
R63	2	★	C-2		License plate light
R79	10	★	D-3		Trailer connector
R97	2	★	C-1		Antenna amp.
R116	8	★	C-3		Rear wiper intermittent module
R122	10	★	C-4		Fuel pump control (Turbo Model)
R141	2	★	C-3		License plate light


★: Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
D34	8	★	C-3	R38	Rear wiring harness
D35	4	Black	D-4	R39	
D39	2	★	B-3		High-mounted stop light
D40	1	Black	A-2		Rear defogger (Power)
D43	4	★	A-2		Rear wiper motor
D46	2	Black	A-2		Rear gate latch switch
D47	4	★	A-2		Rear gate lock actuator cord
D48	1	Black	A-2		Rear defogger (Ground)
D74	2	★	A-3		Rear defogger choke coil

★: Non-colored

# REAR WIRING HARNESS AND REAR GATE CORD

WIRING SYSTEM

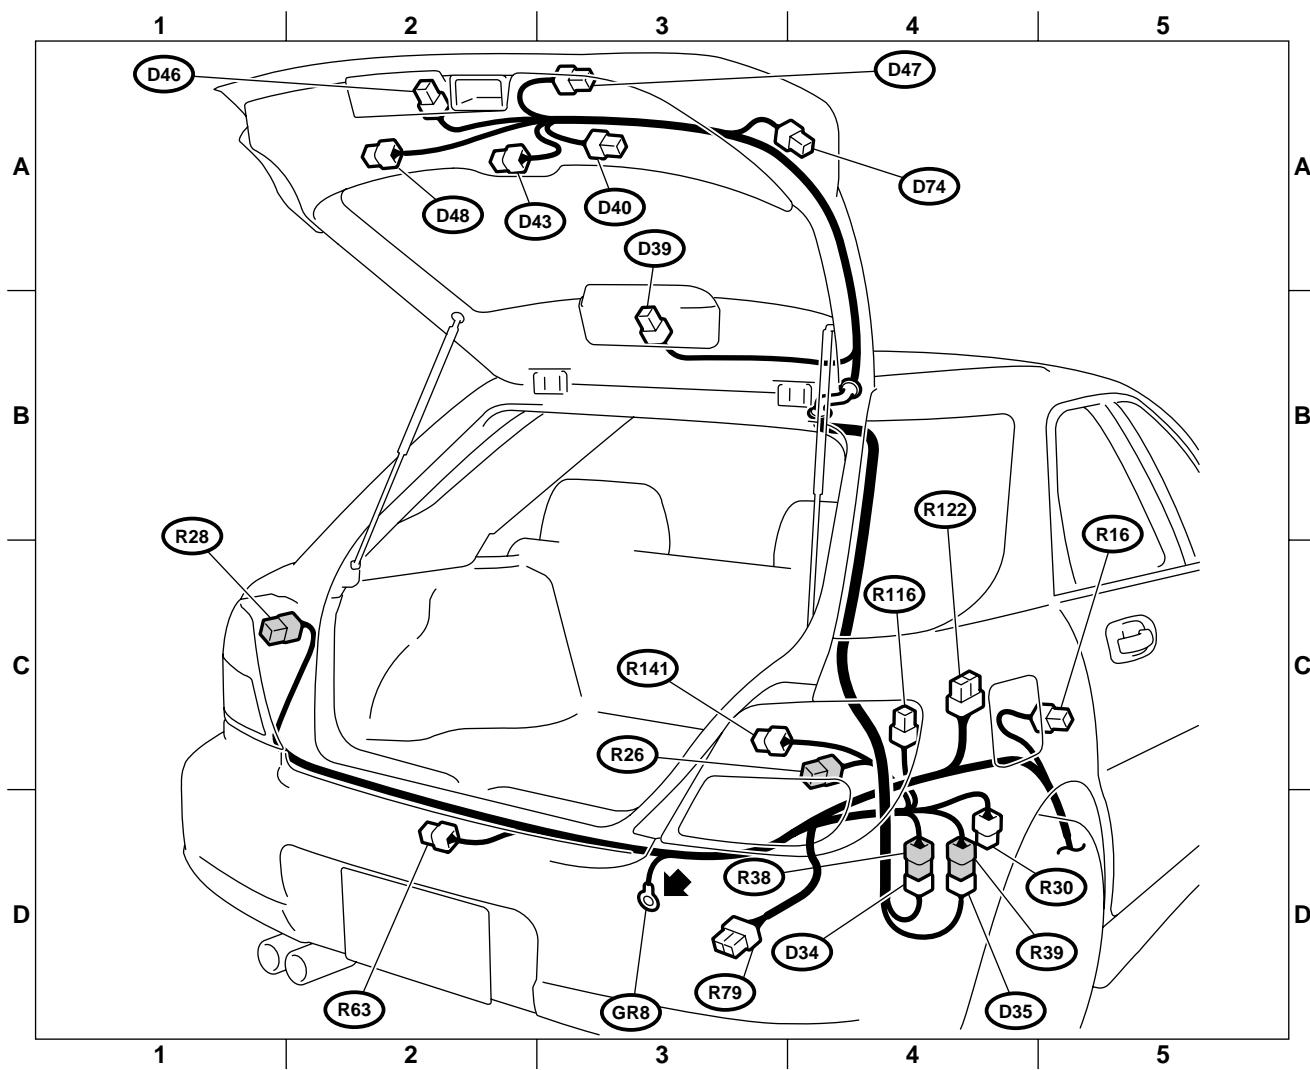

BO0233

## **REAR WIRING HARNESS AND REAR GATE CORD**

**WIRING SYSTEM**

---