

## 9. Fuel Filter

### A: REPLACEMENT

For fuel filter replacement procedures, refer to “FU” section.

Non-turbo model

<Ref. to FU(H4SO)-61, Fuel Filter.>

Turbo model

<Ref. to FU(H4DOTC)-65, Fuel Filter.>

STi model

<Ref. to FU(STi)-60, Fuel Filter.>

### B: INSPECTION

- 1) If it is clogged, or if replacement interval has been reached, replace it.
- 2) If water is found in it, shake and expel the water from inlet port.