

# ENGINE COOLANT TEMPERATURE SENSOR


FUEL INJECTION (FUEL SYSTEMS)

---

## 4. Engine Coolant Temperature Sensor

### A: REMOVAL


1) Disconnect the ground cable from battery.

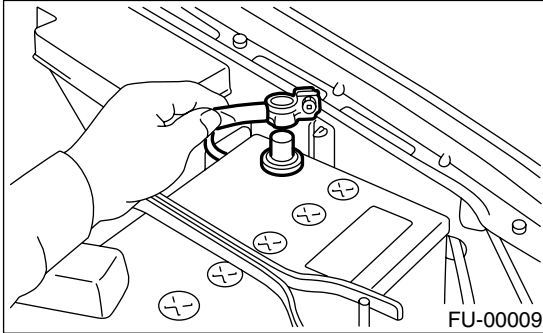

2) Remove the generator. <Ref. to SC(H4SO)-14, REMOVAL, Generator.>

3) Drain the engine coolant. <Ref. to CO(H4DOTC)-17, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

4) Disconnect the connector from the engine coolant temperature sensor.

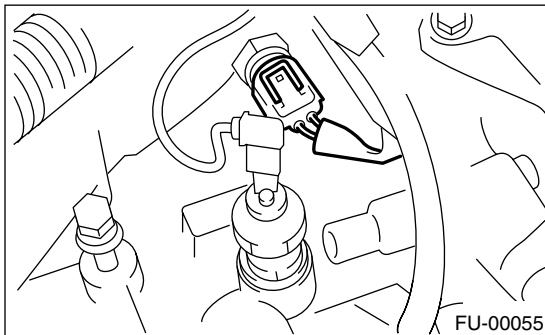

5) Remove the engine coolant temperature sensor.

### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**18 N·m (1.8 kgf·m, 13.3 ft·lb)**