



### 17.Main Relay

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.

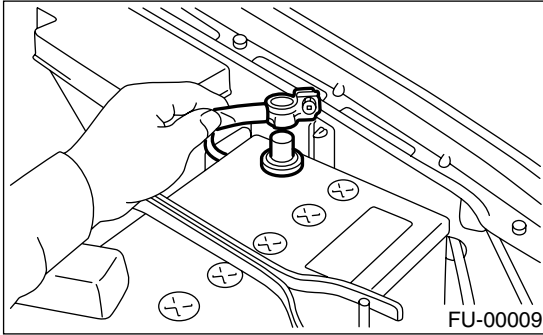

- 2) Remove the passenger's side front side sill cover.
- 3) Remove the bolt which holds the main relay bracket on the body.
- 4) Disconnect the connectors from the main relay.

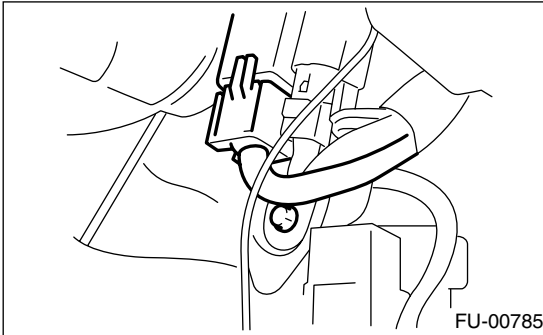

#### B: INSTALLATION

Install in the reverse order of removal.