


FUEL PUMP CONTROL UNIT

FUEL INJECTION (FUEL SYSTEMS)

19. Fuel Pump Control Unit

A: REMOVAL


1) Disconnect the ground cable from battery.

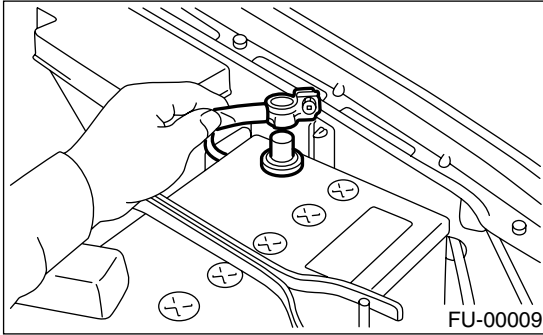

2) Remove the rear quarter trim. <Ref. to EI-49, REMOVAL, Rear Quarter Trim.>

3) Disconnect the connector from the fuel pump control unit.

4) Remove the fuel pump control unit.

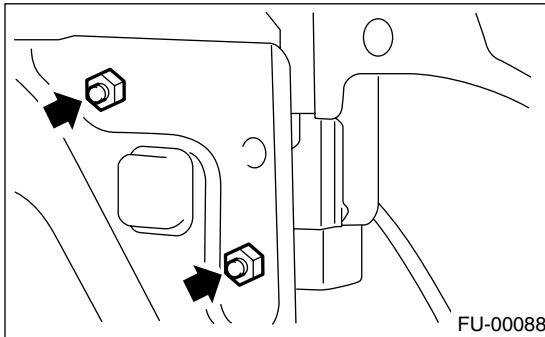

B: INSTALLATION

Install in the reverse order of removal.