

24. Fuel Level Sensor

A: REMOVAL


WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill the fuel.


NOTE:

Fuel level sensor is built in fuel pump assembly.


- 1) Remove the fuel pump assembly. <Ref. to FU(STi)-54, REMOVAL, Fuel Pump.>
- 2) Disconnect the connector from the fuel pump bracket.

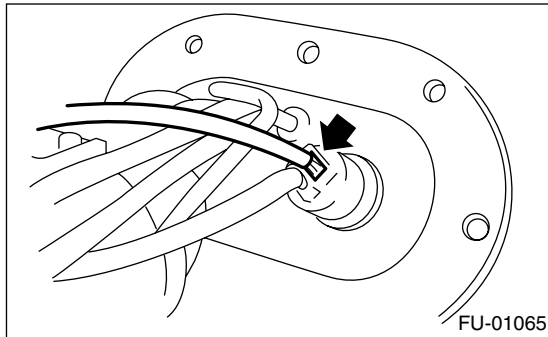

- 3) Remove the fuel temperature sensor.

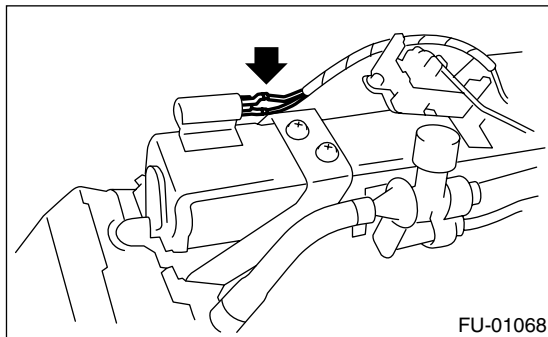

- 4) Remove the bolt which installs the fuel level sensor on mounting bracket.

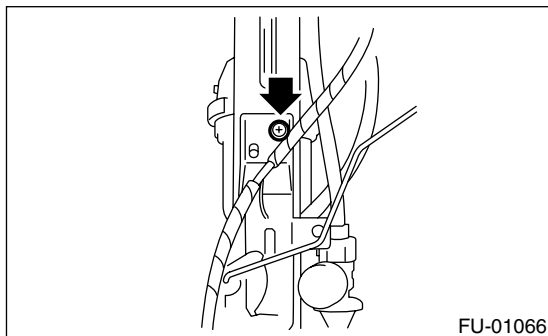

B: INSTALLATION

Install in the reverse order of removal.