


7. Air By-pass Valve

A: REMOVAL

1) Remove the air by-pass valve from intercooler.

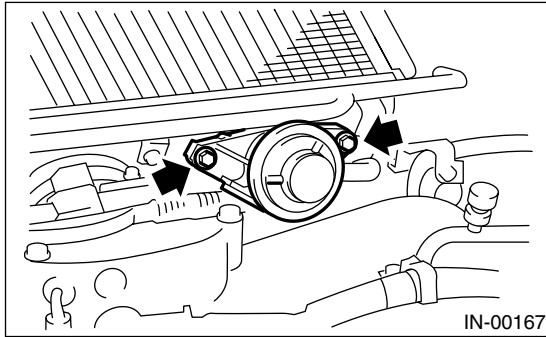

2) Disconnect the air by-pass hoses from air by-pass valve.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

16 N·m (1.6 kgf-m, 11.6 ft-lb)

