

# INTERCOOLER WATER SPRAY NOZZLE


INTAKE (INDUCTION)

---

## 10. Intercooler Water Spray Nozzle

### A: REMOVAL

- 1) Open the front hood.
- 2) Disconnect the connecting part of hose.
- 3) Push the clip of nozzle upward with the clip pressed by fingers from inside of front hood.

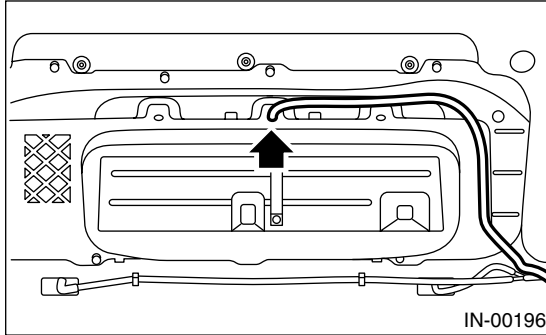

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Make sure the hose and nozzle are not deformed, damaged, cracked or clogged.