

## **21. Intake and Exhaust Valve**

### **A: REMOVAL AND INSTALLATION**

For operations related to intake and exhaust valve, refer to "19. Cylinder Head." <Ref. to ME(STi)-63, REMOVAL, Cylinder Head Assembly.> and <Ref. to ME(STi)-63, INSTALLATION, Cylinder Head Assembly.>