

## **22.Piston**

### **A: REMOVAL AND INSTALLATION**

For operations related to piston, refer to “20. Cylinder Block.” <Ref. to ME(STi)-70, REMOVAL, Cylinder Block.> and <Ref. to ME(STi)-74, INSTALLATION, Cylinder Block.>