

### 3. Ignition Coil & Ignitor ASSY

#### A: REMOVAL

Direct ignition type has been adopted.  
Refer to the "Spark Plug Removal" for removal procedure. <Ref. to IG(STi)-4, REMOVAL, Spark Plug.>

#### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**16 N·m (1.6 kgf-m, 11.7 ft-lb)**

#### C: INSPECTION

For inspection, refer to the following. <Ref. to EN(H4DOTC)-65, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>

# IGNITION COIL & IGNITOR ASSY

IGNITION

---

IG(STi)-8