

# EXTENSION CASE OIL SEAL

AUTOMATIC TRANSMISSION

## 11. Extension Case Oil Seal

### A: INSPECTION

Make sure the ATF does not leak from the joint of transmission and propeller shaft. If so, replace the oil seal. <Ref. to 4AT-44, REPLACEMENT, Extension Case Oil Seal.>

### B: REPLACEMENT


- 1) Clean the transmission exterior.
- 2) Drain the ATF completely.

NOTE:

Tighten the ATF drain plug after draining the ATF.

**Tightening torque:**

**25 N·m (2.5 kgf·m, 18.1 ft·lb)**

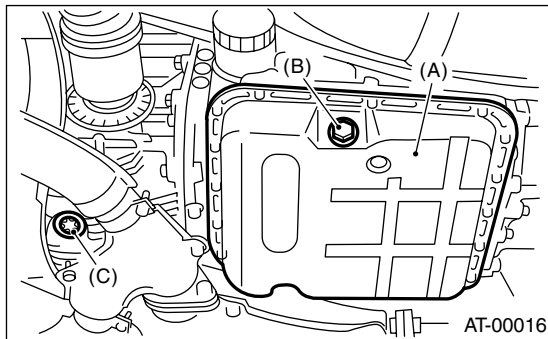

- (A) Oil pan
- (B) Drain plug
- (C) Differential oil drain plug

- 3) Remove the rear exhaust pipe and muffler.

Non-turbo model

<Ref. to EX(H4SO)-8, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-9, REMOVAL, Muffler.>

Turbo model

<Ref. to EX(H4DOTC)-13, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-14, REMOVAL, Muffler.>

- 4) Remove the heat shield cover. (If equipped)
- 5) Remove the propeller shaft. <Ref. to DS-14, REMOVAL, Propeller Shaft.>
- 6) Using the ST, remove the oil seal.  
ST 398527700 PULLER ASSY
- 7) Using the ST, install the oil seal.  
ST 498057300 INSTALLER
- 8) Install the propeller shaft. <Ref. to DS-15, INSTALLATION, Propeller Shaft.>
- 9) Install the heat shield cover. (If equipped)

- 10) Install the rear exhaust pipe and muffler.

Non-turbo model

<Ref. to EX(H4SO)-8, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-9, INSTALLATION, Muffler.>

Turbo model

<Ref. to EX(H4DOTC)-13, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-14, INSTALLATION, Muffler.>

- 11) Pour ATF and check the ATF level. <Ref. to 4AT-29, Automatic Transmission Fluid.>