


### 9. Oil Pipe

#### A: REMOVAL

Remove the oil pipe.

NOTE:

Always use a new gasket.

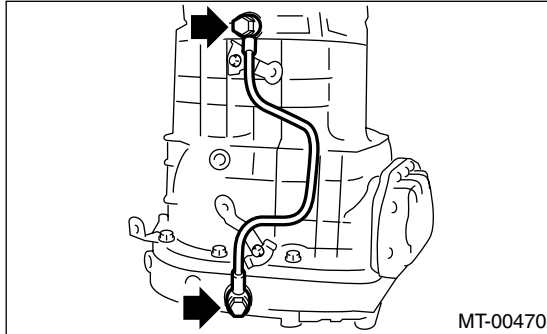

#### B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Always use a new gasket.

**Tightening torque:**

**32 N·m (3.3 kgf·m, 23.6 ft·lb)**

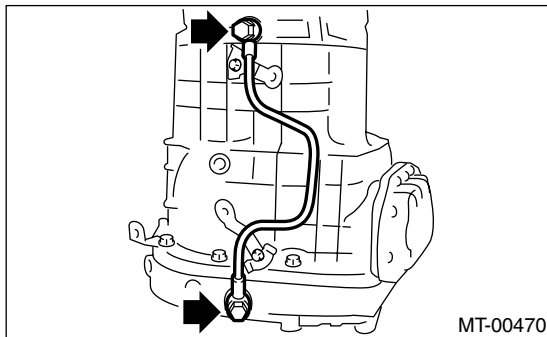

#### C: INSPECTION

- 1) Make sure there is no damage on pipe. If there is damage, replace the pipe.
- 2) Check the joint parts of pipe for oil leakage. If there is oil leakage, replace the gasket.