

28. Driver's Control Center Differential Control Module

A: REMOVAL

- 1) Remove the ground cable from battery.
- 2) Remove the glove box.
<Ref. to EI-40, REMOVAL, Glove Box.>
- 3) Disconnect the connector after removing the bolt from the inside of glove box, and then remove the control module.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

44 N·m (4.5 kgf·m, 32.5 ft·lb)