

7. Inspection Mode

A: OPERATION

WARNING:

Observe the road traffic law.

- 1) Call up the Self-diagnosis diagnostic trouble code (DTC). <Ref. to 6MT-12, SELF-DIAGNOSIS DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Read Diagnostic Trouble Code (DTC).>
- 2) Apply the parking brake.
- 3) Depress the brake pedal.
- 4) Operate the Manual mode switch once or more, and then set to Manual mode.
- 5) Turn the center differential control dial to differential lock and differential free for once, and turn it to differential lock, and then wait three seconds.
- 6) Drive the vehicle in 15 km/h (9 MPH) for more than 5 sec.