

## **CLEAR MEMORY MODE**

MANUAL TRANSMISSION AND DIFFERENTIAL (DIAGNOSTICS)

---

### **8. Clear Memory Mode**

#### **A: OPERATION**

Stored DTC is cleared when ignition switch turns on next time, if there is no malfunction on each I/O signal at the time when finishing inspection mode after calling up the Self-diagnosis DTC (all Self-diagnosis DTC is cleared).