

2. Wheel Alignment

A: INSPECTION

NOTE:

Front and rear wheel alignment must be simultaneously measured and/or adjusted. Follow the procedure in "FS" section "Wheel Alignment" for measurement and/or adjustment of wheel alignment. <Ref. to FS-6, INSPECTION, Wheel Alignment.>