

2. Tire


A: INSPECTION

- 1) Take stone, glass, nail etc. off from tread groove.
- 2) Replace the tire if as follows.

CAUTION:

When replacing a tire, make sure to use only the same size, construction and load range tire as originally installed.

- (1) When a large crack on the side wall, damage or a crack on tread are found.
- (2) When the "tread wear indicator" appears as a solid band across the tread.

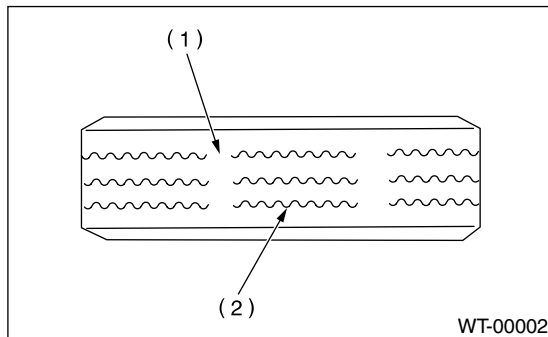

- (1) Tread wear indicator
- (2) Tire tread

- 3) When a crack on tire valve is found, replace the tire valve.

1. TIRE ROTATION

Rotate tires periodically (12,500 km/7,500 miles) as shown in the figure, in order to prevent them from uneven wear and to prolong their life.

