

11.Center Differential

A: NOTE

For removal, installation and inspection work, refer to "4AT", "5MT" or "6MT" section.

4AT model:

<Ref. to 4AT-91, Center Differential Carrier.>

5MT model:

<Ref. to 5MT-47, Center Differential.>

6MT model:

<Ref. to 6MT-60, Center Differential.>