


# HEATER CORE

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


## 10.Heater Core

### A: REMOVAL

- 1) Remove the heater and cooling unit. <Ref. to AC-35, REMOVAL, Heater and Cooling Unit.>
- 2) Loosen the screws to remove the heater core cover.

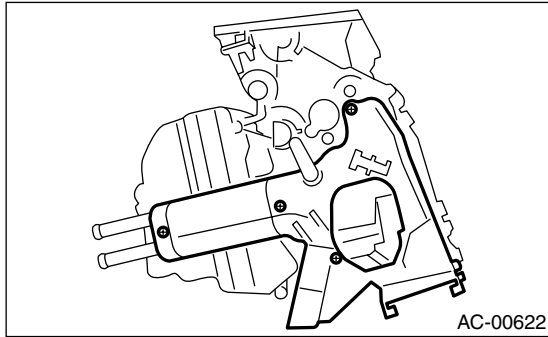

- 3) Remove the heater core.

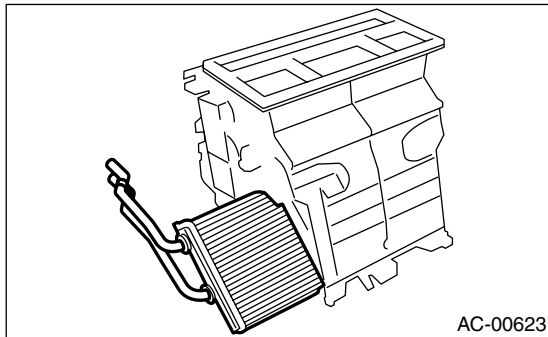

### B: INSTALLATION

Install in the reverse order of removal.