


CONTROL UNIT (AUTO A/C MODEL)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

12. Control Unit (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the center console panel.
- 3) Disconnect the connector and aspirator hose (A).

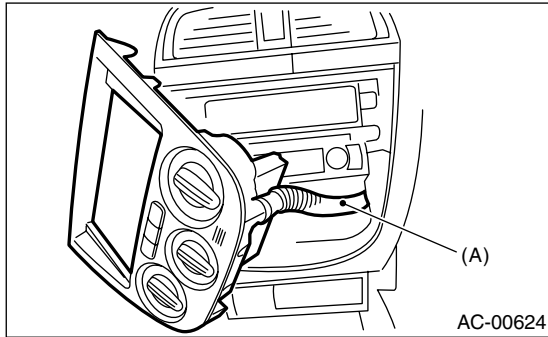

B: INSTALLATION

Install in the reverse order of removal.