


## SUNLOAD SENSOR (AUTO A/C MODEL)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

### 21. Sunload Sensor (Auto A/C Model)

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front defroster grille.
- 3) Disconnect the sunload sensor connector (A).

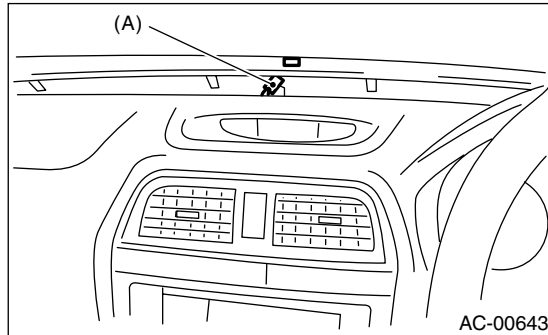

#### CAUTION:

Be careful not to damage the sensors and interior trims when removing them.

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

<Ref. to AC-29, SUNLOAD SENSOR, Diagnostic Procedure for Sensors.>