

AIR VENT GRILLE


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

22. Air Vent Grille

A: REMOVAL


1. CENTER GRILLE

- 1) Disconnect the ground cable from battery.
- 2) Remove the center console panel (A).
- 3) Loosen the two screws to remove the center air vent grille (B).

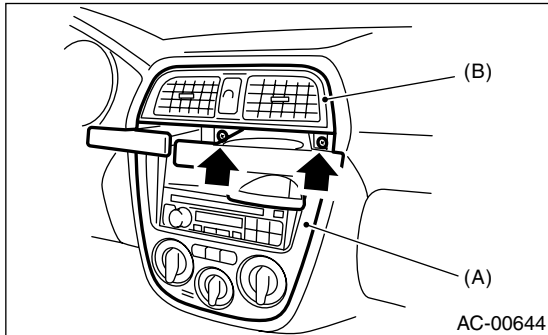

2. SIDE GRILLE

- 1) Disconnect the ground cable from battery.
- 2) Remove the heater vent duct. <Ref. to AC-44, REMOVAL, Heater Vent Duct.>
- 3) Loosen the screws to remove the side air vent grille.

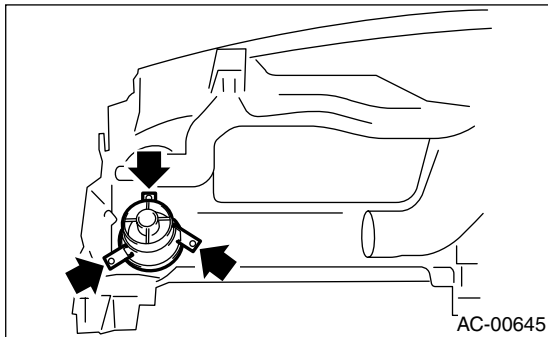

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

The direction and amount of air should be adjusted smoothly.

The adjustment should be kept in each position.