

BASIC DIAGNOSTIC PROCEDURE

AIRBAG SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

	Step	Check	Yes	No
1	READ DTC. <Ref. to AB-24, Read Diagnostic Trouble Code (DTC).>	Is the normal code being detected?	Finish the diagnosis.	Go to step 2.
2	READ DTC. <Ref. to AB-24, Read Diagnostic Trouble Code (DTC).>	Is the DTC being detected?	Go to step 3.	Go to "Airbag Warning Light Failure". <Ref. to AB-27, Airbag Warning Light Failure.>
3	PERFORM THE DIAGNOSIS. 1) Judge the possible cause from "List of Diagnostic Trouble Code (DTC)". <Ref. to AB-32, List of Diagnostic Trouble Code (DTC).> 2) Inspect using "Diagnostic Chart with Diagnostic Trouble Code (DTC)". 3) Repair the cause of the trouble. 4) Perform the clear memory mode. <Ref. to AB-26, Clear Memory Mode.> 5) Perform the inspection mode. <Ref. to AB-25, Inspection Mode.> 6) Read any DTC again.	Is the DTC being detected?	Perform the procedure 1) to 5) in step 3.	Finish the diagnosis.