


## 2. Pretensioner Connector


### A: OPERATION

1) How to disconnect:

- (1) Using a flat tip screwdriver, pry the push lock upward to unlock.

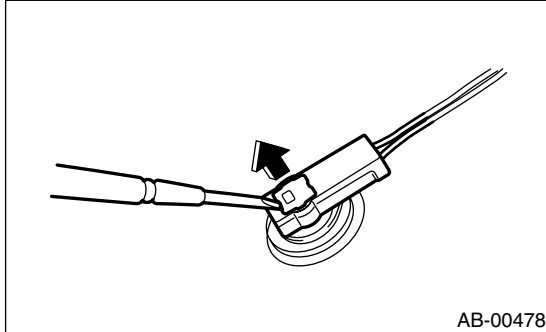

- (2) Pull the connector to disconnect from retractor assembly.

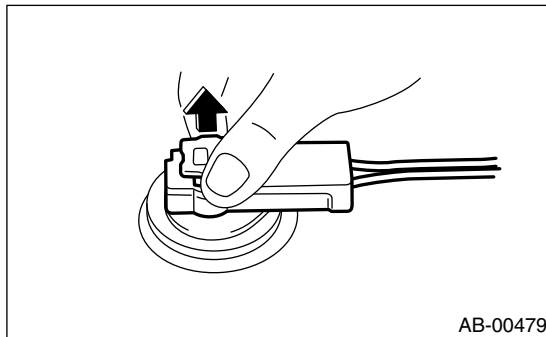

2) How to connect:

Connect the connector in reverse order of disconnecting. At this time, be sure to insert the connector in until connecting sound is heard.

#### CAUTION:

- Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.
- At this time, be sure to insert the push lock in.

