

# REAR SEAT BELT


## SEAT BELT SYSTEM

### 5. Rear Seat Belt


#### A: REMOVAL

##### 1. OUTER BELT RH AND LH (SEDAN MODEL)


- 1) Remove the rear seat. <Ref. to SE-16, REMOVAL, Rear Seat.>
- 2) Remove the side sill rear lower cover. <Ref. to EI-48, REMOVAL, Lower Inner Trim.>
- 3) Remove the seat belt lower anchor bolt.

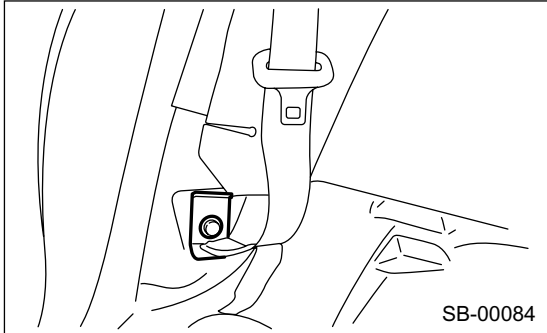


- 4) Remove the anchor cover. Remove the bolt and shoulder anchor from pillar.

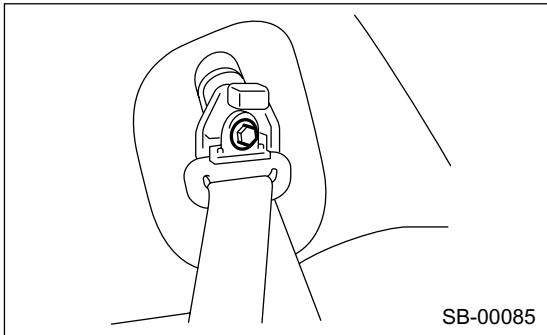

- 5) Remove the quarter pillar trim. <Ref. to EI-49, REMOVAL, Rear Quarter Trim.>
- 6) Remove the bolts, and then detach the seat belt.

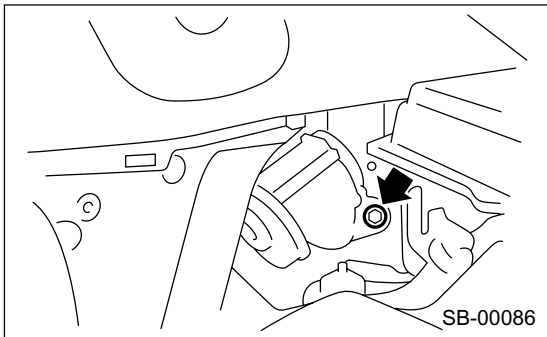


- 7) Remove the two bolts and adjustable anchor ASSY.

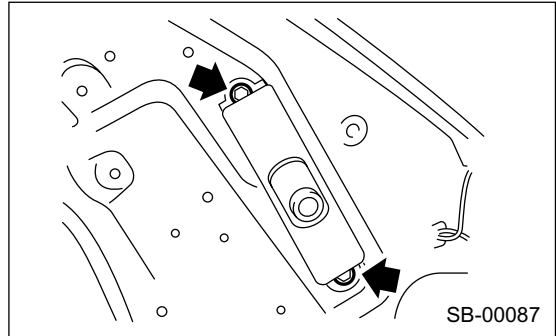


##### 2. SHOULDER BELT CTR (SEDAN MODEL)

- 1) Remove the rear seat. <Ref. to SE-16, REMOVAL, Rear Seat.>
- 2) Remove the seat belt lower anchor bolt.

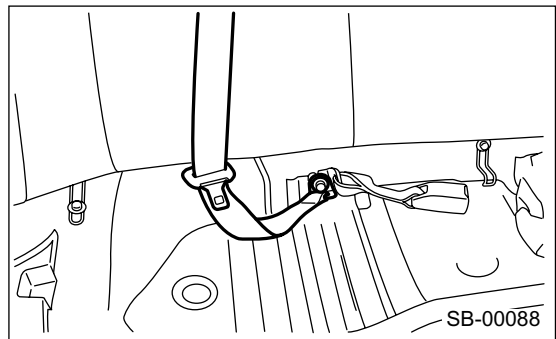


- 3) Remove the quarter pillar trim. <Ref. to EI-49, REMOVAL, Rear Quarter Trim.>
- 4) Remove the rear shelf trim. <Ref. to EI-54, REMOVAL, Rear Shelf Trim.>
- 5) Remove the bolts, and then detach the seat belt.

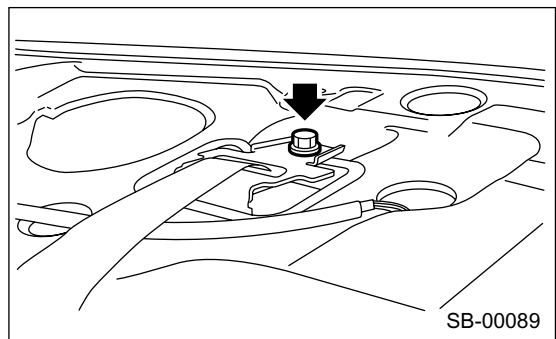


### 3. CENTER BELT (SEDAN MODEL)

- 1) Remove the rear cushion. <Ref. to SE-16, REMOVAL, Rear Seat.>
- 2) Remove the bolts, and then detach the inner belt.

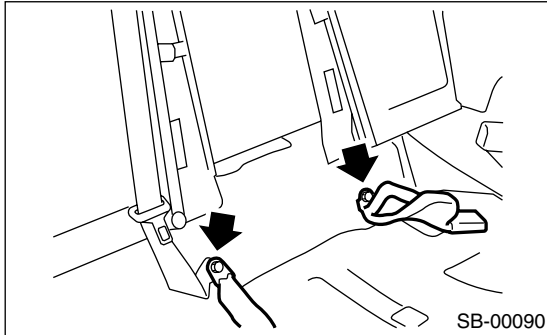


### 4. OUTER BELT RH AND LH (WAGON MODEL)

- 1) Remove the luggage floor mat. <Ref. to EI-57, REMOVAL, Luggage Floor Mat.>
- 2) Remove the rear seat. <Ref. to SE-16, REMOVAL, Rear Seat.>
- 3) Remove the side sill rear lower cover. <Ref. to EI-48, REMOVAL, Lower Inner Trim.>
- 4) Remove the seat belt lower anchor bolt.

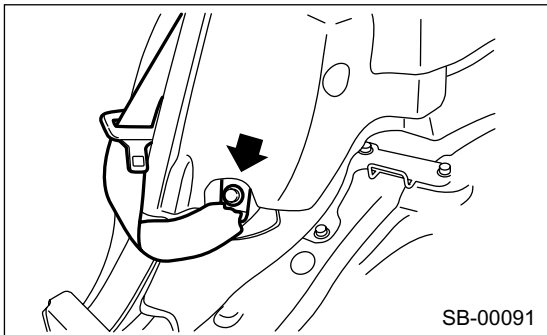


- 5) Remove the anchor cover. Remove the bolt and shoulder anchor from pillar.

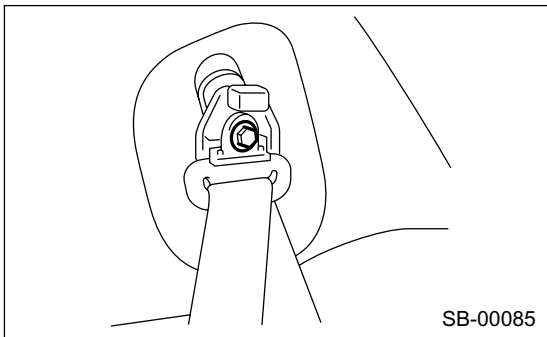


- 6) Remove the rear quarter trim. <Ref. to EI-49, REMOVAL, Rear Quarter Trim.>

- 7) Remove the bolts, and then detach the outer belt side.

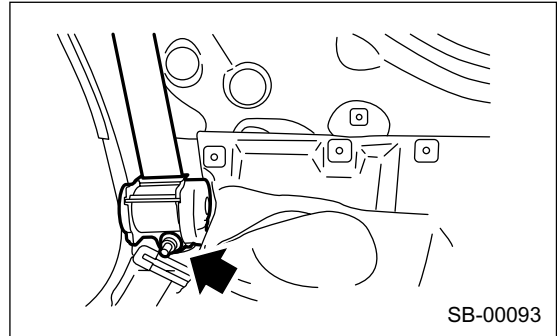


- 8) Remove the two bolts and adjustable anchor ASSY.

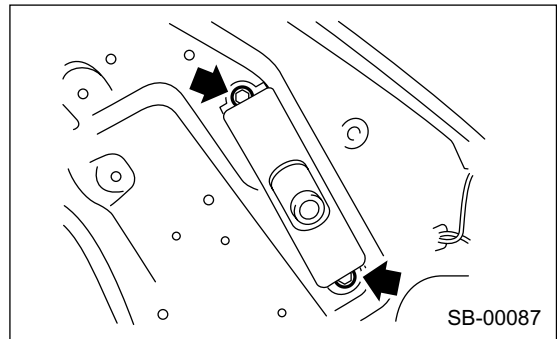

### 5. SHOULDER BELT CTR (WAGON MODEL)

- 1) Remove the shoulder anchor bolt, and then detach the shoulder anchor from quarter pillar.

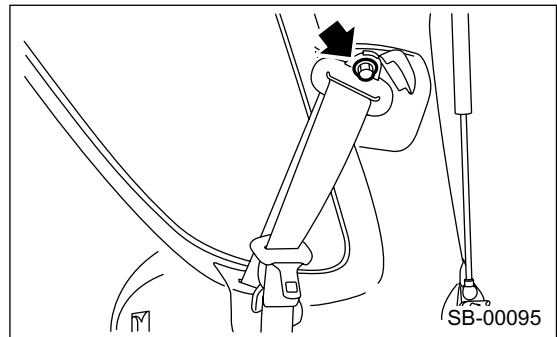


- 2) Remove the quarter trim. <Ref. to EI-49, REMOVAL, Rear Quarter Trim.>

# REAR SEAT BELT


## SEAT BELT SYSTEM

3) Remove the three bolts, and then detach the outer belt center.

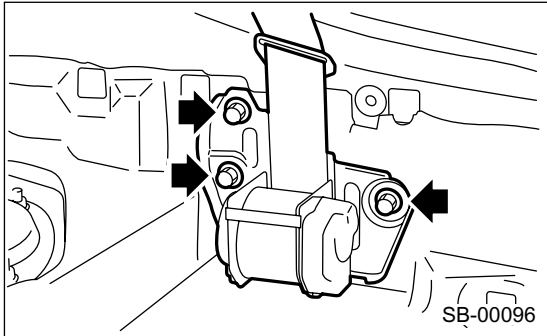

### 6. CENTER BELT (WAGON MODEL)

- 1) Remove the rear cushion.
- 2) Remove the bolt, and then detach the inner belt.

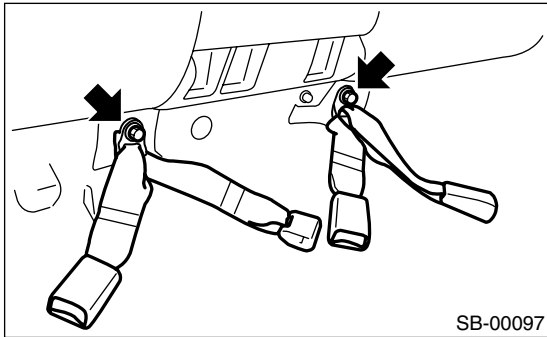

## B: INSTALLATION

### 1. OUTER BELT RH AND LH (SEDAN MODEL)

Install in the reverse order of removal.

#### CAUTION:

- During installation, make sure that the seat belts are not twisted.
- After installation, make sure that the seat belts can be smoothly extended and wound.

### 2. SHOULDER BELT CTR (SEDAN MODEL)

Install in the reverse order of removal.

#### CAUTION:

- During installation, make sure that the seat belts are not twisted.
- After installation, make sure that the seat belts can be smoothly extended and wound.

### 3. CENTER BELT (SEDAN MODEL)

Install in the reverse order of removal.

#### CAUTION:

During installation, make sure that the seat belts are not twisted.

### 4. OUTER BELT RH AND LH (WAGON MODEL)

Install in the reverse order of removal.

#### CAUTION:

- During installation, make sure that the seat belts are not twisted.
- After installation, make sure that the seat belts can be smoothly extended and wound.

### 5. SHOULDER BELT CTR (WAGON MODEL)

Install in the reverse order of removal.

#### CAUTION:

- During installation, make sure that the seat belts are not twisted.
- After installation, make sure that the seat belts are smoothly extended and wound.

### 6. CENTER BELT (WAGON MODEL)

Install in the reverse order of removal.

#### CAUTION:

During installation, make sure that the seat belts are not twisted.

## C: INSPECTION

### 1. OUTER BELT RH AND LH (SEDAN MODEL)

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

### 2. SHOULDER BELT CTR (SEDAN MODEL)

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

### **3. CENTER BELT (SEDAN MODEL)**

Check for the following, and replace with new parts if necessary.

- Inner belt is deformed or damaged.
- Seat belt buckle is engaged improperly.

### **4. OUTER BELT RH AND LH (WAGON MODEL)**

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

### **5. SHOULDER BELT CTR (WAGON MODEL)**

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

### **6. CENTER BELT (WAGON MODEL)**

Check for the following, and replace with new parts if necessary.

- Inner belt is deformed or damaged.
- Seat belt buckle is engaged improperly.

# REAR SEAT BELT

SEAT BELT SYSTEM

---