

GENERAL DESCRIPTION

LIGHTING SYSTEM

1. General Description

A: SPECIFICATIONS

Headlight		12 V — 55 W/60 W (Halogen)	
		D2R 35W (HID)	
Front turn signal light		12 V — 21 W	
Clearance/Parking/Front side marker light		12 V — 5 W	
Front fog light		12 V — 55 W	
Rear combination light	Sedan	Tail/Stop/Rear side marker light	12 V — 5/21 W
		Tail light	12 V — 5/21 W
		Stop light	12 V — 21 W
	Wagon	Tail/Stop/Rear side marker light	12 V — 5/21 W
		Turn signal light	12 V — 21 W
		Back-up light	12 V — 21 W
License plate light		12 V — 5 W	
High-mounted stop light	Sedan	Standard type	12 V — 21 W
		Rear spoiler built-in type	12 V — 1.2 W (LED)
	Wagon		12 V — 13 W
Room light		12 V — 8 W	
Spot light		12 V — 8 W	
Luggage room light		12 V — 13 W	
Trunk room light		12 V — 5 W	
Glove box light		12 V — 1.4 W	

B: PRECAUTIONS

- Before disassembling or reassembling parts, always disconnect the battery ground cable. When replacing radio, control module, and other parts provided with memory functions, record memory contents before disconnecting the battery ground cable. Otherwise, the memory will be erased.
- Reassemble in reverse order of disassembly, unless otherwise indicated.
- Adjust parts to the given specifications.
- Connect the connectors and hoses securely during reassembly.
- After reassembly, make sure functional parts operate smoothly.

WARNING:

- **Airbag system wiring harness is routed near electrical parts and switches. All airbag system wiring harnesses and connectors are yellow. Do not use electric test equipment on these circuits.**
- **Be careful not to damage the airbag system wiring harness when servicing electrical parts and switches.**

C: PREPARATION TOOL

1. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.