


8. Outer Mirror Assembly

A: REMOVAL

- 1) Remove the scalp cap. <Ref. to GW-16, REPLACEMENT, Scalp Cap.>
- 2) Remove the door trim. <Ref. to EI-38, REMOVAL, Front Door Trim.>
- 3) Remove the mirror gusset cover.

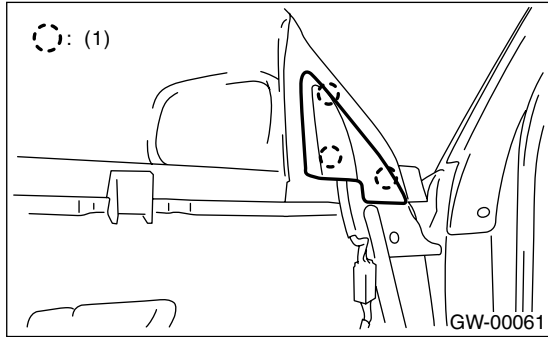

(1) Hook

C: INSPECTION

Check to ensure that the rearview mirror moves properly when battery voltage is applied to terminals.

Mirror heater not-equipped model:

Switch position	Terminal No.
OFF	—
UP	4 (+) and 6 (-)
DOWN	6 (+) and 4 (-)
LEFT	5 (+) and 6 (-)
RIGHT	6 (+) and 5 (-)


If NG, replace the mirror.

Mirror heater equipped model:

Switch position	Terminal No.
OFF	—
UP	6 (+) and 8 (-)
DOWN	8 (+) and 6 (-)
LEFT	7 (+) and 8 (-)
RIGHT	8 (+) and 7 (-)

If NG, replace the mirror.

- 4) Disconnect the mirror connector.
- 5) Loosen the screws to remove the mirror assembly.

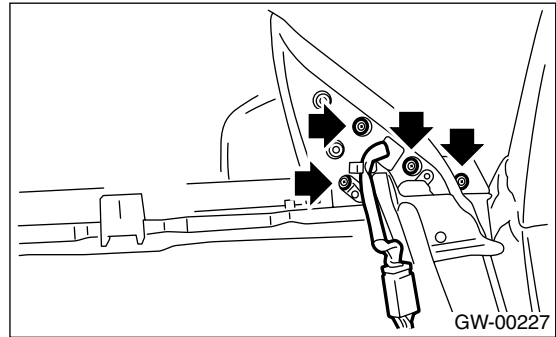

B: INSTALLATION

Install in the reverse order of removal.