


20.Inner Rearview Mirror

A: REMOVAL


NOTE:

The spring cannot be reused. Prepare a new spring before removal.

- 1) Turn the mirror base 90° clockwise or counter-clockwise to remove it.

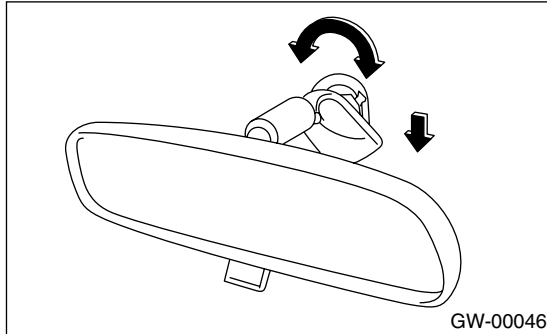

- 2) Remove the spring from mirror base.

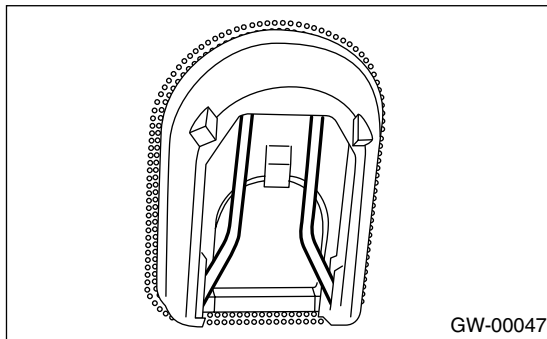

CAUTION:

Be careful not to damage the mirror surface.

- 3) If the mirror base is damaged, remove the mirror base using piano wire or spatula, etc.

CAUTION:

Be careful not to damage the windshield glass.

B: INSTALLATION

- 1) If removing the mirror base, remove the remaining adhesive thoroughly, and then fit the mirror base to mark on windshield glass to install.

Adhesive:

REPAIR KIT IN MR (Part No. 65029FC000) or equivalent

- 2) Verify that the mirror base is adhered securely, and then install the spring.
- 3) Install in the reverse order of removal.

C: INSPECTION

Make sure the mirror is not damaged.

Make sure the spring is not deteriorated.