


8. Ambient Sensor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the ambient sensor connector.
- 3) Remove the ambient sensor (A) from radiator lower panel.

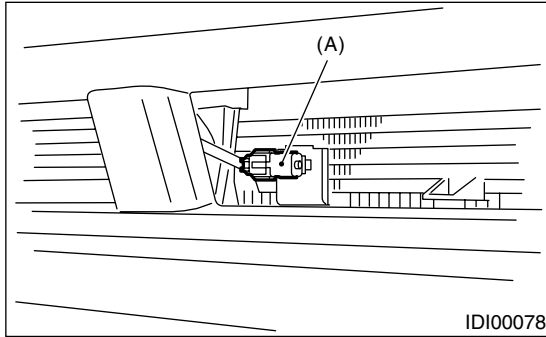


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the ambient sensor resistance.

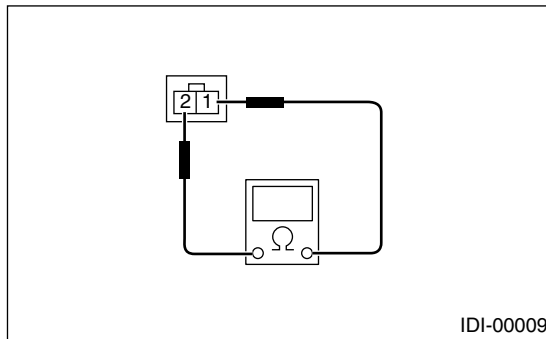

Terminal	Resistance
1 and 2	2.2 kΩ/25°C (77°F)

If NG, replace the ambient sensor.

AMBIENT SENSOR

INSTRUMENTATION/DRIVER INFO
