



8. Cowl Panel

A: REMOVAL

- 1) Open the front hood.
- 2) Remove the wiper arm. <Ref. to WW-12, REMOVAL, Front Wiper Arm.>
- 3) Remove the front panel seal.

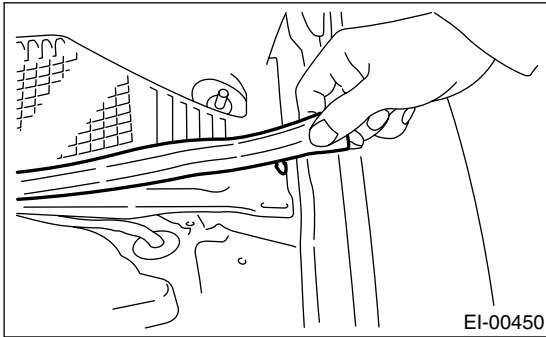

- 4) Disengage the clips (A) to remove the cowl panel.

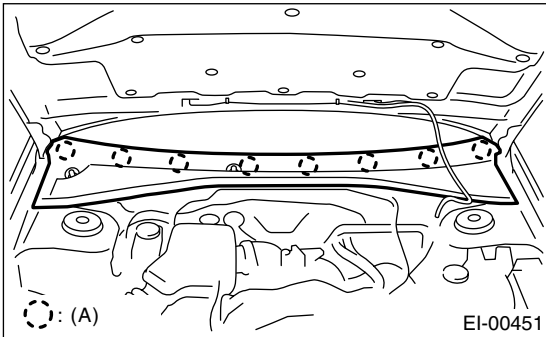

B: INSTALLATION

Install in the reverse order of removal.