


10.Rear Spoiler

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Open the trunk lid.
- 3) Remove the electrical connector (A) of high mount stop light.

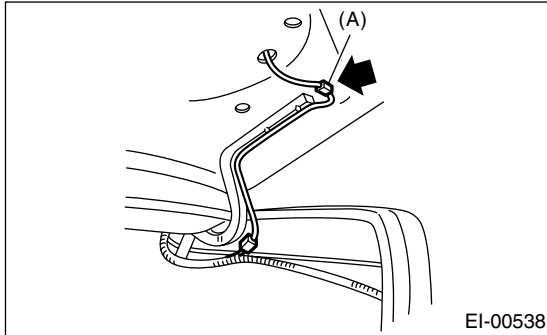

EI-00538


- 4) Loosen the mounting nut of rear spoiler to remove rear spoiler.

CAUTION:

- When removing the nut, do not drop it into trunk lid.
- Pay attention to avoid damage during removal or installation.

Small-sized rear spoiler:


Four tightening positions, two clips

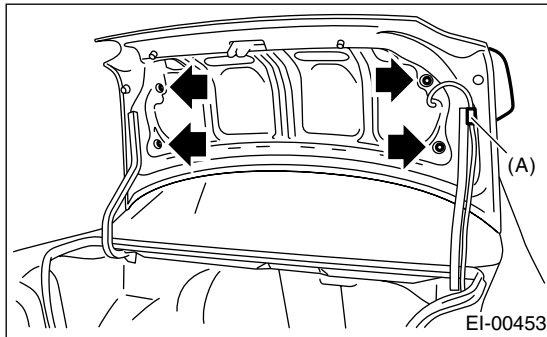

EI-00453

Large-sized rear spoiler:

Twelve tightening positions, four clips

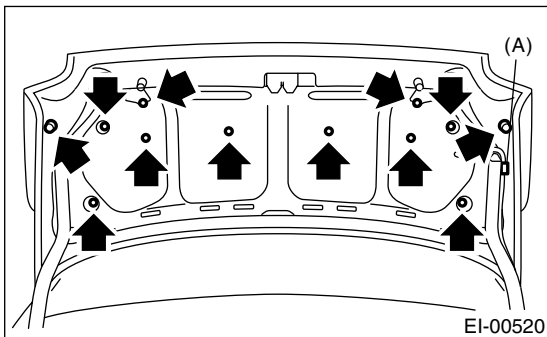

EI-00520

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Clean the mounting surfaces of trunk lid and spoiler before installation.

Tightening torque:

7.4 N·m (0.75 kgf·m, 5.46 ft·lb)