


## 23.Sun Visor

### A: REMOVAL

Remove the mounting screws, and then detach the sun visor (A), hook (B) and center visor (C).

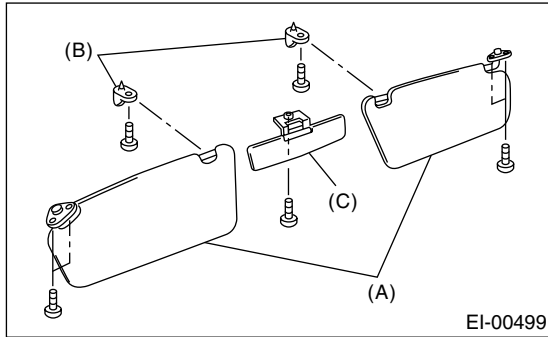

### B: INSTALLATION

Install in the reverse order of removal.