


31. Heat Shield Cover

A: REMOVAL

1. FRONT HEAT SHIELD COVER


Loosen the four bolts to remove the front heat shield cover.

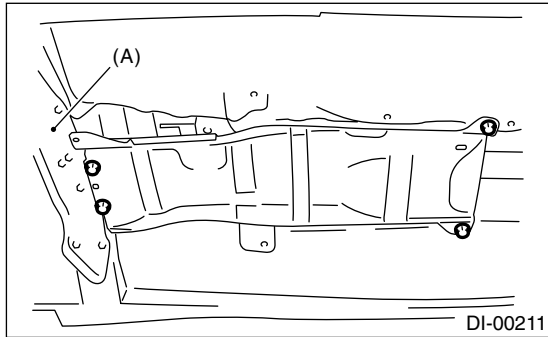

(A) Transmission mount

2. CENTER HEAT SHIELD COVER


Loosen the four bolts to remove the center heat shield cover.

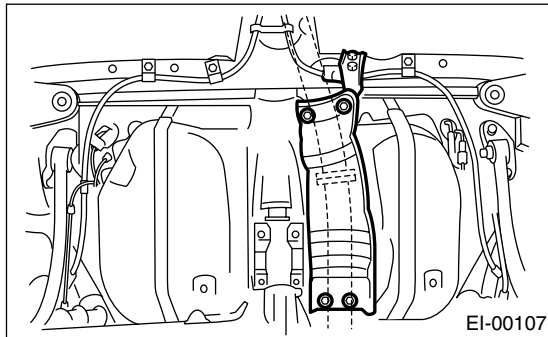

3. REAR HEAT SHIELD COVER

1) Remove the muffler. <Ref. to EX(H4SO)-9, REMOVAL, Muffler.>, <Ref. to EX(H4DOTC)-14, REMOVAL, Muffler.>

2) Loosen the four bolts to remove the rear heat shield cover.

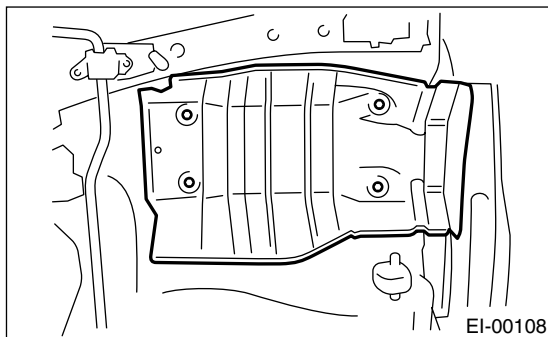

B: INSTALLATION

Install in the reverse order of removal.

HEAT SHIELD COVER

EXTERIOR/INTERIOR TRIM
