



## 2. Front Hood Panel

### A: REMOVAL

- 1) Open the front hood to remove washer nozzles.
- 2) Release the clips to remove hood insulator.

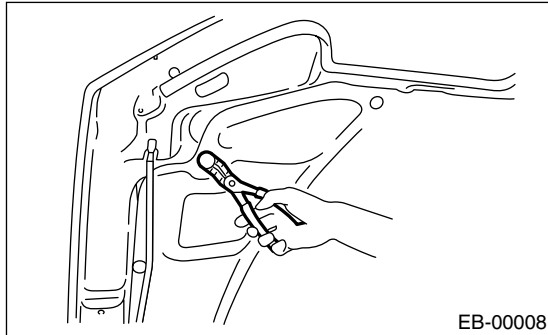

- 3) Remove the bolts to remove the front hood from hinges.

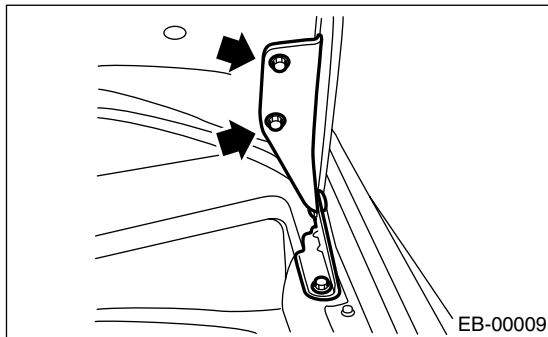

### B: INSTALLATION


- 1) Install in the reverse order of removal.
- 2) Adjust the clearance between front hood panel and front fender panel. Clearance must be equal at both sides.

#### **Tightening torque:**

**24.5 N-m (2.5 kgf-m, 18.1 ft-lb)**

### C: ADJUSTMENT

- 1) Use the hinge mounting holes to align the front hood longitudinally and laterally.

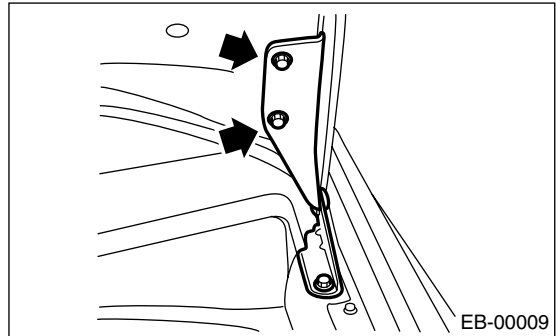

- 2) Adjust the height at front end of hood. <Ref. to SL-41, ADJUSTMENT, Front Hood Lock Assembly.>

- 3) Rotate the hood buffer to adjust lateral height.

