


## 8. Trunk Lid Panel

### A: REMOVAL

#### 1. TRUNK LID

- 1) Open the trunk lid.
- 2) Disconnect the trunk lid connector.
- 3) Loosen the trunk lid mounting bolts to remove the trunk lid from hinges.

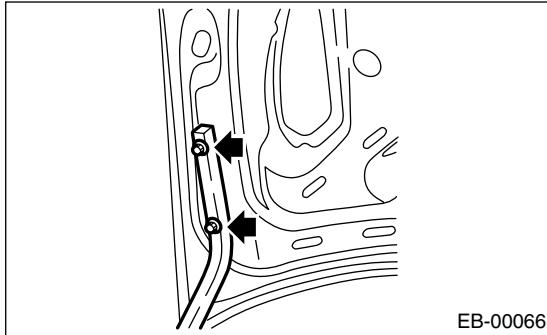


#### 2. TORSION BAR

- 1) Open the trunk lid.
- 2) Using the ST, remove the torsion bar from hinge link.

ST 927780000 REMOVER

#### CAUTION:

During removal and installation, carefully handle the torsion bar, because it will generate reactive force.

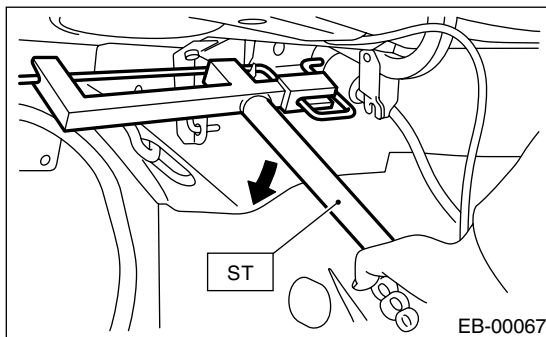

- 3) Remove the right/left torsion bars.

#### CAUTION:

Be careful not to get hit by the trunk lid, because the trunk lid will slam shut after the torsion bar is removed.

### B: INSTALLATION

#### 1. TRUNK LID

- 1) Install in the reverse order of removal.
- 2) Install the trunk lid with uniform clearance.

#### Tightening torque:

**14 N·m (1.43 kgf-m, 10.3 ft-lb)**

#### 2. TORSION BAR

- 1) Install in the reverse order of removal.
- 2) Apply grease to the rotating area of hinges and mating surface of torsion bar.