

2. Cruise Control Module

A: NOTE

Engine Control Module (ECM) controls cruise control system.

B: REMOVAL

<Ref. to FU(STi)-41, REMOVAL, Engine Control Module (ECM).>

C: INSTALLATION

<Ref. to FU(STi)-41, INSTALLATION, Engine Control Module (ECM).>