


2. Rear Spoiler


A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Open the trunk lid.
- 3) Disconnect the connector of high mounted stop light.

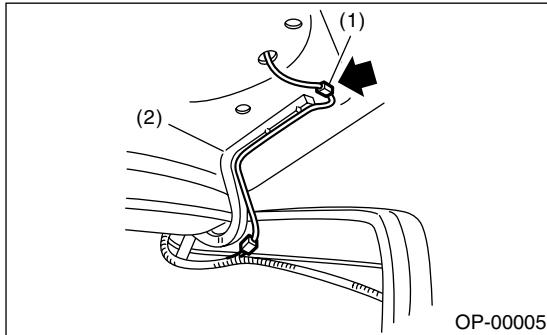

- (1) Connector
- (2) Trunk hinge

- 4) Remove the retention cable with the trunk hinge lower side bolt.
- 5) Remove the mounting nuts of rear spoiler.

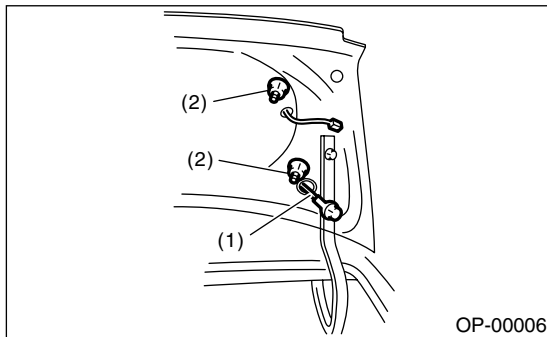

- (1) Retention cable
- (2) Mounting nut

- 6) Remove the rear spoiler with retention cable.

CAUTION:

Pay attention to avoid damage during removal or installation.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Rear spoiler to trunk lid

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

Retention cable to trunk hinge

13.7 N·m (1.4 kgf-m, 10.1 ft-lb)