


## TRANSMISSION MOUNTING

AUTOMATIC TRANSMISSION

### 16. Transmission Mounting

#### A: GENERAL

The transmission mounting consists of a pitching stopper, cushion rubber, and a cross member. In addition to support the transmission, these components absorb noise and vibration caused by the transmission.

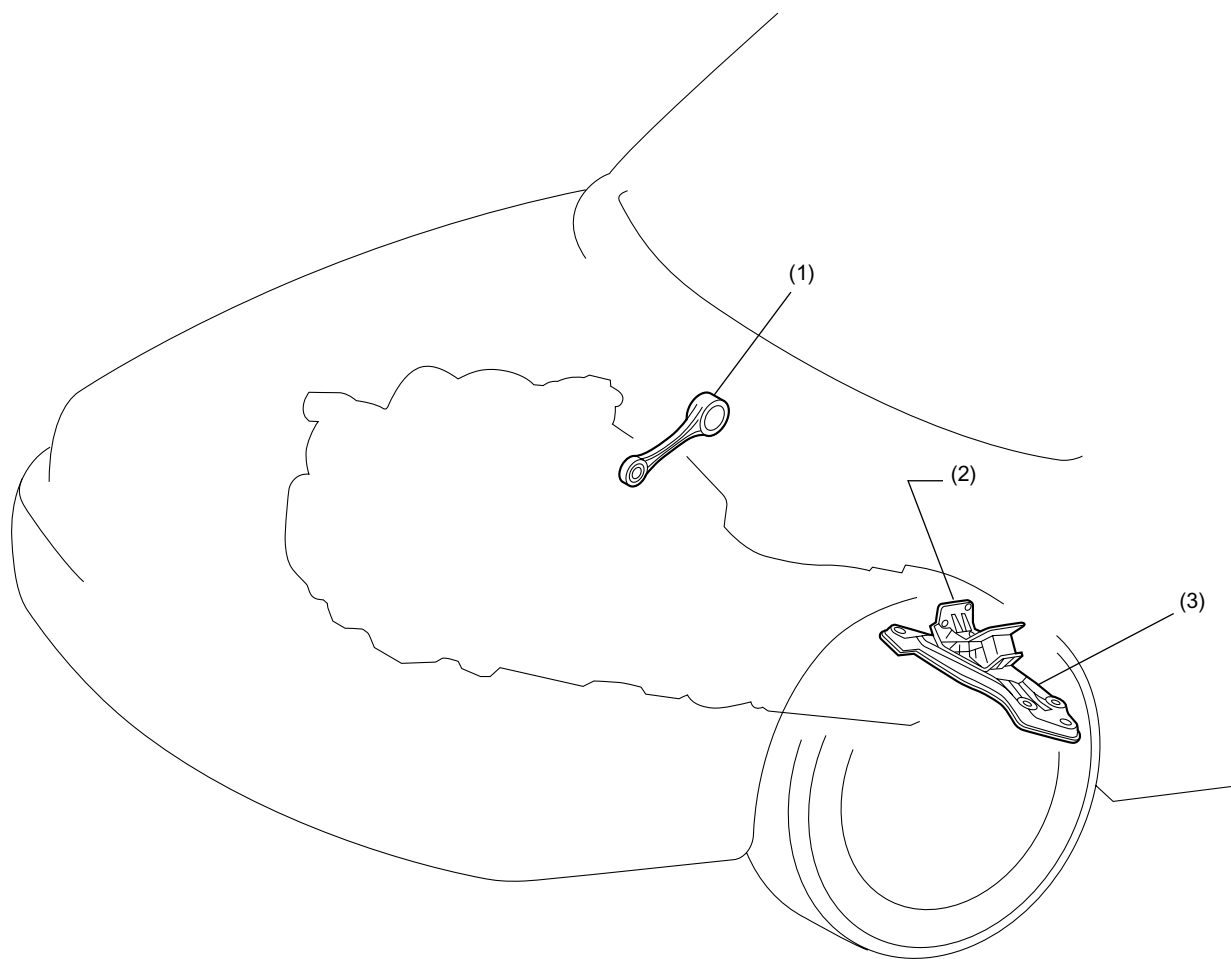

AT-00438

- (1) Pitching stopper
- (2) Cushion rubber
- (3) Cross member

4AT-111

## TRANSMISSION MOUNTING

AUTOMATIC TRANSMISSION

---

**MEMO**

**4AT-112**