

# **TRANSFER CASE**

## 1. General Description

### A: NOTE

For general description, refer to “4AT”, “5MT” or “6MT” section.

4AT model:

<Ref. to 4AT-2, General Description.>

5MT model:

<Ref. to 5MT-2, General Description.>

6MT model:

<Ref. to 6MT-2, General Description.>

## 2. Transfer Case and Extension Case Assembly

### A: NOTE

For removal, installation and inspection work, refer to "5MT" or "6MT" section.

5MT model:

<Ref. to 5MT-40, Transfer Case and Extension Case Assembly.>

6MT model:

<Ref. to 6MT-48, Extension Case.>

## 3. Transfer Clutch

### A: NOTE

For removal, installation and inspection work, refer to "4AT" section. <Ref. to 4AT-72, Transfer Clutch.>

## 4. Oil Seal

### A: NOTE

For removal, installation and inspection work, refer to "4AT", "5MT" or "6MT" section.

4AT model:

<Ref. to 4AT-46, Extension Case Oil Seal.>

5MT model:

<Ref. to 5MT-34, Oil Seal.>

6MT model:

<Ref. to 6MT-30, Oil Seal.>

## 5. Transfer Drive Gear

### A: NOTE

For removal, installation and inspection work, refer to "5MT" or "6MT" section.

5MT model:

<Ref. to 5MT-44, Transfer Drive Gear.>

6MT model:

<Ref. to 6MT-57, Transfer Drive Gear.>

## 6. Transfer Driven Gear

### A: NOTE

For removal, installation and inspection work, refer to "5MT" or "6MT" section.

5MT model:

<Ref. to 5MT-46, Transfer Driven Gear.>

6MT model:

<Ref. to 6MT-59, Transfer Driven Gear.>

## 7. Reduction Drive Gear

### A: NOTE

For removal, installation and inspection work, refer to "4AT" section. <Ref. to 4AT-82, Reduction Drive Gear.>



## 8. Reduction Driven Gear

### A: NOTE

For removal, installation and inspection work, refer to "4AT" section. <Ref. to 4AT-80, Reduction Driven Gear.>

## 9. Center Differential

### A: NOTE

For removal, installation and inspection work, refer to "4AT", "5MT" or "6MT" section.

4AT model:

<Ref. to 4AT-84, Center Differential Carrier.>

5MT model:

<Ref. to 5MT-48, Center Differential.>

6MT model:

<Ref. to 6MT-61, Center Differential.>

## 10. Transfer Clutch Pressure Test

### A: NOTE

For inspection work, refer to "4AT" section. <Ref. to 4AT-37, Transfer Clutch Pressure Test.>

# Transfer Clutch Pressure Test

TRANSFER CASE

---