


1. SRS Airbag

1. LHD MODEL

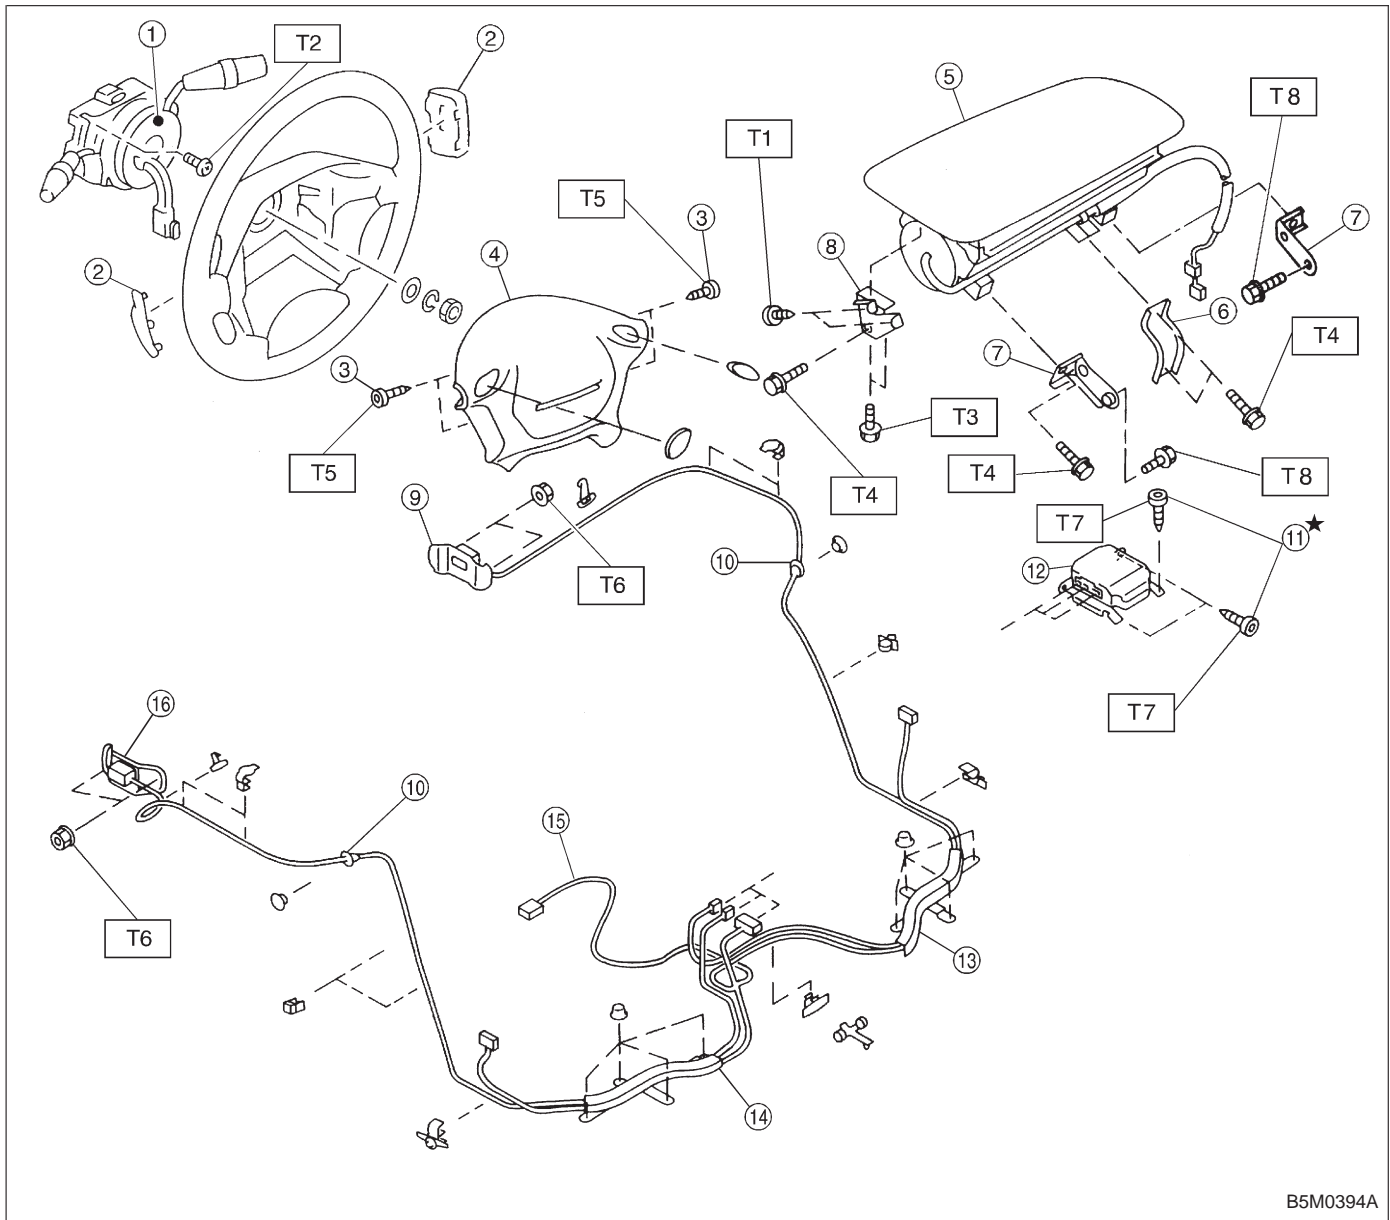


B5M0394A

- ① Combination switch ASSY with roll connector
- ② Cover
- ③ TORX® BIT bolt
- ④ Airbag module ASSY (Driver)
- ⑤ Airbag module ASSY (Passenger)
- ⑥ BRKT B
- ⑦ BRKT P AB
- ⑧ BRKT SD A
- ⑨ Front sensor ASSY RH
- ⑩ Grommet
- ⑪ TORX® BIT bolt
- ⑫ Airbag control module
- ⑬ Protector RH
- ⑭ Protector LH
- ⑮ Airbag main harness
- ⑯ Front sensor ASSY LH

**Tightening torque: N·m (kg·m, ft·lb)**

- T1: 1.8±0.5 (0.18±0.05, 1.3±0.4)
- T2: 2.5±0.5 (0.25±0.05, 1.8±0.4)
- T3: 4.4±1.5 (0.45±0.15, 3.3±1.1)
- T4: 7.4±0.5 (0.75±0.05, 5.4±0.4)
- T5: 10±2 (1.0±0.2, 7.2±1.4)
- T6: 20±4 (2.0±0.4, 14.5±2.9)
- T7: 24.5±6.9 (2.5±0.7, 18.1±5.1)
- T8: 32±10 (3.3±1.0, 23.9±7.2)

### 2. RHD MODEL

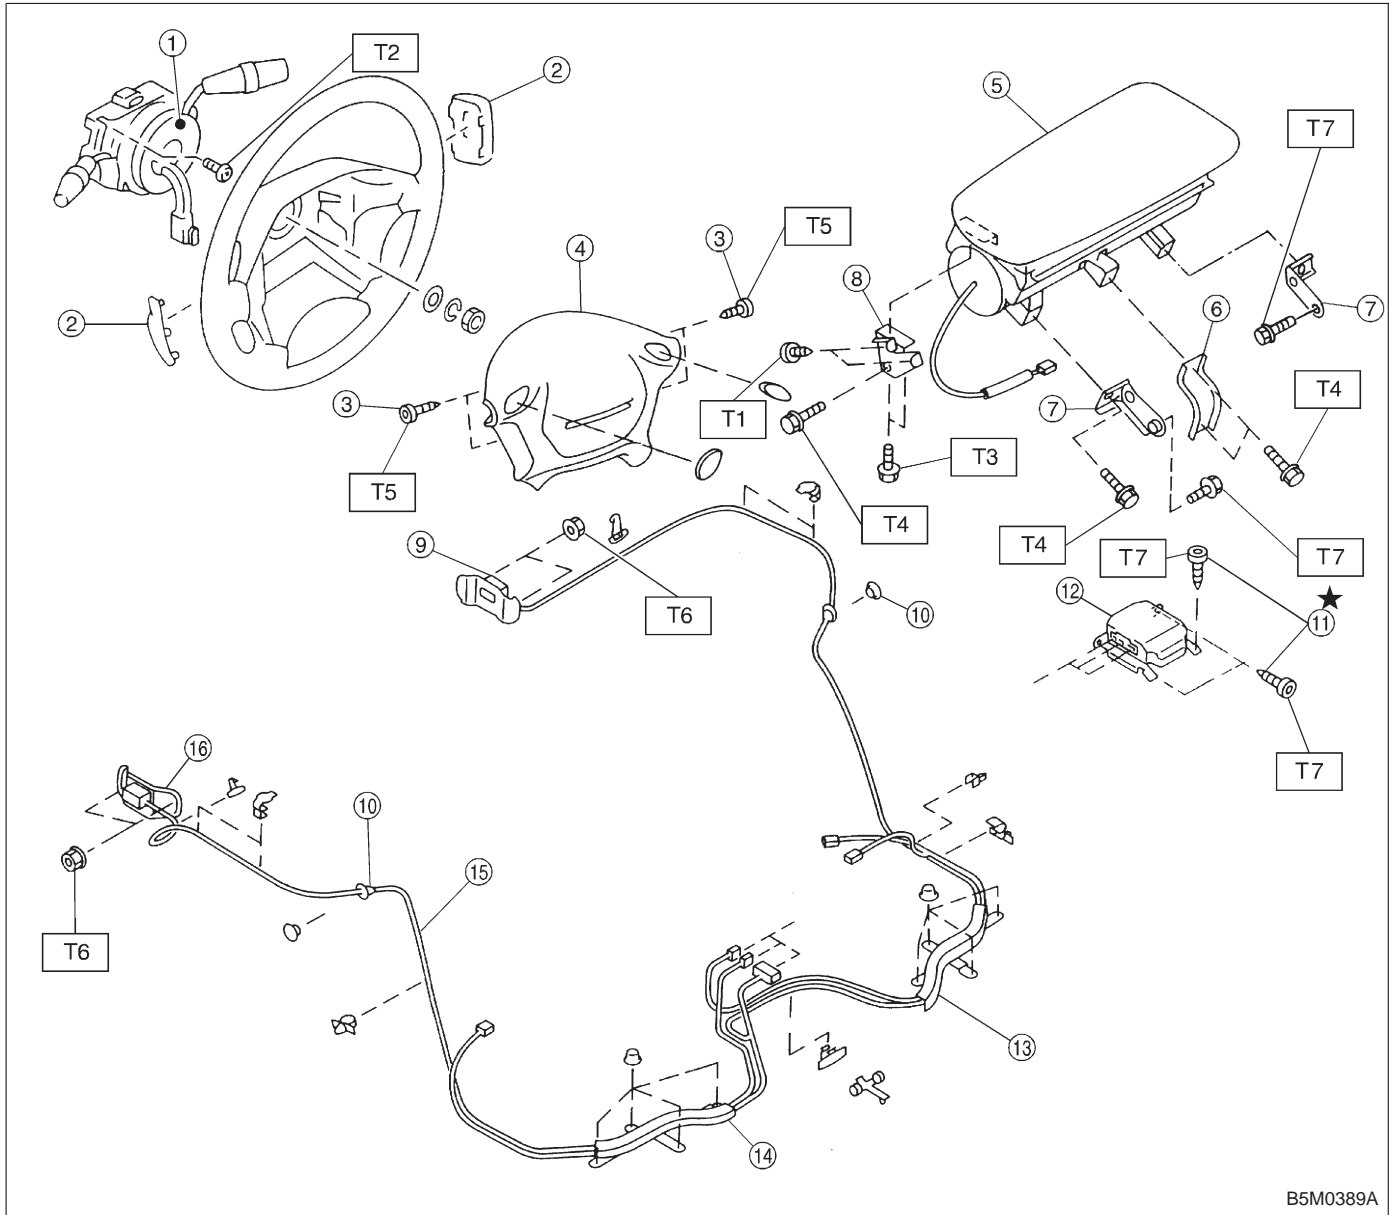

B5M0389A

- ① Combination switch ASSY with roll connector
- ② Cover
- ③ TORX® bolt
- ④ Airbag module ASSY (Driver)
- ⑤ Airbag module ASSY (Passenger)
- ⑥ BRKT B
- ⑦ BRKT P AB
- ⑧ BRKT SD A
- ⑨ Front sensor ASSY RH
- ⑩ Grommet
- ⑪ TORX® bolt
- ⑫ Airbag control module
- ⑬ Protector RH
- ⑭ Protector LH
- ⑮ Airbag main harness
- ⑯ Front sensor ASSY LH

**Tightening torque: N·m (kg·m, in·lb)**

**T1: 1.8±0.5 (0.18±0.05, 1.3±0.4)**

**T2: 2.5±0.5 (0.25±0.05, 1.8±0.4)**

**T3: 4.4±1.5 (0.45±0.15, 3.3±1.1)**

**T4: 7.4±0.5 (0.75±0.05, 5.4±0.4)**

**T5: 10±2 (1.0±0.2, 7.2±1.4)**

**T6: 20±4 (2.0±0.4, 14.5±2.9)**

**T7: 32±10 (3.3±1.0, 23.9±7.2)**