



17. Fuel Pump Relay

A: REMOVAL AND INSTALLATION

- 1) Disconnect battery ground cable.
- 2) Remove lower cover and then disconnect connectors.
- 3) Lower transmission control module.
- 4) Remove the front pillar lower trim.
<Ref. to 5-3 [W5A1].>
- 5) Remove fuse box mounting nuts.
- 6) Lower fuse box.
- 7) Remove fuse box mounting bracket.
- 8) Remove fuel pump relay from main relay and fuel pump relay mounting bracket.
- 9) Disconnect connector from fuel pump relay.
- 10) Installation is in the reverse order of removal.
 - ① Main relay
 - ② Fuel pump relay