
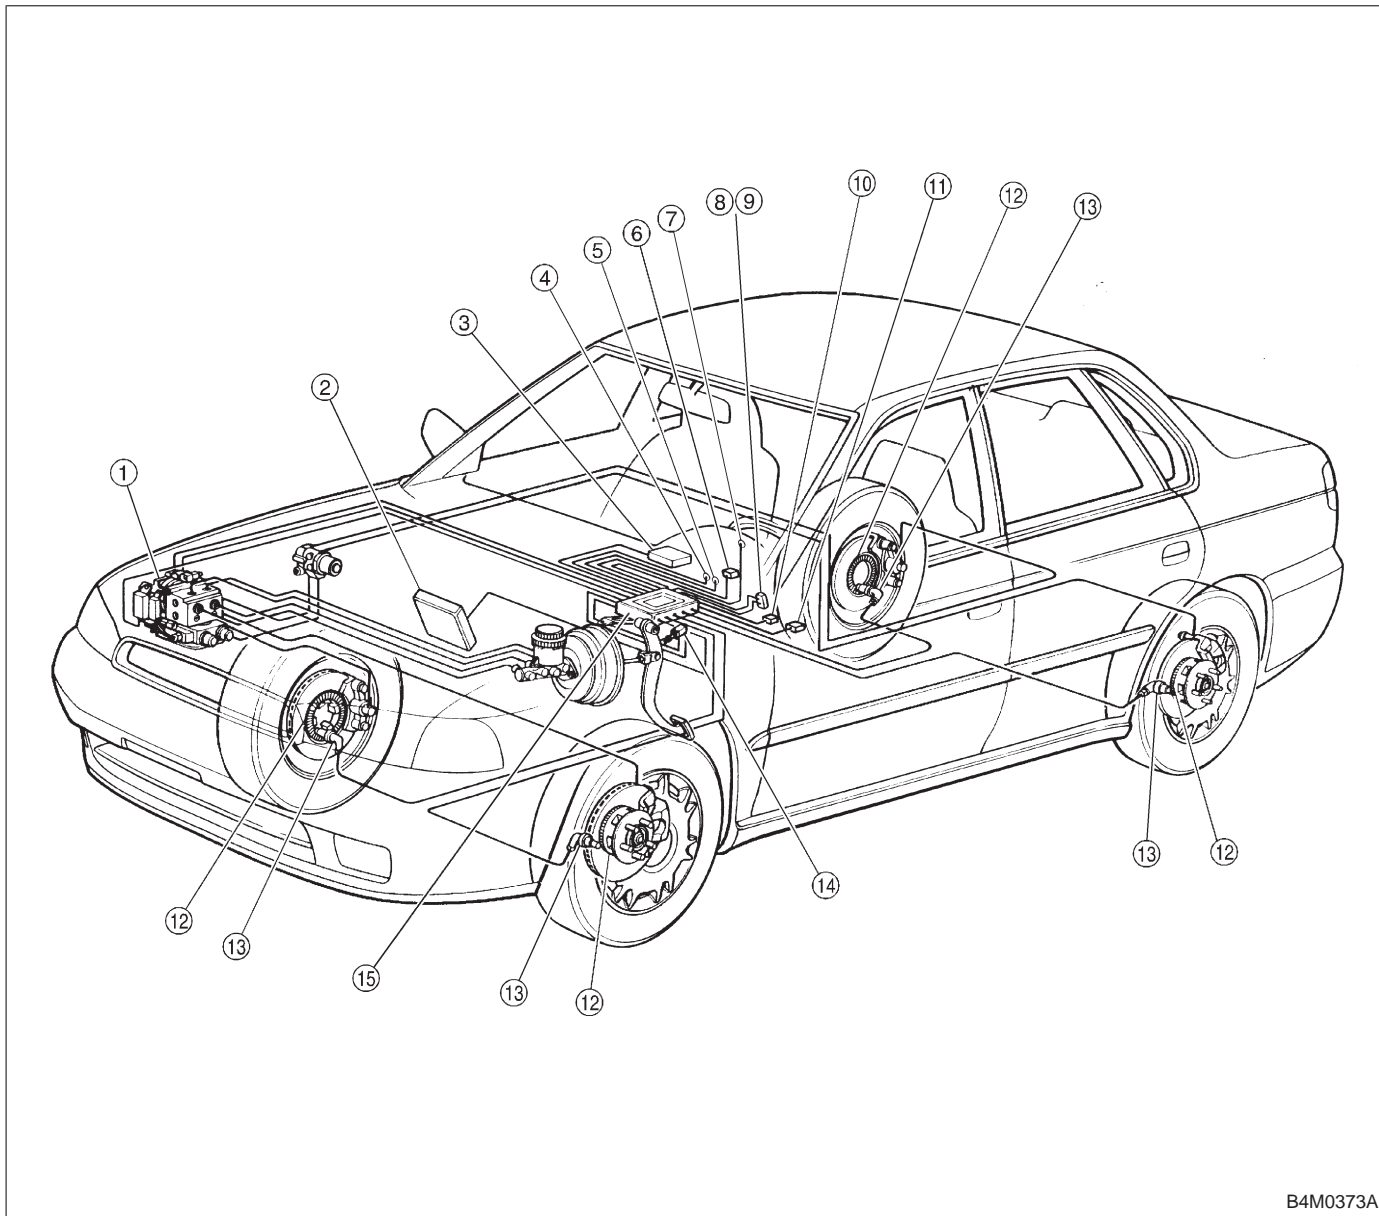
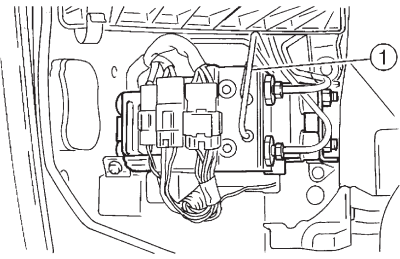
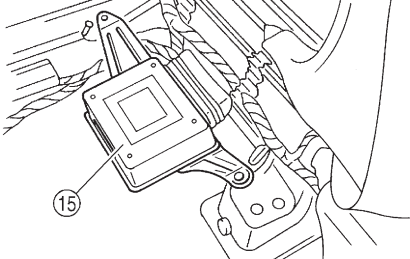
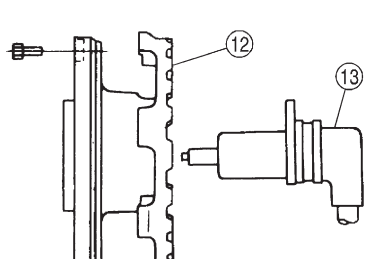
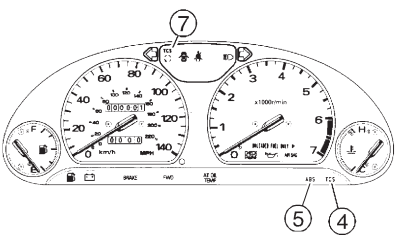
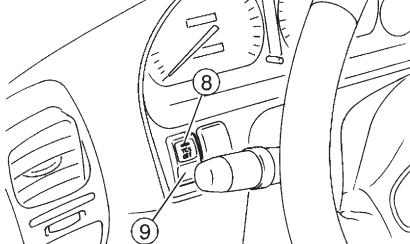
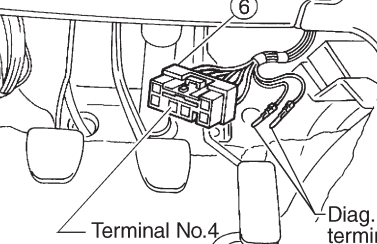
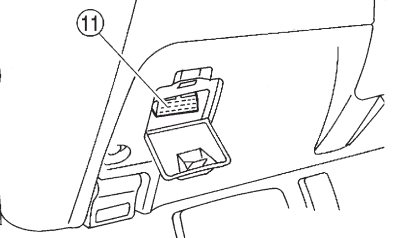


### 3. Electrical Components Location

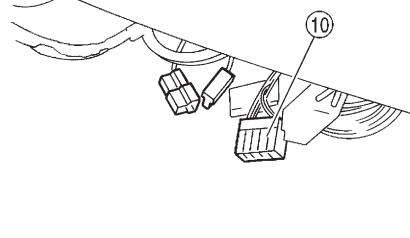

B4M0373A

- |                                 |  |
|---------------------------------|--|
| ① Hydraulic control unit        | ⑨ TCS OFF switch   |
| ② Engine control module         | ⑩ Data link connector (for Subaru select monitor)                              |
| ③ AT control module             | ⑪ Data link connector (for Subaru select monitor and OBD-II general scan tool) |
| ④ TCS warning light             | ⑫ Tone wheel   |
| ⑤ ABS warning light             | ⑬ ABS sensor   |
| ⑥ Diagnosis connector           | ⑭ Stroke sensor  |
| ⑦ TCS operating indicator light | ⑮ ABS/TCS control module   |
| ⑧ TCS OFF indicator light       |  |

 <p>B4M0374A</p>	 <p>B4M0376A</p>	 <p>B4M0646A</p>
 <p>B4M0377A</p>	 <p>B4M0379A</p>	 <p>B4M0378A</p>
 <p>B4M0375A</p>	 <p>B4M0645A</p>	<p>SUBARU.</p>