
Security system (if equipped)

The security system helps to protect your vehicle and valuables from theft. The horn sounds and the headlights flash if someone attempts to break into your vehicle. The starter motor is also interrupted to prevent starting the vehicle without a key.

■ System operation

The security system will give the following alarm:

- The headlights flash and the horn sounds intermittently. In addition, the starter motor will not operate.
- The alarm automatically turns off after 2 to 3 minutes; however, the alarm will reactivate if the vehicle is tampered with again.

The alarm is activated by:


- Opening the door, rear gate or trunk lid without using the key (even if the door is opened by releasing the inside door lock lever or opening the trunk lid by operating the trunk lid release).
- Opening the engine hood (even if the engine hood is opened by operating the engine hood release).
- Pushing in or pulling out of the key cylinder on the door or trunk lid.

■ How to arm the system

1. Remove the key from the ignition switch.
2. Make sure that the engine hood and trunk lid are locked.
3. Close all windows. Close and lock all doors and the rear gate. The doors and rear gate can be locked either with or without the key.

NOTE

The system can be armed even if the windows are open.

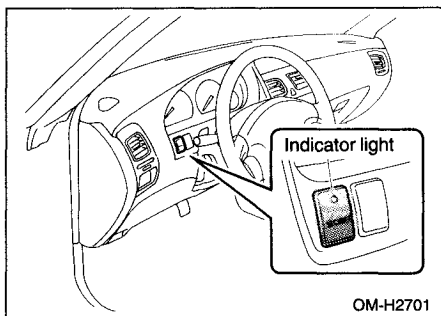

4. Confirm that the indicator light comes on. (If this light flashes rapidly, this may indicate that either the door, engine hood, rear gate or trunk lid is not properly closed. Resume the procedure from beginning.) The light will come on for about 30 seconds and then go out. If during this 30 seconds time period, the door is unlocked or the ignition key is turned to "ACC" or "ON", the system will not arm. Then the light flashes every 3 seconds to indicate that the system is fully armed. It continues to flash every 3 seconds until the system is disarmed.

NOTE

Even when the driver and/or passengers are in the vehicle, the system will arm with all doors, rear gate, hood and trunk lid locked and ignition key off. After the system has armed, the alarm will activate when a driver or passenger opens the door using the inside door handle.

■ To disarm the system

Unlock any door, rear gate or trunk lid with the key or turn the ignition switch to the "ACC" or "ON" position.


■ How to turn the alarm off

The alarm will stop only by unlocking a door, rear gate or trunk lid with the key. The alarm may not stop if the key is turned too quickly. In such a case, turn the key again more slowly. The alarm will not stop if the ignition switch is turned to "ACC" or "ON".

– CONTINUED –

If the system does not operate as described above, have it checked by your SUBARU dealer.

Windows

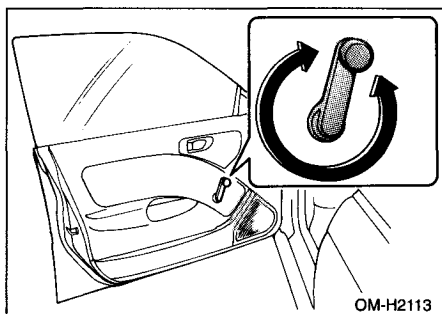

Turn the handle to open or close the window.

Power windows (if equipped)

WARNING

- When operating power windows, be extremely careful to prevent anyone's fingers or head from being caught in the window.
- Always lock the passengers' windows using the lock switch when children are riding in the vehicle.
- Before leaving the vehicle, always be sure to remove the key from the ignition switch for safety if a child remains in the vehicle. Failure to follow this procedure could result in injury to a child operating the power window.

The power windows operate only when the ignition switch is in the "ON" position.