



Combination meter overview

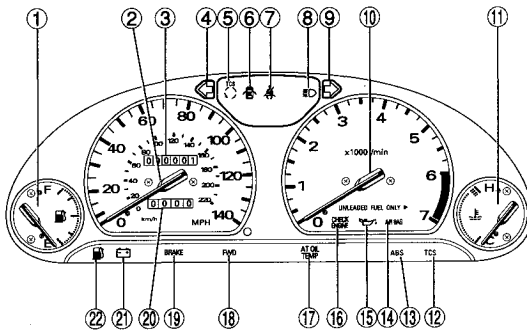

OM-H2415

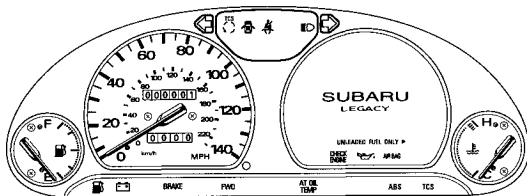

OM-H2416

- | | |
|---|---|
| ① Fuel gauge (page 3-5) | ⑩ ABS warning light (page 3-8) |
| ② Speedometer (page 3-4) | ⑪ SRS AIRBAG warning light (page 3-6) |
| ③ Odometer (page 3-4) | ⑫ Oil pressure warning light (page 3-7) |
| ④ Turn signal indicator light (page 3-10) | ⑬ CHECK ENGINE warning light/ Malfunction indicator lamp (page 3-8) |
| ⑤ TCS indicator light (page 3-9) | ⑭ AT oil temperature warning light (page 3-10) |
| ⑥ Door open warning light (page 3-10) | ⑮ Front-wheel drive warning light (page 3-10) |
| ⑦ Seatbelt warning light (page 3-6) | ⑯ Brake system warning light (page 3-7) |
| ⑧ High beam indicator light (page 3-10) | ⑰ Trip meter (page 3-4) |
| ⑨ Turn signal indicator light (page 3-9) | ⑱ Charge warning light (page 3-7) |
| ⑩ Tachometer (page 3-4) | ⑲ Low fuel warning light (page 3-10) |
| ⑪ Temperature gauge (page 3-5) | |
| ⑫ TCS warning light (page 3-9) | |