


Engine compartment overview

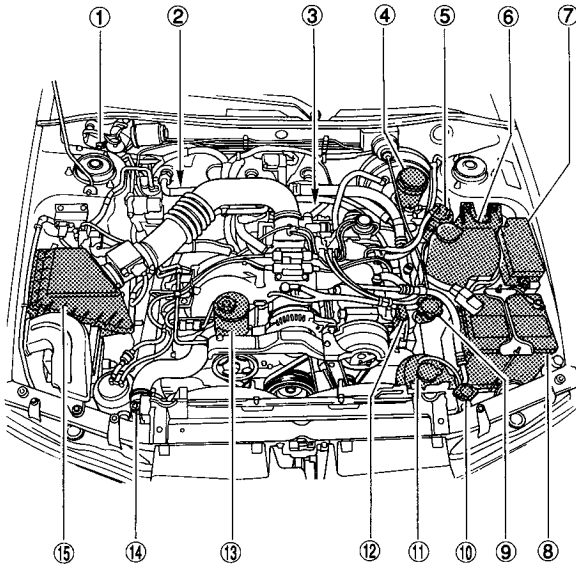

OM-H2456

- | | |
|--|---|
| ① FWD connector (page 8-13) | ⑧ Battery (page 10-30) |
| ② Manual transmission oil level gauge (MT) (page 10-18) or Differential gear oil level gauge (AT) (page 10-22) | ⑨ Engine oil filler cap (page 10-7) |
| ③ Automatic transmission fluid level gauge (page 10-20) | ⑩ Radiator cap (page 10-12) |
| ④ Brake fluid reservoir (page 10-28) | ⑪ Engine coolant reservoir (page 10-12) |
| ⑤ Fuel filter (page 10-31) | ⑫ Engine oil level gauge (page 10-7) |
| ⑥ Windshield washer tank (page 10-31) | ⑬ Power steering fluid reservoir (page 10-26) |
| ⑦ Fuse box (page 10-42) | ⑭ Air vent plug (Page 10-12) |
| | ⑮ Air cleaner (page 10-15) |