


## SAE viscosity No. and Applicable Temperature

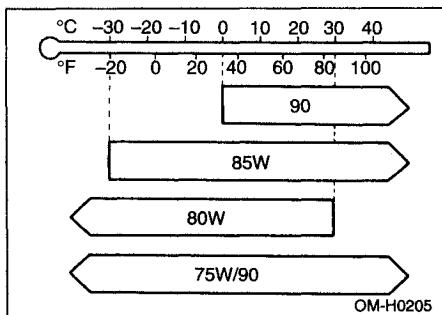

## Power steering fluid

### ■ Checking the fluid level

#### **⚠ WARNING**


Be careful not to burn yourself because the oil may be hot.

#### **⚠ CAUTION**

- When power steering fluid is being added, use only clean fluid, and be careful not to allow any dirt into the tank. And never use different brands together.
- Avoid spilling fluid when adding it in the tank.

Check the power steering fluid level monthly.

1. Drive the vehicle several miles to raise the temperature of the power steering fluid up to normal operating temperature, about 140°F (60°C).
2. Park the vehicle on a level surface, and stop the engine.
3. Turn the reservoir cap counterclockwise to remove the fluid level dipstick, wipe the dipstick clean, and reinsert it.

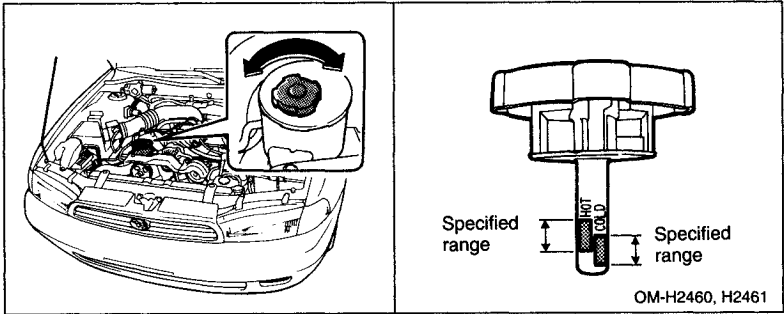

4. Remove the dipstick again and check the fluid level on it. If it is below the lower level on the "HOT" side, add the recommended steering fluid up to the specified range of the dipstick. If the fluid level is extreme low, it may indicate possible leakage. Consult your SUBARU dealer for inspection.

When the fluid level has to be checked without warming up the power steering system (approximately 70°F [21°C]), read the fluid level on the "COLD" side.

### ■ Recommended fluid

---

"Dexron II", "Dexron IIE" or "Dexron III" Type Automatic Transmission Fluid

---

### ■ Fluid capacity

---

0.7 US qt (0.7 liters, 0.6 Imp qt)

---