

4. Apply the regular brakes and then apply the parking brake; slowly release the regular brakes.
5. Shift into 1st or reverse gear (manual transmission) or "P" (automatic transmission) and shut off the engine.

Catalytic converter

To avoid damage to the catalytic converter:

Do not start the engine by pushing or pulling your vehicle.

Do not turn off the ignition switch while the vehicle is moving.